



Linear Actuators and Electronics User Manual

Contents

Preface	5
Valid for	6
Important information	7
General assembly instructions	11
Declaration of incorporation of partly completed machinery	12
1. System description	13
Electrostatic discharge (ESD)	14
Fundamental actuator construction	14
General Warranty periods	15
IP Protection degree	16
IPX6 Washable	16
Maintenance	17
Environmental conditions	17
Insulation class	18
Key to symbols	18
ETL marking	19
Mounting	19
Drawings	20
Connecting the system	26
Batteries	27
2. Information on start-up, de-installation and operation	29
Troubleshooting Actuators/Lifting columns	30
Troubleshooting Electronics	30
3. Information on specific actuators	31
LA20 Inline	31
LA22	32
LA23 DESKLINE®	32
LA23 MEDLINE® CARELINE® TECHLINE®	34
LA23 IC	44
LA27	48
LA28	51
LA28 Compact	52
LA29	52
LA30	53
LA31	54
LA32	57
LA34	58
LA40 HOMELINE®	60
LA40 MEDLINE® CARELINE®	61
LA43	64
LA43 IC	66
LA44	68
LA44 IC	71
4. Information on specific columns	72
BB3	72
BL1	72
BL4	78
LC2	81
LC3	81
LP2	90
LP3	100

5. Information on specific control boxes	101
General information	101
CA30 / CA40	102
CB6	105
CB6 OBMe	106
CB6P2	108
CB6S	109
CB7	111
CB8A	111
CB8-T	112
CB9 HOMELINE®	112
CB9 MEDLINE® CARELINE®	112
CB9 CARELINE® BASIC	114
CB12	114
CB14	115
CB16	115
CB20	117
CBR1	117
CO41	118
CO61	123
CO65	128
CO71	133
PJ2	138
6. Information on specific controls	142
ACC	142
ACK	142
ACL	143
ACM	143
ACO	143
ACOM	144
ACP	144
ACT	144
DPH Medical	147
FPP	147
FS	149
FS2	149
FS3	149
HB20	150
HB30	151
HB40	152
HB50	153
HB60	153
HB70	153
HB80	154
HD80	155
HD80 JUMBO	156
HL70	156
HL80	157
IRO	158
LS	158
LSD	158
7. Information on specific JUMBO	159
BAJ	159
BAJL Li-Ion	159
CBJ1 / CBJ2	161
CBJ-Care	163
CBJ-Home	166
COBO	167
COBO20	168
CH01	169
CHJ2	169
MBJ1/2/3	169

8. Information on specific accessories	170
General information	170
BA18	170
BA19 lead acid	170
BA21 Li-Ion	172
CCS	176
CS16	179
DJB	179
EBC	179
Massage Motor Medical	180
MJB	180
MJB8	181
Simulator tool	182
SLS	183
SMPS30	183
Under Bed Light	184
Under Bed Light 2	185
WET Sheet	185
QLC12	186
9. Repair and disposal	190
Addresses	192

Preface

Dear User,

We are delighted that you have chosen a LINAK® product.

LINAK systems are high-tech products based on many years of experience in the manufacture and development of actuators, electric control boxes, controls, batteries, accessories and chargers.

This User Manual does not address the end user. It is intended as a source of information for the equipment or system manufacturer only, and it will tell you how to install, use and maintain your LINAK electronics. The manufacturer of the end product has the responsibility to provide a User Manual where relevant safety information from this manual is passed on to the end user.

We are convinced that your LINAK system will give you many years of problem-free operation.

Before our products leave the factory they undergo full function and quality testing. Should you, nevertheless, experience problems with your systems, you are always welcome to contact your local dealer.

LINAK subsidiaries and some distributors situated all over the world have authorised service centres, which are always ready to help you.

LINAK provides a warranty on all products.

This warranty, however, is subject to correct use in accordance with the specifications, maintenance being done correctly and any repairs being carried out at a service centre, which is authorised to repair LINAK products.

Changes in installation and use of LINAK systems can affect their operation and durability. The products are only be opened by authorised personnel.

This User Manual has been written on the basis of the present technical knowledge. LINAK is constantly keeping the information updated and we therefore reserve the right to carry out technical modifications.

LINAK A/S

Valid for

This User Manual is valid for the following products:

Actuators:	LA20, LA23 MEDLINE® CARELINE®, LA23 IC, LA27, LA28, LA28 Compact, LA30, LA31, LA32, LA34, LA40 HOMELINE®, LA40 MEDLINE® CARELINE®, LA43, LA43 IC, LA44, LA44 IC
Columns:	BB3, BL1, BL4, LC2, LC3, LP2, LP3
Control boxes:	CA30, CA40, CB6, CB6 OBMe, CB6P2, CB6S, CB8A, CB8-T, CB9 HOMELINE®, CB9 MEDLINE® CARELINE®, CB9 CARELINE® Basic, CB12, CB14, CB16, CB20, CO41, CO61, CO71, PJ2
Controls:	ACC, ACK, ACL, ACM, ACO, ACOM, ACP, ACT, DP, DPH Medical, FPP, FS, FS2, FS3, HB20, HB30, HB40, HB50, HB60, HB70, HB80, HD80, HD80 JUMBO, HL70, HL80, IRO
JUMBO systems:	BAJ1, BAJL Li-Ion, CBJ1/2, CBJ Care, CBJ Home, COBO, COBO20, CH01, CHJ2, MBJ1/2/3
Accessories:	CCM, DJB, EBC, MJB, MJB8, SLS, SMP530, Under Bed Light, Under Bed Light 2, WET Sheet, QLC12
Batteries:	BA18, BA19, BA21

Important information

LINAK® products, within the scope of this manual, are not classified as medical electrical equipment or systems, nor do they fall within the scope of the EU Medical Device Directive/Regulation or other similar national regulations. The products are components to be built into a piece of medical electrical equipment by a manufacturer.

To support the assessment and certification task of the complete medical electrical equipment or system worldwide, LINAK provides certification, on a component level, according to the IEC 60601-1, (Medical electrical equipment – Part 1: General requirements for basic safety and essential performance) as IEC-certificate and listed as recognised components by NRTL (Nationally Recognized Testing Laboratories).

Description of the various signs used in this manual:



Warning

Failure to comply with these instructions may result in accidents involving serious personal injury.



Recommendation

Failing to follow these instructions can result in product damage.

Please read the following safety information carefully:

It is important for everyone who is to connect, install or use the systems to have the necessary information and access to this User Manual.

Please be aware that LINAK has taken precautions to ensure the safety of the actuator system. The manufacturer/OEM is responsible for the overall approval of the complete application.

LINAK recommends to use the actuators in push applications rather than pull applications.

LINAK actuators are **not** to be used for repeated dynamic push-to-pull movements.

For general pull applications or repeated dynamic push-to-pull movements in the application, please contact LINAK A/S if in doubt.

LINAK® actuators and electronics generally fall outside the IEC 60601-1 definition of applied parts and are not marked as such.

However, assessing the risk whether actuators and electronics can unintentionally come into contact with the patient, determines that they are subject to the requirements for applied parts. All the relevant requirements and tests of the standard are carried out as part of the IEC CB-Scheme assessment.

RF transmitter properties:

Some LINAK products emit RF-power by intention for communication purposes.

Frequency band of transmission: 2400 MHz – 2485 MHz.

Type: BLUETOOTH Low Energy BLE 4.2

Modulation: GFSK

Maximum Effective Radiated Power (ERP): 10 dBm

Output ratings:

Nominal values:

On LINAK control boxes, battery boxes and power supply marking plates, the nominal output voltage at a certain load for a certain product may be stated.

Depending on product and load, this value may vary significantly due to construction.

The expected output voltage may for instance vary depending on product and load within a range from approximately 20 V DC to approximately 50 V DC for a product with a nominal output voltage of 24 V DC due to the construction.

When combining LINAK control boxes, battery boxes and power supplies with other LINAK components, compatibility is ensured. When combining LINAK control boxes, battery boxes or power supplies with third party products, special precautions may be taken. In this case, contact LINAK.

Classification:

The equipment is not suitable for use in the presence of a flammable anesthetic mixture with air or with oxygen or nitrous oxide.

**Warning****Electromagnetic compatibility - general**

LINAK® actuator systems bear the CE marking as an attestation of compliance with the EMC Directive 2014/30/EU. The systems are designed to meet all requirements of applicable standards and have been tested to meet IEC 60601-1-2 requirements.

Emission:

LINAK Actuator Systems are CISPR 11, Group 1, Class B products, comply with IEC 61000-3-2, Class A and IEC 61000-3-3 unless stated otherwise in the relevant section of this document.

Immunity:

Test levels are according to Professional Healthcare Facility and Home Healthcare Facility Environment.

Electromagnetic phenomena are evaluated on a system level, with the actuator connected to a LINAK control box and accessories.

LINAK always recommends to perform verification tests on the final medical device.

**Warning****Electromagnetic compatibility – third party components**

Use of accessories, transducers and cables other than those specified by LINAK could result in increased electromagnetic emissions or decreased electromagnetic immunity of the actuator system and result in improper operation.

**Warning****Electromagnetic compatibility – interference with other equipment in general**

Use of the actuator system adjacent to or stacked with other equipment should be avoided as this could result in improper operation. If such use is necessary, the actuator system and the other equipment should be observed to verify that they are operating properly.

If the user notes unusual behavior of the actuator system, in particular if such behaviour is intermittent and associated with the standing right next to mobile phones, microwaves and radio broadcast masts, this could be an indication of electromagnetic interference.

If such behaviour occurs, try to move the actuator system further away from the interfering equipment.

**Warning****Electromagnetic compatibility – interference with other equipment, RF communications**

Portable RF communication equipment (including peripherals such as antenna cables and external antennas) should be used at a distance no closer than 30 cm (12 inches) to any part of the actuator system. This also applies to cables specified by the manufacturer. Otherwise, a performance degradation of this equipment could result.

**Warning****If the actuator or lifting column is used for pull in an application where personal injury can occur, the following is valid:**

The medical device manufacturer is responsible for the incorporation of a suitable safety arrangement, which will prevent personal injury from occurring in case of actuator failure.

**Warning**

Note that during construction of applications, in which the actuator is to be fitted, there must be no possibility of personal injury, for example the squeezing of fingers or arms.

**Warning**

The plastic parts in the system cannot tolerate cutting oil.

**Warning**

Assure free space for movement of the application in both directions to avoid a blockade.

**Warning**

The application and actuators are only to be operated by instructed personnel.

**Warning**

In applications with spline function, the blockage by an obstacle when the application is moving inwards, the removal of the obstacle will cause the load to drop until the spindle hits the nut.

**Warning**

Do not turn the outer tube.

**Warning**

Do not use chemicals.

**Warning**

Inspect the actuator system regularly for damage and wear.

**Warning**

Do not expose LINAK actuator system components to high intensity ultraviolet radiation disinfection lamps. This may damage the enclosure, supporting parts and cables.

**Warnings**

LINAK® actuators and electronics are not designed for use within the following fields:

- Planes and other aircrafts
- Explosive environments
- Nuclear power generation

**Warning**

If faults are observed, the products must be replaced.

**Warning**

A LINAK control box, actuator and accessory component must, in the final application, be placed where it is not exposed to any impact. This is to prevent damage if a passer-by accidentally hits it with an object or when cleaning the floor with a broom or a mop. On a medical bed e.g. this might be underneath the mattress support platform. If necessary to mitigate this risk, additional protection might be required.

**Warning**

Handle batteries carefully. Do not short circuit the battery.

**Warning**

Avoid continuous battery discharge when the medical device is not in use, as this may cause lead sulphate formation, which, if left in this state for too long, will irreversibly damage the battery.

**Warning**

To avoid unintended movement, prevent foreign objects or persons from unintentionally activating a footswitch or a hand control at any time, for instance during normal use or maintenance.

**Warning**

LINAK battery packs may emit flammable gases. Do not expose the battery packs to fire or equipment that emits sparks. Moreover, do not store the battery in a closed environment or incorporate it into a closed structure of an enclosure as this may cause an explosion, fire, equipment damage, or injury.

**Warning**

Handle tools carefully and do not wear jewelry when handling batteries. A short-circuit of the battery terminals can cause burn injuries, damage or trigger explosions.

**Warning**

Only connect LINAK batteries to compatible chargers.

**Warning**

LINAK battery packs contain toxic substances. If the internal battery fluid leaks out and gets onto skin or clothing, make sure it is washed off with clean water. Moreover, if the fluid gets into the eyes, rinse them immediately with clean water and seek medical assistance.

**Warning**

Do not use or store LINAK battery packs in places where the ambient temperature exceeds 50 °C, such as inside a hot automobile, in direct sunlight, or in front of a stove or a source of intense heat. Doing so can shorten the battery life, lower its performance level, cause the battery to leak fluid, explode, cause fire, or be damaged.



Recommendation

The duty cycle printed on the actuator system label must always be respected. If exceeded, there is a risk that the actuator system is damaged. Unless otherwise specified on the label, the duty cycle is max. 10%, max. 2 min. in use followed by 18 min. not in use.



Recommendation

Important information regarding lithium ion batteries

Li-ion batteries are moving in the direction of minimising the physical size and at the same time increasing the capacity. This gives a very size-effective battery but with a high concentration of energy within a small physical size. It also increases the risk of thermal runaway (see note below) due to internal short circuits.

The general use of Li-ion batteries has increased and the inherent risk of thermal runaway has led to stricter rules within the transport industry, specifically air transport, with tightened restrictions placed on the quantity to be transported and handled, and on the storage of specific products moving via air.

The OEMs and end users must recognise that although safe to use, there is still a very small risk of thermal runaway in a Li-Ion cell. The size of that risk could be as little as 1PPM or even less.

LINAK® currently bases our Li-Ion battery design on industry proven cell types that have a proven history (e.g. electric cars). The use of well-proven cell technology reduces the risk of thermal runaway, but it does not eliminate it. LINAK has completed activities to reduce this risk and the complete battery package is UL approved.

An external, internationally recognised expert has also reviewed the design to ensure that it is in accordance with the recommendations. Further to that, LINAK only uses cells from well-recognised manufacturers.

When using Li-Ion batteries, LINAK recommends that the customer carries out a proper risk analysis for their application. The risk analysis must also focus on non-mounted products that can be in direct contact with flammable materials.

LINAK Li-Ion batteries have no more risk of thermal runaway compared to other Li-Ion cells from well-recognised manufacturers within the market. Therefore, it is clear that LINAK cannot take responsibility for any failures that occur due to Li-Ion battery inherent failures.

If any of the Li-Ion batteries built into LINAK products is found to be defective under warranty, LINAK will provide a new product to the OEM. LINAK explicitly disclaims all other remedies. LINAK shall not in any event be liable under any circumstances for any special indirect punitive incidental or consequential damages or losses arising from any incident related to the inherent risk of thermal runaway in the Li-Ion cell and any use of LINAK products. Moreover, LINAK explicitly disclaims lost profits, failure to realise expected savings, any claim against our customers by a third party, or any other commercial or economic losses of any kind, even if LINAK has been advised of the possibility of such damages or losses.

Note: *'Thermal runaway' is overheating of a cell and it could lead to a small fire and smoke from the cell.*

Transportation

The lithium ion batteries must be packed and transported in accordance with applicable regulations. Always ask your local transportation provider how to handle the transportation of lithium ion batteries.

Please see the general assembly instructions and the mounting section for detailed information.

General assembly instructions

Please read the following safety information carefully. Ensure that all staff who are to connect, mount, or use the actuator system are in possession of the necessary information and that they have access to these assembly instructions.

Persons who do not have the necessary experience or knowledge of the product/products should not use the product/products. Moreover, persons with reduced physical or mental abilities must not use the product/products, unless they are under surveillance or they have been thoroughly instructed in the use of the equipment by a person who is responsible for the safety of these persons. Moreover, children must be under surveillance to ensure that they do not play with the product.



Warnings

Failure to comply with these instructions may result in accidents involving serious personal injury.

- If there is visible damage on the product it should not be installed.
- If the actuator system makes unusual noise or smells, switch off the mains voltage immediately.
- The products must only be used in an environment that corresponds to their IP protection class.
- The cleaners and disinfectants must not be highly alkaline or acidic (pH value 6-8).
- Irrespectively of the load, the duty cycle stated on the product label must NOT be exceeded.
- The control box must only be connected to the voltage stated on the label.
- Systems not specified for pull must only be used in push applications.
- Fastening screws and bolts must be tightened correctly.
- Specifications on the product label must under no circumstances be exceeded.
- NOT TO BE OPENED BY UNAUTHORISED PERSONS.
- Only use the actuator within specified working limits.
- Be aware that during the design of medical devices, the risk of personal injury (for instance squeezing of fingers or arms) must be minimised.
- If irregularities are observed, the actuator must be replaced.



Failing to follow these instructions may result in actuator system damage:

- Prior to assembly/disassembly, ensure that the following points are observed:
 - The actuator system is not in operation.
 - The mains current supply is switched off and the plug has been pulled out.
 - Actuators are free from loads that could be released during this work.
- Prior to operating the actuator system, check the following:
 - Actuator system components are correctly mounted as indicated in the relevant user instructions.
 - The equipment can be operated in its entire intended range of movement.
 - Ensure that the load-supporting bolts can withstand the wear.
 - Ensure that the load-supporting bolts are secured safely.
- During operation:
 - Listen for unusual sounds and watch out for uneven movement. Stop the actuator system immediately if anything unusual is observed.
 - Do not sideload the actuator.
 - Do not step on or kick the actuator.
- When the equipment is not in use:
 - Switch off the mains supply or pull out the plug in order to prevent unintentional operation.
- Note:
 - When changing the cables on a LINAK actuator system, it is important that this is done carefully in order to protect the plugs and pins. Please ensure that the plug is in the right location and properly inserted before the cable lid is mounted.

DECLARATION OF INCORPORATION OF PARTLY COMPLETED MACHINERY

LINAK A/S
Smedevænget 8
DK - 6430 Nordborg

Herewith declares that **LINAK DESKLINE®** products as characterised by the following models and types:

Control Boxes	CBD6S
Linear Actuators	DB5, DB6, DB14, LA23, LA31
Lifting Columns	DL1A, DL2, DL4S, DL5, DL5IC, DL6, DL6IC, DL7, DL8, DL8IC, DL9, DL9IC, DL10, DL10IC, DL11, DL11IC, DL12, DL14, DL15, DL16, DL16IC, DL17, DL19, DL19IC, BASE1
Desk Panels	DPA, DPB, DPH, DPF, DPG, DPT, DP, DP1CS
RF Controls	HB10RF, HB20RF, RFRL
Accessories	BA001, BLE2LIN, DS1, DF2, Kick & Click, SLS, SMPS001, SMPS002, SMPS006

Herewith declares that **LINAK HOMELINE®** products as characterised by the following models and types:

Control Boxes	CB9H, CBH Advanced, CBH Basic
Linear Actuators	LA10, LA18, LA27, LA29, LA31 HOMELINE, LA40 HOMELINE
Dual Actuators	TD3, TD4, TD5
Controls	HB10, HB10 Wireless, HB40, HB60, HC05 Wireless, HC10 Wireless, HC20 Wireless, HC30 Wireless
Accessories	BLE2LIN, DC CONNECTOR, LED Lightbox, LED Light Rail, Lightplug001, Massage Motor, SMPS001, SMPS002, SMPS006

Herewith declares that **LINAK MEDLINE® & CARELINE®** products as characterised by the following models and types:

Control Boxes	CA30, CA40, CB6, CB6S, CB6OBMe, CB6P2, CB8, CB9, CB12, CB14, CB16, CB20, CBJ, CBJ Care, CBJ Home, CO41, CO61, CO65, CO71, PJ2
Linear Actuators	LA12, LA20, LA22, LA23, LA27, LA28, LA29, LA30, LA31 MEDLINE CARELINE, LA32, LA34, LA40 MEDLINE CARELINE, LA43, LA43IC, LA44, LA44IC
Lifting Columns	BL1, LP2, LP3, LC2, LC3
Controls	ACC, ACK, ACO, ACOM, ACL, ACM, ACP, ACT, DP, DPH, FS, FS3, FPP, HB20, HB30, HB40, HB50, HB70, HB80, HB100, HD80, HL70, HL80, IRO
Accessories	BA18, BA19, BA21, BAJ, BAJL, CCM, CH01, CHJ2, COBO, DJB, EBC, IRO, MJB, MJB8, SMPS19, SMPS30, SCO, SLS, Massage Motor, QLCI, QLCI2, UBL2, WET

Herewith declares that **LINAK TECHLINE®** products as characterised by the following models and types:

Linear Actuators	LA12, LA14, LA22, LA23, LA25, LA30, LA33, LA35, LA36, LA37
Power Supply	SMPS-T160
Accessories	CS16, FMB, LSD

comply with the following parts of the Machinery Directive 2006/42/EC, ANNEX I, Essential health and safety requirements relating to the design and construction of machinery:

1.5.1 Electricity supply

The relevant technical documentation is compiled in accordance with part B of Annex VII and that this documentation or part hereof will be transmitted by post or electronically to a reasoned request by the national authorities.

This partly completed machinery must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the Machinery Directive 2006/42/EC where appropriate.

Nordborg, 2019-05-27



LINAK A/S
John Kling, B.Sc.E.E.
Certification and Regulatory Affairs
Authorized to compile the relevant technical documentation

1. System description:


Usage/type of applications:

LINAK® actuators, lifting columns and electronics have been developed for use in all places where a linear movement is required.

LINAK products can for example be used for:

- Adjustment of beds
- Patient hoists within the care and hospital sector
- Adjustment of dentist chairs/gynaecological chairs
- Etc.

The principles of a LINAK system are as follows:

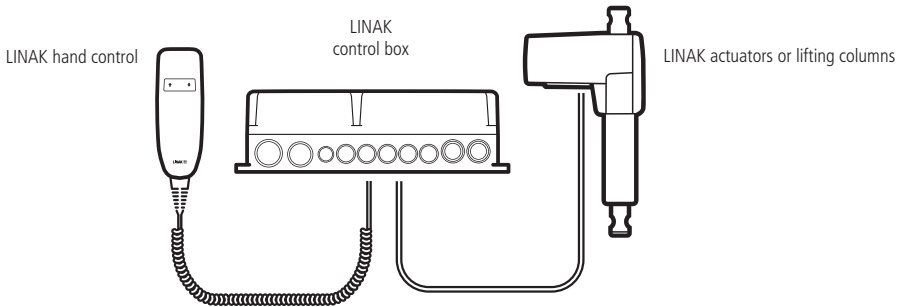

Attention should be paid to the following:

- All detachable connections between components must be locked by the cable locking mechanism - when applicable.
- All cables must be mounted in such a way that they are not trapped or exposed to tension or sharp objects when the application is moved in different directions.



Recommendation

It is recommended to have options like quick release, manual lowering or similar built into the system in case of power loss or system failure or if movement of the system is critical. After service it is recommended to test the system for correct functionality before it is put back into operation.

Electrostatic discharge (ESD)

LINAK® considers ESD to be an important issue and years of experience have shown that equipment designed to meet the levels specified in standards might be insufficient to protect electronic equipment in certain environments.

1. Handling and mounting electrostatic discharge sensitive devices (ESDS devices).

- Handling of sensitive components shall only take place in an ESD Protected Area (EPA) under protected and controlled conditions.
- Wrist straps and/or conductive footwear (personal grounding) shall always be used when handling ESDS devices.
- Sensitive devices shall be protected outside the EPA by the use of ESD protective packaging.

2. Responsibility LINAK/customer.


- ESDS devices must under no circumstances, during transport, storage, handling, production or mounting in an application, be exposed to harmful ESD.
- LINAK can only guarantee the lifetime of ESDS devices if they are handled in the same way from production at LINAK A/S until they are mounted in the manufacturer's application. It is therefore important that the ESDS devices are not removed from the ESD protected packaging before they are physically within the EPA area at the customer premises.

Please refer to EN61340 for further information:

EN61340-5-1, Electrostatics - Protection of electronic devices from electrostatic phenomena - General requirements

EN61340-5-2, Electrostatics - Protection of electronic devices from electrostatic phenomena - User guide

Fundamental actuator construction

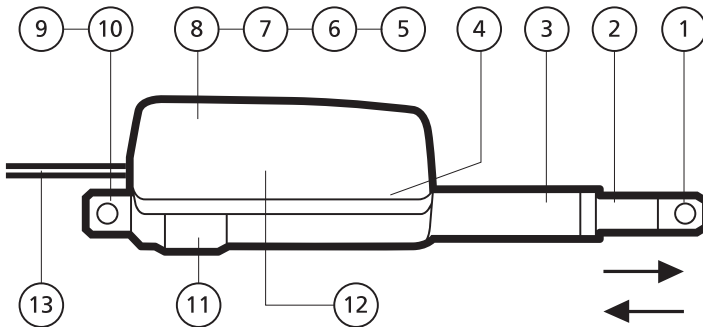

1. Piston rod eye

2. Piston rod

3. Location of mechanical splines

4. Location of brake

5. Motor

6. Motor with optical switch

7. Motor with potentiometer

8. Motor with reed-switch

9. Back fixture

10. Back fixture with electrical splines

11. Quick release mechanism

12. Transmission between motor and spindle

13. Cable for connection to DC by means of plug via control box

General Warranty periods

These are general warranty periods. Some segments may have special warranty agreements depending on application types. Ex. TECHLINE solar applications. And some customers have Quality agreements with LINAK. These are to be handled accordantly.

MEDLINE® and CARELINE®:

LINAK® provides 5 years (60 months) warranty on MEDLINE and CARELINE products used in beds and medical applications. If MEDLINE® and CARELINE® products are used in other applications, they will be covered by 1½ years (18 months) warranty.

Batteries are covered by a specific product warranty of 12 months.

HOMELINE®:

LINAK® provides 3 years (36 months) warranty on HOMELINE actuator systems used in comfort furniture. If these products are used in other applications, they will be covered by 1½ years (18 months) warranty.

Batteries are covered by a specific product warranty of 12 months.

DESKLINE®:

LINAK® provides 5 years (60 months) warranty on all DESKLINE® products produced after 01.05.2015. Products produced before 01.05.2015 will still have a 36 months warranty.

If these products are used in other applications, they will be covered by 1½ years (18 months) warranty.

Batteries are covered by a specific product warranty of 12 months.

TECHLINE®:

LINAK® provides 1½ years (18 months) warranty on TECHLINE products.

Batteries are covered by a specific product warranty of 12 months.

General information:

External products that are not manufactured by LINAK A/S:

12 months are added to the warranty period, for instance for transportation and stocking. Relabelling of these products only takes place, if the production date exceeds one year from the date of dispatch to the customer.

If there is any doubt whether returned products are covered by the warranty, they are covered by the warranty.

Please use the date of the control box or actuator as reference, if possible.

Subsidiaries are allowed to offer additional warranty periods.

IP Protection degree

The products can be cleaned as described in the following according to their IP protection stated on the product label.

The IP code specifies the protection degree provided by the enclosures. For most products, only the protection against ingress of water (second characteristic numeral) is specified, ingress of solid foreign objects or dust (first characteristic numeral) is not specified and therefore replaced by the letter X in the code.

IP protection	Cleaning instructions
IPX0	Clean with a damp cloth
IPX1	Clean with a damp cloth
IPX2	Clean with a damp cloth
IPX3	Clean with a damp cloth
IPX4	Clean with a damp cloth
IPX5	Wash with a brush and water, but not water under pressure
IPX6	Wash with a brush and water. The water can be under pressure, but the system must not be cleaned directly with a high pressure cleaner. Max. 20 °C
IPX6 Washable according to IEC 60601-2-52	Clean by the use of wash tunnels according to IEC 60601-2-52
IPX6 Washable DURA™	Clean by the use of wash tunnels according to IEC 60601-2-52, extended washing cycle test

To avoid degreasing of the piston rod, the actuator should be retracted to minimum stroke and without load before washing.



Warning

The systems must not be sprayed directly with a high pressure cleaner.



Warning

Interconnecting cables must remain plugged in during cleaning to prevent water ingress.



Warning

Cleaning with a steam cleaner is not permitted.

IPX6 Washable

The LINAK understanding of the word 'washable' is that the products conform to the following and none other:

Reference: The standard IEC 60601-2-52, cl. 201.11.6.6.101.
The demands for the washing process are described in the German '*Maschinelle Dekontamination*' from the organisation AK-BWA.

Water: Hardness degree is no more than 5° dH and no demineralised water.

Detergents: LINAK recommends the following products:

- Sekumatic FDR or FRE from Ecolab
- Neodisher Dekonta from Dr. Weigert
- Thermosept NDR from Schülke or similar with a pH-value of 5 - 8 and in a concentration of 0.5 %

Rinsing aids: LINAK recommends the following products:

- Sekumatic FKN from Ecolab
- Neodisher BP or TN from Dr. Weigert
- Thermosept BSK from Schülke or similar with a pH-value of 5 - 8 and in a concentration of 0.2 %.

Demands to chemicals:

- They must not contain caustic solutions
- They must not change the surface structure or adhesive properties of the plastic
- Must not deteriorate grease

Maintenance

Valid for all LINAK products

- LINAK® products must be cleaned at regular intervals
- Inspect for malfunction, mechanical damage, wear and cracks. Worn-out parts must be replaced
- Inspection/maintenance intervals may be defined by the medical device manufacturer
- LINAK products are closed units and require no internal maintenance
- Only type IPX6, IPX6 Washable and IPX6 Washable DURA™ are waterproof
- LINAK products must be IPX6 Washable and IPX6 Washable DURA™ when cleaning in wash tunnels
- **O-rings:** When individual parts are replaced in a LINAK IPX6, IPX6 Washable or IPX6 Washable DURA™ system, the O-rings must be replaced at the same time on all parts
On control boxes with a replaceable mains fuse, the O-ring in the fuse cover must be replaced every time the cover has been removed
The O-rings must be greased in water-free Vaseline when replacing them. Make sure that the counterpart - the socket - is clean and undamaged

Valid for all LINAK actuators and lifting columns

- Actuators/lifting columns must be inspected at attachment points, wires, piston rod, enclosure, and plugs, and it must be checked that the actuators/lifting columns function correctly
- To ensure that the pregreased inner tube remain lubricated, the actuator must only be washed when the piston rod is fully retracted

Valid for all LINAK control boxes and hand controls

- Electronics must be inspected at attachment points, wires, enclosure, and plugs
- Inspect the connections, cables, enclosure, and plugs, and check for correct functioning
- The control box is sealed and maintenance-free

Environmental conditions

Operating, storage and transport	
Operating Temperature Relative humidity Atmospheric pressure	5 °C to 40 °C 20% to 90% at 30 °C – not condensing 700 to 1060 hPa (Rated to be operated at an altitude ≤ 3000 m)
Storage Temperature Relative humidity Atmospheric pressure	-10 °C to +50 °C 20% to 90% at 30 °C – not condensing 700 to 1060 hPa (Rated to be stored at an altitude ≤ 3000 m)
Transport Temperature Relative humidity Atmospheric pressure	-10 °C to +50 °C 20% to 90% at 30 °C – not condensing 700 to 1060 hPa (Rated to be transported at an altitude ≤ 3000 m)
If the actuator is assembled in the application and is exposed to push or pull during transportation, the actuator can be damaged. Do not drop an actuator or otherwise damage the housing during disassembly or transportation. We do not recommend to use an actuator which has been damaged.	







 




Valid if nothing otherwise is stated under the specific products in a later section.










Insulation class

LINAK® control boxes are available in insulation class 1 and insulation class 2.

Key to symbols

The following symbols are used on the LINAK product labels:

	IEC 60417-5172: Class II equipment
	Product with a thermofuse
	IEC 60417-5957: For indoor use only
	IEC 60417-5222: Safety isolating transformer, general
	IEC 60417-5840: Patient part of type B
	IEC 60417-5019: Protective earth; protective ground
	IEC 60417-5002: Positioning of cell
	ISO 7000-0434A: Caution, consult accompanying document
	ISO 7000-1641 Operating instructions
	Electronics scrap
	Electronics scrap

	Recycle
	Recognised Component mark for Canada and the United States
	PSE mark
	Compliance to all relevant EC directives
	China Pollution control mark (also indicates recyclability)
	Regulatory compliance mark: The Australian Safety/EMC Regulations
	Alternating current
	Direct current
	Reduced ETL recognised component mark for Canada and the United States. X: The mark is always accompanied by a control number of 6 or 7 figures. For complete description, see ETL marking on next page.

ETL marking

Due to space limitations, the complete ETL marking demands are not represented on the marking plates.

The full ETL recognised component markings are shown here:



C/N 120690

Conforms to ANSI/AAMI Std. E560601-1
Cert. to CSA Std. C22.2 No. 60601-1



C/N 4008004

Conforms to ANSI/AAMI Std. E560601-1
Cert. to CSA Std. C22.2 No. 60601-1



C/N 4008838

Conforms to ANSI/AAMI Std. E560601-1
Cert. to CSA Std. C22.2 No. 60601-1



C/N 9901916

Conforms to ANSI/AAMI Std. E560601-1
Cert. to CSA Std. C22.2 No. 60601-1



C/N 4008005

Conforms to ANSI/AAMI Std. E560601-1
Cert. to CSA Std. C22.2 No. 60601-1



C/N 4008671

Conforms to ANSI/AAMI Std. E560601-1
Cert. to CSA Std. C22.2 No. 60601-1



C/N 4008003

Conforms to ANSI/AAMI Std. E560601-1
Cert. to CSA Std. C22.2 No. 60601-1



C/N 4008623

Conforms to ANSI/AAMI Std. E560601-1
Cert. to CSA Std. C22.2 No. 60601-1



C/N 4009507

Conforms to ANSI/AAMI Std. E560601-1
Cert. to CSA Std. C22.2 No. 60601-1

Mounting

Actuator:

Do not use any other screws for the mounting brackets than those recommended by LINAK®. If longer screws are used, they will come into contact with the inner parts of the actuator. This will result in an irregular operation or even damage the actuator.

During mounting, the actuator must always be:

- Fixed to protect it against torque and bending. **See Figure 2 on the next page.**
- Fixed so that it is restrained, but free to move on its mountings. **See Figure 3 on the next page.**
- Fixed in brackets, which can take up the torque reaction. **See Figure 3 on the next page.**
- Mounted at right angles so that the right angle requirement is observed. **See Figure 4 on the next page.**
- Mounted with correct bolt dimension.
- Mounted with bolts and nuts made of high quality steel grade (for example 10.8). No thread on bolts inside the back fixture or the piston rod eye.
- Bolts and nuts must be protected from being able to fall out.
- Inspect the actuator for damage before mounting. A damaged actuator must not be mounted. Check for instance for damaged packaging.
- Do not use a too high torque when mounting the bolts for the back fixture or the piston rod eye

Control boxes:

- The mounting screws on the control box must be tightened with a maximum torque of 1 Nm
- The mounting surface to which the control box is attached should have a surface evenness better than ± 0.5 mm.
- Systems must not be installed/deinstalled while in operation.
- Control boxes with a wet alarm must be mounted as shown on figure 5 on the next page.
- Nuts and bolts must be made of steel.
- Nuts and bolts must be tightened securely.
- For control boxes with earth connection (Class 1), the nut must be tightened with a torque of 1 - 1.2 Nm.



Cables:

It is important to remove the transport plastic bag before using the cable.

Accessories:

The mounting screws on accessories must be tightened with a maximum torque of 1 Nm

- The mounting surface to which the accessory is attached should have a surface evenness of more than ± 0.5 mm
- Systems must not be installed/deinstalled while in operation
- Nuts and bolts must be made of steel
- Nuts and bolts must be tightened securely

Controls:


The mounting screws on the controls must be tightened with a maximum torque of 1 Nm

- The mounting surface to which the accessory is attached should have a surface evenness of more than ± 0.5 mm
- Systems must not be installed/deinstalled while in operation
- Nuts and bolts must be made of steel
- Nuts and bolts must be tightened securely

For further instructions regarding mounting, see the data sheet for the individual product or in chapter 5, 6 or 8 in this manual.

Figure 1

Ventilation of external batteries, BA18

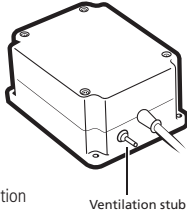

Ventilation stub

Check at regular intervals that the ventilation stub is undamaged and intact.

The construction of the ventilation stub permits battery gasses to get out, but it does not permit penetration of water.

Figure 2

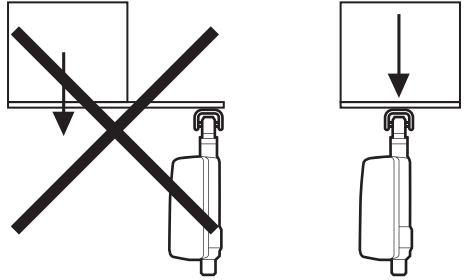


Figure 3

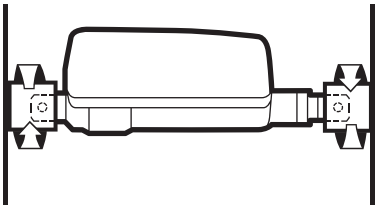


Figure 4




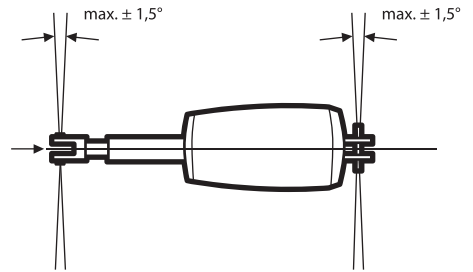


Figure 6

1) LA22

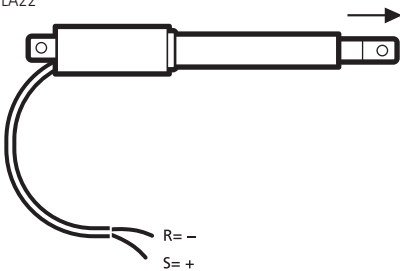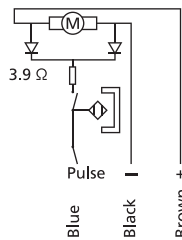


3) LA30 and 30S

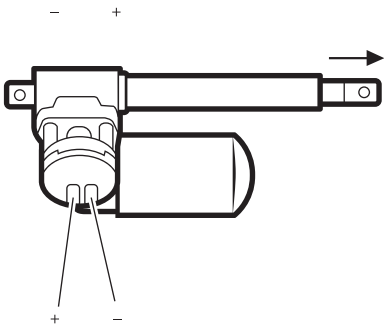


Brown	Black	
+	-	Out going
-	+	In going

Figure 6

4) LA12

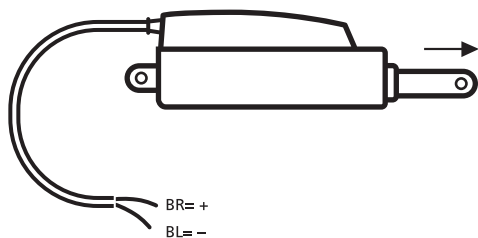

5) LA30, LA30S, LA32 and LA34 with potentiometer

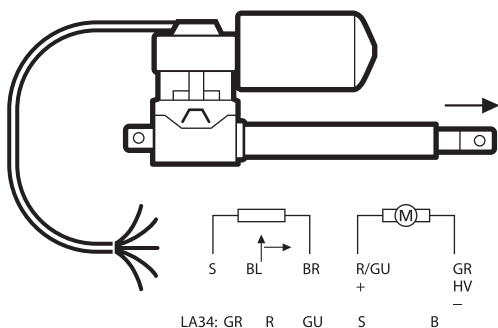

Colour codes:

S	Black
BR	Brown
R	Red
O	Orange
GU	Yellow
G	Grey
BL	Blue
V	Purple
GR	Green
HV	White

6) LA30, LA30S and LA32 with optical encoder



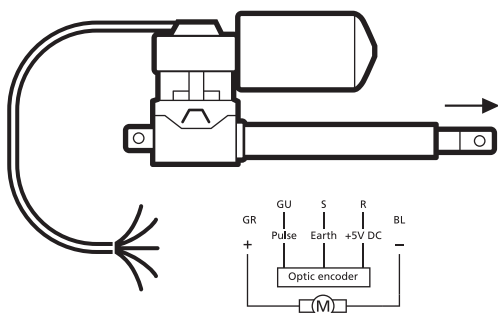


Figure 6


9) LSD

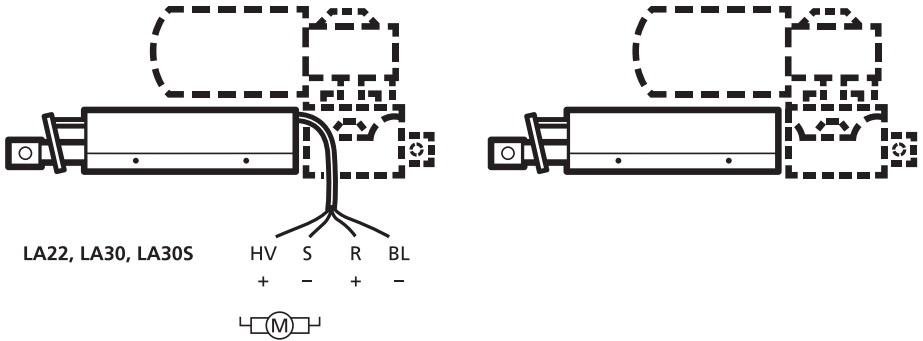

10) LA31, LA34 with electronic pulse coder (reed-switch)

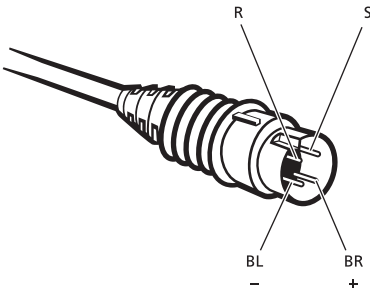

11) LA31 TECHLINE

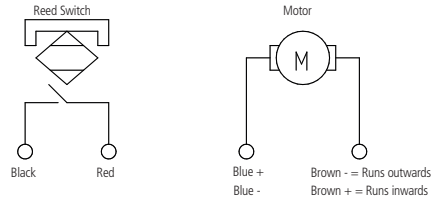

12) LA12 PLC


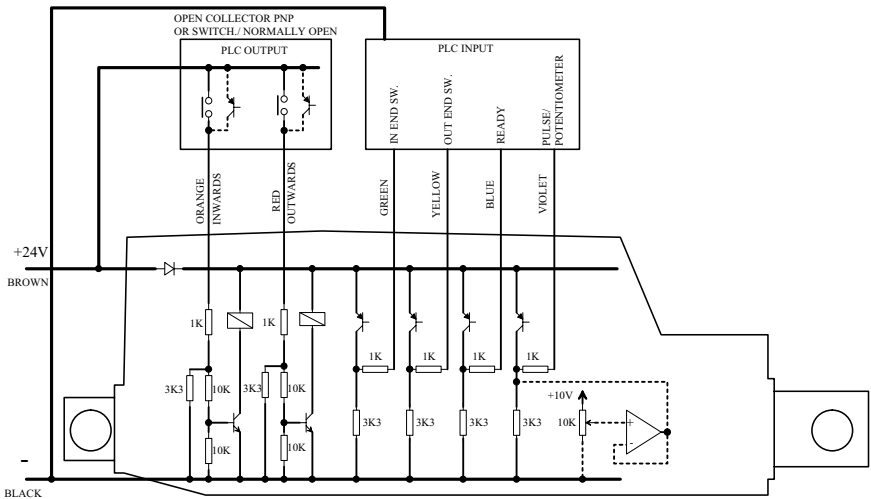



Figure 6

13) Pin-connection for Mini-fit plug (valid for 13 and 14)

Mini-Fit Connector	
Pin 1	
Pin 2	
Pin 3	
Pin 4	
Pin 5	
Pin 6	

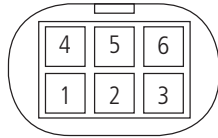

Connector front view

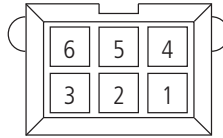

PCBA Header top view



0273011 with O-ring

WITHOUT FEEDBACK

LA27 Mini-fit plug cable (LA27 standard; Valid for LA27 article numbers = 27xxxxxxxxxxx0)

CH1-4 MiniFit:	
When a channel is operated UP (Motor connections)	3: Brown: + 6: Yellow: -
End-of-stroke switches	5: Orange: UP 4: Red: DOWN 2: Black: COMMON
Not Used	1: No Connection

(end of stroke = EOS)

LA23/LA31/LA34/BL1/BL4 Mini-fit plug cable

without Feedback

- Pin 1
- Pin 2
- Pin 3
- Pin 4
- Pin 5
- Pin 6

EOS Switch	
Switch com. (GND)	
Vbus	
M+ (Motor/Power)	
EOS wout	
EOD in	
M- (Motor/Power)	

LA27 Mini-fit plug cable (Analog encoded without Hall)

without Feedback

Article numbers = 27xxxxxxxxxxxB

- Switch com. (GND)
- Vbus
- M+ (Motor/Power)
- EOS out
- EOD in
- M- (Motor/Power)

EOS Switch	
Switch com. (GND)	
Vbus	
M+ (Motor/Power)	
EOS out	
EOD in	
M- (Motor/Power)	

WITH FEEDBACK

LA23/LA31/LA34/LA44/BL1 Mini-fit plug cable

with Feedback

- Pin 1
- Pin 2
- Pin 3
- Pin 4
- Pin 5
- Pin 6

Hall	
Hall GND	
Vbus	
M+ (Motor/Power)	
Hall A	
Hall B	
M- (Motor/Power)	

LA27 Mini-fit plug cable

with Feedback

Article numbers = 27xxxxxxxxxxxA

- Hall com. (GND)
- Vbus
- M+ (Motor/Power)
- EOS (analog)
- Hall
- M- (Motor/Power)

Hall	
Hall com. (GND)	
Vbus	
M+ (Motor/Power)	
EOS (analog)	
Hall	
M- (Motor/Power)	

LA34/LA44 Mini-fit plug cable (potentiometer)

Potentiometer

- Pin 1
- Pin 2
- Pin 3
- Pin 4
- Pin 5
- Pin 6

Pot GND
Vbus
M+ (Motor/Power)
Pot Position
Pot + (3V3)
M- (Motor/Power)

BL4 Mini-fit plug cable

Reed

- Reed com. (GND)
- Vbus
- M+ (Motor/Power)
- NC
- Reed
- M- (Motor/Power)

Reed com. (GND)
Vbus
M+ (Motor/Power)
NC
Reed
M- (Motor/Power)

Figure 7

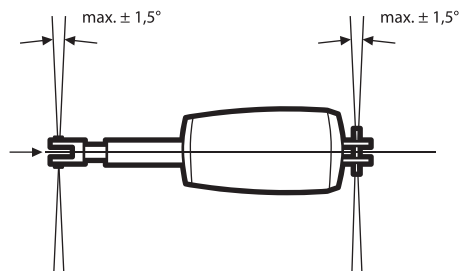


Figure 8

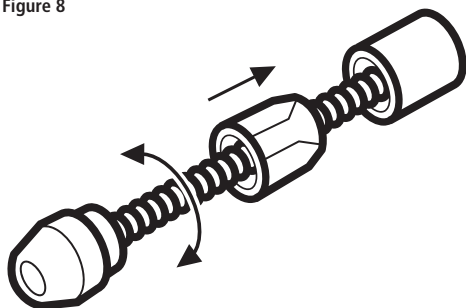


Figure 9


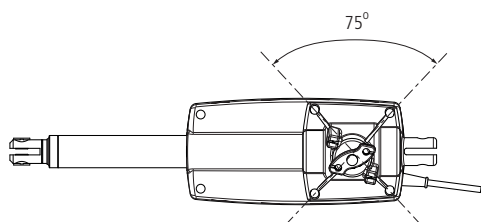


Figure 10

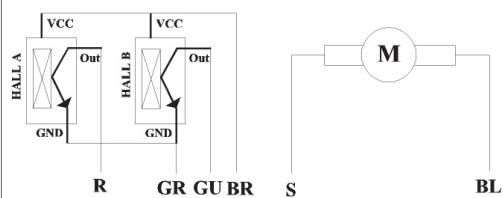

Connecting the system

Do not connect the mains cable until all actuators and hand controls have been connected to the control box.


Start by connecting the hand control to the control box. The connection in the control box is marked with "HB".

Connect the different actuators to the different channels on the control box. Each channel is marked with a number (e.g. "1", "2", "3".....).

Check that all plugs are well connected and firmly pushed into the connector. Due to the fact that LINAK® control boxes are designed for a high IP degree, a firm force can be required.

Connect the mains cable.

The actuators can now be operated by pressing a button on the hand control button.

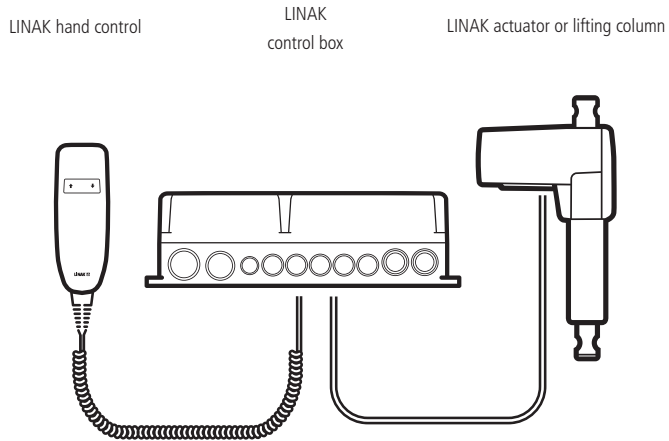

Any non-detachable power supply cord with mains plug is considered to be the disconnecting device.

Charging is only allowed in dry environment, and the appliance inlet must be thoroughly dried before connecting to mains.

- Actuators with plugs may only be connected to LINAK control boxes
- Actuators without plugs are connected as shown in **Figures 6.1 - 6.12.**

Batteries

Lithium ion batteries



Warnings

- When using BAJL and JUMBO control boxes, loss of power might happen due to the battery deep discharge protection. This will only happen in case of continuous battery use despite warnings. In this event, there may be no warning, and the application may not be able to move when expected.
- In his risk analysis, the customer must take into consideration how to assure alternative means to make movement, for instance quick release or manual lowering.
- The combination of CBJ1 or CBJ2 with BAJL might not be able to complete a full cycle after low battery warning.
- Do not open the battery housing as damaging the cell or circuitry may develop excessive heat.
- If product caution is not clearly visible at low light intensity, read the product label instructions symbol. A warning must be included in the application manufacturer manual for the medical device.
- The application manufacturer must test the application and ensure that intentional and unintended operations do not exceed the battery specification limits.
- Defective or damaged Li-Ion batteries are not allowed for transportation.
- For safety reasons, please adhere to the indicated charging and operation temperature.
- In case the battery is too hot, disconnect it, evacuate the room, and wait for 2 hours before taking further steps.
- Mounting instructions must be followed in order to avoid exposing batteries to water.
- Recharging of battery must take place every 6 months.
- Disposal of the battery takes place in accordance with local regulations.



Recommendations:

- Do not exceed the storage temperature as it will shorten the product life and performance.
- Allow the battery to settle to room temperature before use.
- Lithium ion batteries are not intended for use in outdoor applications and indoor pool environments.
- If the battery is completely discharged, then recharge the battery before storage.
- Always use correct LINAK® charger.



DO NOT:

- Heat or burn the batteries.
- Short circuit the batteries.
- Expose the batteries to high impact/excessive force.
- Crush or puncture the batteries.
- Use batteries with signs of damage or corrosion.
- Charge or store the batteries near combustible material.
- Expose the batteries to water or other liquids.
- Overcharge or fully discharge the batteries.

For detailed information on specific use of batteries, please see the product information in chapter 5.

Safety feature

Lithium ion batteries contain several mechanisms to protect themselves from being damaged due to excessive use.

In case of overheating, the device will activate a thermal protection. No power output will be available until the temperature is again within normal operating range.

Overheating may occur by extensive use at high temperatures or when exceeding the duty cycle. (see product label)

Lead acid batteries

Maintenance of batteries

Prior to first use of LINAK® batteries, please make sure that they are charged at least 24 hours and if possible even longer for proper functioning and prolonging the battery lifetime.



Warnings

- Please observe the following maintenance, replacement, and disposal requirements to ensure a safe and reliable operation.
- The batteries are to be replaced after 4 years at the latest. Perhaps earlier, depending on the pattern of use. Frequent and high-powered discharges reduce the battery life. For an optimum lifetime, the product must be connected to the mains voltage as often as possible. It is recommended that the batteries are to be charged for at least every 6 months - otherwise the batteries will have reduced capacity due to self-discharge. It is recommended to test the battery function at least once every year.

Replacement of batteries

The batteries must only be replaced by the same type of batteries or mechanical and electrical equivalent types. The batteries must be new or maintained by means of charging at least every 6 months. The batteries, which make a set, must be supplied with identical production codes.

Production code mismatch may lead to a severely reduced lifetime expectancy.

Before mounting, ensure that the battery set is correctly connected, compare with the drawing in the battery room and check that no connectors are loose.



Warnings

- The battery compartment is hermetically separated from the electronics compartment. When replacing the batteries this separation must not be damaged or modified as this may allow penetration of battery gas into the electronics compartment with risk of explosion.
- When replacing batteries in waterproof products (IPX5 and IPX6), precautions must be taken that the sealing material (silicone ring or joint filler) is not damaged and that it is correctly placed in the groove. Hereafter, the screws in the cover are to be fastened with approx. 1 Nm. If the seal is damaged, it must be replaced by a new silicone string (LINAK article no. 0008004 for a roll of 100 meters).

Disposal

Lead acid batteries, can be returned to LINAK or disposed of in the same way as car batteries.



Warnings

- The battery compartment is supplied with ventilation that ensures correct and necessary airing of the battery compartment. This airing must not be blocked or covered as a positive pressure may occur with risk of explosion.
- If the product has been exposed to mechanical overload (lost on the floor, collision/squeezing in the application or a powerful stroke), the product must be sent to an authorised workshop for control of the hermetic separation between the battery and electronics compartment.

2. Information on start-up, deinstallation and operation

Before installation, deinstallation, or troubleshooting:

- Stop the actuator/lifting column.
- Switch off the power supply or pull out the mains plug and pull out the plug to the actuator/lifting column.
- Relieve the actuator/lifting column of any loads, which may be released during the work.

Before start-up:

- Make sure that the system has been installed as instructed in this User Manual.
- The individual parts (actuator/lifting column/hand controls etc.) must be connected before the control box is connected to the mains.
- Make sure that the mains voltage to be connected to the product or the system is the one stated on the label.
- The equipment can be moved freely over the whole working area of the actuator/lifting column.
- Check correct function after mounting.
- The actuator/lifting column must not be loaded in excess of the values indicated in the specifications on the product label.
- The duty cycle noted on the product label must always be observed. Otherwise there is a risk of product damage.
Exceeding the duty cycle will result in a dramatic reduction of the system lifetime.
Unless specified otherwise on the product label, the duty cycle is max. 10%, max. 2 minutes in use followed by 18 minutes not in use.
- The actuator/lifting column system may only be used in an environment corresponding to the IP rating of the system.
LINAK products are marked with the actual IP rating on the label.
- If any individual parts are suspected to be damaged, do not install the parts, but return them for inspection/service.

During operation:

- Check for unusual sounds and irregular movement. Stop the actuator/lifting column immediately if anything unusual is observed.
- If the control box makes unusual noises or smells, switch off the mains voltage immediately and the external battery, if any.
- Take care that the cables are not damaged.
- Unplug the mains cable on mobile equipment before it is moved.

Troubleshooting Actuators/Lifting columns

Symptom	Possible cause	Action
No motor sound or movement of piston rod	- The actuator is not connected to the control box - Blown fuse in the control box - Cable damaged	- Connect the actuator to the control box - Fuse must be changed - Send actuator for repair
Excessive electricity consumption		- Send actuator for repair
Motor runs but spindle does not move	- Gear wheel or spindle damaged	- Send actuator for repair
Actuator cannot lift full load	- Clutch is worn - Motor is damaged	- Send actuator for repair
Motor sound but no movement of piston rod		- Send actuator for repair
No signal from Reed or Hall switch		- Send actuator for repair
Motor runs and quick release does not function or is noisy	- Declutching arm turns less than approx. 75 °C	- Adjust cable
Piston rod will only move inwards and not outwards	- Safety nut has operated	- Send actuator for repair
Motor runs too slowly or does not give full force	- Insufficient power supply - Voltage drop in cable	- Increase power supply - Thicker cable necessary

Troubleshooting Electronics

Symptom	Possible cause	Action
Power indicator does not light up	- Not connected to mains	- Connect to mains
	- The fuse has blown	- Replace fuse, if the system is prepared for external fuse replacement, or send the system for repair
	- Defective power cable	- On control boxes with exchangeable power cable, change the cable. - On control boxes with fixed cable, send it for repair
	- Control box defective	- Send control box for repair
Power indicator lights up, but actuator does not run	- Actuator plug not pushed into control box properly	- Push actuator plug properly into control box
Control box relays are clicking	- Actuator defective	- Replace actuator - Defective control box - Replace the control box
Power indicator lights up, but actuator does not run	- Control box defective	- Send control box for repair
No relay noise is heard from control box Not valid for CB20/CB6S OBF/CB16 OBF	- Hand control defective	- Send hand control for repair
Control box completely dead on battery and no relay clicking	- Battery completely flat	- Charge battery
	- Battery defective	- Replace battery
Actuator does not run on battery, but relay clicking can be heard	- Actuator plug not properly pushed into control box	- Push actuator plug properly into control box
	- Actuator defective	- Replace actuator
	- Control box defective	- Replace control box
Control box okay apart from one direction on one channel	- Hand control defective - Control box defective	- Send hand control for repair - Send control box for repair

3. Information on specific actuators

1. LA20 INLINE (MEDLINE® CARELINE®)

LINAK®

Designed in Denmark
DK - 6430 Nordborg

Type : 200250500A0M0G26+0230200000227

Item No. : J21264

Prod. Date : 2018.06.18

Max Load : Push 2500 N IPX6

Power Rate: 24 V=, Max. 1.3 A

Duty Cycle : 10%, Max. 2 min. / 18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ

W/O#-0001



The LA20 Inline is a small and compact inline actuator with up to 2500 N in push.

The actuator is equipped with a socket for exchangeable cables and is to be used with an angled Microfit 30 Deg plug.

Some of the benefits that LA20 Inline offers you:

- Compact and slim design
- Strong lifting load
- Exchangeable cable
- Feedback options for positioning

LA20 is a small inline actuator with a robust design, high efficiency, relatively high load at 2500 N, feedback signals for positioning and electrical end-stop. It withstands harsh environments within the medical industry.

The LA20 Inline can be used in various applications where space is limited or where size is important.

Usage

- Duty cycle: Max. 10%, 2 minutes continuous use followed by 18 minutes not in use
- Usage temperature: +5 °C to +45 °C normal operating temp. -27 °C to +50 °C (according to test conditions ISO 7176-9)
- Storage temperature: -40° C to +70° C (according to ISO 7176-9)
- Relative humidity: 20% to 80% at +30° C
- Approvals: IEC60601-1, IEC60601-1-6, ANSI/AAMI ES60601-1, CAN/CSA-C22.2 No. 60601-1
In compliance with ISO 7176-8
- Approvals pending: IEC60601-1, IEC60601-2
- Atmospheric pressure: 800 to 1060 hPa
- Cycles: The LA20 Life cycle test (10.000 cycles) has been performed with a stabilised power supply (10% duty cycle) on a 120 mm stroke actuator at max. load for the following number of cycles (at ambient temperature)



Warnings

- Do not sideload the actuator
- Only use the actuator within specified working limits
- When mounting the LA20 in the application ensure that the bolts can withstand the wear and they are secured safely
- Motor type G and B must only be used with their respective control box types. For further specification see Chapter 3 – Compatibility.
- Motor type B: 24V motor which must be used with COBO, CBJC, CBJ1, CBJ2, CBJH or generally in applications which are mainly battery driven
- Motor type G: 24V. Running mainly on LINAK CB platforms as CO61, CO71, CO41, CA30/40, CB6 OBMe SMPS, CB16 OBF SMPS, CB20
- Instruction concerning the turning of the piston rod eye: When mounting and taking into use, it is not permitted to make excessive turns of the piston rod eye. In cases where the eye is not positioned correctly, it is permitted to first screw the eye down to its bottom position, at a maximum torque of 2 Nm (1), and thereafter a maximum half turn outwards again (2).



Recommendations

- Do not place load on the actuator housing and do prevent impact or blows or any other form of stress to the housing
- Connection bolts must be dimensioned so that they have the necessary strength and tolerance in order to obtain the minimum safety factor according to the requirements of the authorities
- Ensure that the cable lock is mounted correctly
- Ensure that the cable cannot be squeezed, pulled or subjected to any other stress
- Only use the actuator within the specifications
- Connection bolts and brackets are to be inspected in connection with service and must be replaced if there are signs of wear
- The product must always have the motor short circuited to obtain self-locking according to label value/rated value
- Ensure that the duty cycles and the usage temperatures for LA20 actuators are respected
- The LA20 is not suitable for use in outdoor applications where it can be exposed to sun and rain. If outdoor use cannot be avoided, it is very important that the LA20 is mounted in a position where it is well shielded. It is up to the customer to provide the shielding. Furthermore, it will be good practice to ensure that the actuator is fully retracted in the "normal" position. The reason is that there will be a vacuum inside the actuator if it is extended which over time can lead to water entering the actuator.
- Do not expose the actuator to pull during transport of the application

Cable mounting

A: To mount a cable



Step 1:

Place the cable in the actuator



Step 2:

Press the cable lock down into place

B: To remove/change a cable



Step 1:

Place a screwdriver in the hole in the back figure of the actuator



Step 2:

Push to remove the cable lock and remove/change the cable

2. LA22 (MEDLINE® CARELINE® TECHLINE®)

LINAK® 
WE IMPROVE YOUR LIFE

Item No. : 22D000-06052410
Prod. Date : 2009.07.01 S.O.7654321
Max Load : Push 350 IPX1
Power Rate : 24 V \Rightarrow / Max.3.3 A
Duty Cycle : Max. 10%

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL




P.O.123456-0001 MADE BY LINAK A/S DENMARK



The LA22 is an in-line actuator specially designed with a small overall dimension for easy use in industrial, agricultural, and rehabilitation products.

Thanks to its small outer dimensions and linear design, the LA22 is well suited for applications where installation space is limited, such as on wheelchairs.


3. LA23 (DESKLINE®)

LINAK® 
WE IMPROVE YOUR LIFE





DESIGNED IN DENMARK

Item No. : 2362002000050B4
Prod. Date : 2014.06.20 S.O.6151450
Max Load : Push/Pull 1500 N IPX4
Power Rate : 24 V \Rightarrow / Max. 2.3 A
Duty Cycle : 10%, Max. 2 min. / 18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS A OUVRIER PAR PERSONNEL NON-AUTORISE



P.O.2140274-0001 MADE BY LINAK A/S DENMARK



The LA23 is a small and strong push actuator (up to 2500 N). The LA23 can be used in various applications where size is important. The LA23 is e.g. ideal for adding tilt-function to a desk, so the table top can tilt or for adjustment in handicap kitchens.

Some of the benefits the LA23 offers you are:

- Compact design
- High lifting force
- Exchangeable cables

Usage:

- Duty cycle: 10 %, 2 minutes continuous use followed by 18 minutes not in use
- Usage temperature: +5 °C - +40 °C normal operating temp.
-30 °C - +50 °C according to test conditions: ISO 7176-9
- Storage temperature: -45 °C to +70 °C (according to ISO 7176-9)
- Compatibility: DESKLINE Control boxes.
SLS must be ignored Up + Down in the CBD4, when configured for LA23 and in the CBD6S with old actuators.
- Approved according to EN60335-1 with CBD6S
- Flammability rate: Enclosure UL94-V0
- Cycles: The LA23 Life cycle test has been performed with a stabilised power supply (10 % duty cycle) on a 200 mm stroke actuator at max. load at 5000 cycles

Warnings

- Do not side-load the actuator.
- Only use the actuator within specified working limits.
- When mounting the LA23 in the application ensure that the bolts can withstand the wear and that they are secured safely.
- If an actuator with stroke length below 50 mm is used, and the electrical end-stop switch fails, please be aware that the distance before reaching the mechanical end-stop will be prolonged. The extra distance will be 50 mm minus actual stroke length.
i.e. If an actuator with 20 mm stroke length is used and the switch fails, it will travel an additional 30 mm before reaching the mechanical end-stop.
- Instruction concerning the turning of the piston rod eye
When mounting and taking into use, it is not permitted to make excessive turns of the piston rod eye. In cases where the eye is not positioned correctly, it is permitted to first screw the eye down to its bottom position, at a maximum torque of 2 Nm (1), and thereafter a maximum half turn outwards again (2).



Recommendations:

- Do not place load on the actuator housing and do prevent impact or blows, or any other form of stress to the housing.
- Ensure that the cable lock is mounted correctly.
- Ensure that the duty cycle and the usage temperatures for LA23 actuators is respected.
- Ensure that the cable cannot be squeezed, pulled or subjected to any other stress.
- The LA23 is not suitable for use in outdoor applications where it can be exposed to sun and rain.
If outdoor use cannot be avoided, it is very important that the LA23 is mounted in a position where it is well shielded. It is up to the customer to provide the shielding. Furthermore, it will be good practice to ensure that the actuator is fully retracted in the "normal" position. The reason is that there will be a vacuum inside the actuator if it is extended which over time can lead to water entering the actuator.

The item numbers for ordering the Cable Lock are:

- Item number: 0231007 (light grey) for one cable lock (1 piece).
- Item number: 0231037 (black) for one cable lock (1 piece).

Below you see an instruction in how to mount and remove the cable lock from LA23.

a) Mount a cable lock:



Push down until the cable lock clicks into place.

b) Cable lock removal



Step 1:
Insert e.g. a screwdriver at a 45 °C angle as illustrated.



Step 2:
Turn the screwdriver to release the cable lock.



Step 3:
Now the cable lock can be removed by hand.

Note: When a cable lock has been removed, it is recommended to replace it with a new.



WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK
 Item No. : 2362002000050B4
 Prod. Date : 2014.06.20 S.O.6151450
 Max Load : Push/Pull 1500 N IPX4
 Power Rate: 24 V \pm / Max. 2.3 A
 Duty Cycle : 10%, Max. 2 min. / 18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
 NE PAS A DUVRIER PAR PERSONNEL NON-AUTORISE

P.O.2140274-0001 MADE BY LINAK A/S DENMARK

C/N 120690



The LA23 is a small and strong push/pull actuator (up to 2500 N). The LA23 can be used in various applications where size is important.

Some of the benefits the LA23 offers you are:

- Compact design
- High lifting force
- Exchangeable cables

Usage:

- Duty cycle: 10 %, 2 minutes continuous use followed by 18 minutes not in use
- Usage temperature: +5 °C - +40 °C normal operating temp.
-30 °C - +50 °C according to test conditions: ISO 7176-9
- Storage temperature: - 45 °C to + 70 °C (according to ISO 7176-9)
- Compatibility: CB20, CB16, CB6S, CBJ 1/2, CBJC, CBJH, CBD4, CBD5 & CBD6*, CA30, CA40, CO61, and SMPS-T160 (for combination possibilities, please see the User Manual for SMPS-T160 on our website)
* SLS must be ignored Up + Down in the CBD4, CBD5 or CBD6 when configured for LA23
* Only the 3, 6 & 12 mm versions can be configured in the CBD4, CBD5 or CBD6
* Only tested for single use.
- Approvals: IEC60601-1, ANSI/AAMI ES60601-1, CAN/CSA 22.2 No 60601-01
LA23IC is not approved according to the above.
LA23 in combination with CBD4, 5 & 6 has no approvals.
- Flammability rating: Enclosure UL94-V0

Warnings

- All IC (Integrated Controls) versions are not compliant for Medical use.
- Do not sideload the actuator.
- Only use the actuator within specified working limits.
- Always use steel backfixture for LA23 over 1500N and for pull loads.
- The B and G 24V motors must only be used with their respective control box types.
 - Motor type A: 12V motor must be used with CBD4, CBD5 and CBD6
 - Motor type B: 24V motor which must be used with JUMBO; CBJ1/2, CBJC and CBJH or generally in applications which are mainly driven with battery
 - Motor type G: 24V motor which must be used with OpenBus™ control boxes; CB20, CB16, CB6S, CA30, CA40, CO61
- If an actuator with stroke length below 50 mm is used, and the electrical end-stop switch fails, please be aware that the distance before reaching the mechanical end-stop will be prolonged. The extra distance will be 50 mm minus actual stroke length. I.e. If an actuator with 20 mm stroke length is used and the switch fails, it will travel an additional 30 mm before reaching the mechanical end-stop. Please make sure that the application can withstand this in a safe way.
- Instruction concerning the turning of the piston rod eye. When mounting and taking into use, it is not permitted to make excessive turns of the piston rod eye. In cases where the eye is not positioned correctly, it is permitted to first screw the eye down to its bottom position, at a maximum torque of 2 Nm (1), and thereafter a maximum half turn outwards again (2).
- When mounting the LA23 in the application ensure that the bolts can withstand the wear and that they are secured safely.





Recommendations


- Do not place load on the actuator housing and do prevent impact or blows, or any other form of stress to the housing.
- Ensure that the cable lock is mounted correct.
- Ensure that the duty cycle and the usage temperatures for LA23 actuators is respected
- Ensure that the cable cannot be squeezed, pulled or subjected to any other stress.
- The LA23 is not suitable for use in outdoor applications where it can be exposed to sun and rain.
If outdoor use cannot be avoided, it is very important that the LA23 is mounted in a position where it is well shielded. It is up to the customer to provide the shielding.
Furthermore, it will be good practice to ensure that the actuator is fully retracted in the "normal" position. The reason is that there will be a vacuum inside the actuator if it is extended which over time can lead to water entering the actuator.
- The B and G 24V motors must only be used with their respective control box types.
- Not acceptable: B motor with OpenBus™ control boxes!
Reason: The actuator will be too strong, it will run too fast, be noisy and only have a short lifetime. The actuator will not live up to what we promise.
- Not acceptable: G motor with 24V supply!
Reason: The actuator will be too weak, this means it will only run slowly, not be able to lift as much in the cold and under low current conditions. The actuator will not live up to what we promise.
- If a cable lock has been removed it is recommended to check if it has been damaged during removal. If so it is recommended to replace with a new one.
- Before mounting a cable, ensure that the cable, cable plug or o-ring is not damaged. If damage is observed, the cable must be replaced with a new one.

The item numbers for ordering the Cable Lock are:

- Item number: 0231007 (light grey) for one cable lock (1 piece).
- Item number: 0231037 (black) for one cable lock (1 piece).

Below you see an instruction in how to mount and remove the cable lock from LA23.

a) Mount a cable lock:

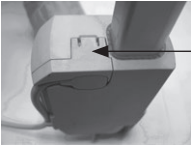

Push down until the cable lock clicks into place.

b) Cable lock removal



Step 1:
Insert e.g. a screwdriver at a 45 °C angle as illustrated.



Step 2:
Turn the screwdriver to release the cable lock.




Step 3:
Now the cable lock can be removed by hand.

Note: When a cable lock has been removed, it is recommended to replace it with a new.

Connection diagrams:


Standard electrical end stop - no positioning

23XXXXXX00XXXXX

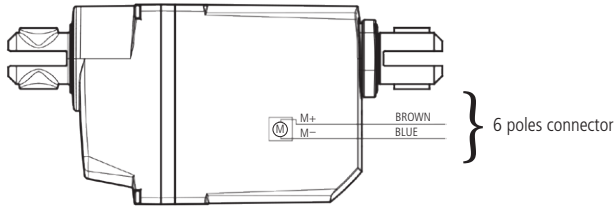


Standard electrical end stop and potential free end stop - no positioning

23XXXXXX01XXXXX

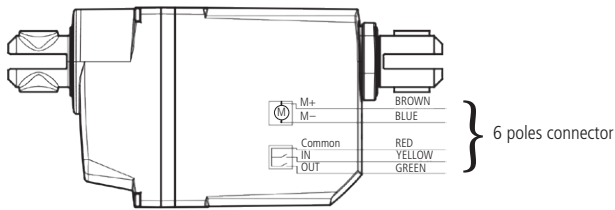

Dual Hall digital positioning

23XXXXXX02XXXXX

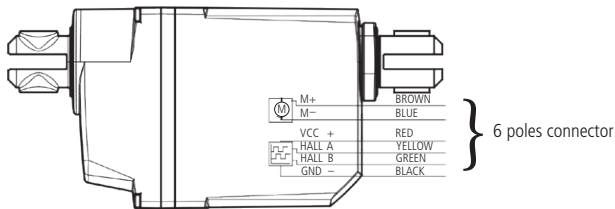

Dual Hall PNP positioning

23XXXXXX03XXXXX




Note: Connection colours only fit with "open-end cables.




Note: If reversed driving is wanted this has to be done by using different cables.


Hall Potentiometer feedback and potential free end stop
 23XXXXXX2XXXXXX

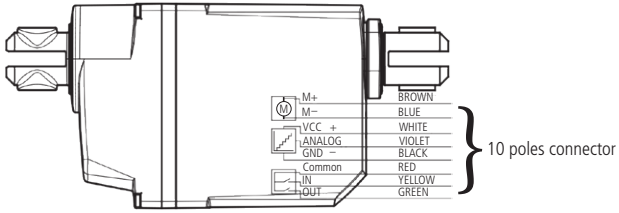

Hall Potentiometer feedback
 23XXXXXX1XXXXXX

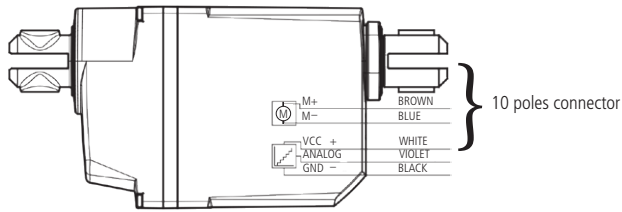


Hall PWM position feedback and potential free end stop
 23XXXXXX4XXXXXX

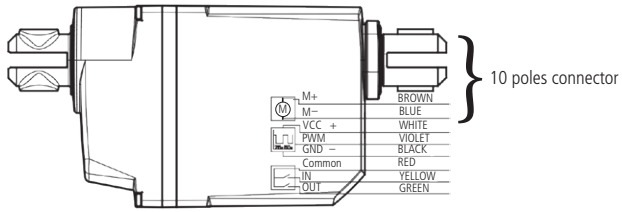

Note: Connection colours only fit with "open-end" cables.


Hall PWM position feedback
23XXXXXX3XXXXXX

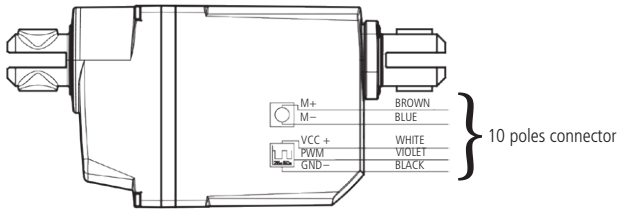

Standard Integrated Control
23XXXXXX5XXXXXX

Integrated Control with Hall Potentiometer position feedback
23XXXXXX6XXXXXX

Integrated Control with Hall PWM position feedback
23XXXXXX7XXXXXX

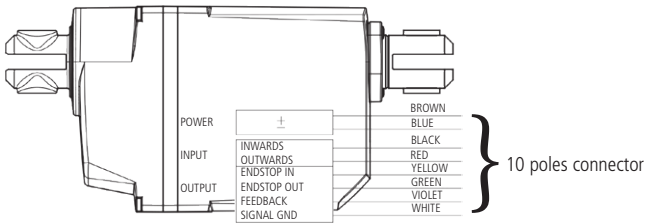

Drawing no.: 0239010-A

 


LA23 with integrated control is not approved according to IEC60601-1, ANSI/AAMI ES60601-1.




Note: Connection colours only fit with "open-end" cables.

Input/Output specifications: Motor


Item	Specification	Comment
Description	Permanent magnet DC motor, available in 12V or 24V	 <p>EMC noise from the motor is dealt with in LINAK A/S Control boxes. If using the actuator in another application it is up to the customer to be EMC compliant.</p>
Input voltage	12VDC, +/- 20% 24VDC, +/- 10%	Cable dimension 0.50 mm ² (AWG20)
Current consumption	12V, 0.2 - 6A depending on load 24V, 0.1 - 3A depending on load	See curves for typical values
Speed regulations	The motor can run with PWM regulation. This could be used for soft start/stop etc.	
Connection	To extend actuator: Connect Brown to positive, Connect Blue to negative To retract actuator: Connect Brown to negative, Connect Blue to positive	Cables: Standard 6 wires: 0237002-xxxx Absolute positioning 8 wires: 0237001-xxxx

Input/Output specifications: Potential free end stop signals (01, 2x and 4x in ordering example)

 Potential free end stop signals provide a signal when the actuator has reached end stop. This signal can be utilized to provide confirmation that end stop is reached. (Not for LINAK control boxes)

Item	Specification	Comment
Description	The actuator can be equipped with two separate detector switches that are activated when the actuator is fully retracted (IN) or when fully extended (OUT). The detector switches are normally open.	
Input Voltage	3 - 20VDC	Cable dimension 0.22 mm ² (AWG24)
Output Voltage	Same as input voltage	
Switching capacity	Max.: 50mA 20VDC Min.: 100µA 3VDC	
Connection	Common: Red Actuator retracted: Yellow Actuator extended: Green	Use Cables: Standard 6 wires: 0237002 - xxxx PLC/Absolute positioning 8 wires: 0237001 - xxxx
Combinations	The potential free switches can be combined with absolute feedback. But cannot be combined with "PLC/option"	

Input/ Output specifications: Dual Hall, digital positioning (02 in ordering example)

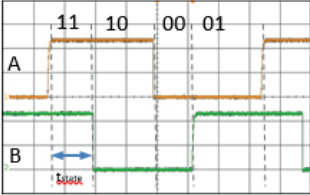Item	Specification	Comment
Description	The actuator can be equipped with two hall sensors A and B and a spindle magnet. In this way you can have pulses from the actuator when it moves.	Only use for standard actuators, with LINAK A/S Control Boxes for OpenBus™.
<p>Resolution</p> 	<p>The feedback system has an 8P magnet which gives 16 shifts in pulses per spindle turn:</p> <ul style="list-style-type: none"> 3 mm pitch = 0.1875 mm per pulse 5 mm pitch = 0.3125 mm per pulse 6 mm pitch = 0.375 mm per pulse 9 mm pitch = 0.5625 mm per pulse 12 mm pitch = 0.75 mm per pulse 20 mm pitch = 1.25 mm per pulse <p>See drawing for details. Tstate is minimum 5ms in all states (11.10.00.01)</p>	<p>Pulse/pause minimum 10 milli-seconds. On 100 mm stroke you will have the following number of pulses:</p> <ul style="list-style-type: none"> 3 mm pitch = 533 pulses 5 mm pitch = 320 pulses 6 mm pitch = 267 pulses 9 mm pitch = 178 pulses 12 mm pitch = 133 pulses 20 mm pitch = 80 pulses
Connection	6 pins mini-fit	Use cables: Standard 6 wires: 0237003-xxxx
Combination	Only standard	

Input/Output specifications: Dual Hall positioning PNP (03 in ordering example)

The Dual Hall positioning PNP is an option on LA23. This is especially suitable for wheelchairs or Techline applications as the LINAK control boxes have their own option 02 for that purpose.


- Is protected against loaddump and wrong placement of wires

Input/Output specifications: Dual Hall positioning PNP

Item	Specification	Comment
Description	The actuator can be equipped with two hall sensors A and B and a spindle magnet. In this way you can have pulses from the actuator when it moves.	
Input voltage	9-32VDC	Feedback circuit has to be powered 1 second before driving and until the actuator has stopped.
Output voltage	PNP source current: max. 12mA. HIGH: Output = VCC-1.2V ($\pm 0.5V$) LOW: Output = 10K Ω pull down tRISE < 100us @24V LOAD:5m cable 1nF//10K Ω tFALL < 100us @24V LOAD:5m cable 1nF//10K Ω tstate > 10ms @24V LOAD:5m cable 1nF//10K Ω	
Current	Max. 20mA+source current.	Also when actuator is not running.
Protection	LOAD DUMP Wire wrong placement	
Resolution	The feedback system has an 8P magnet which gives 16 shifts in pulses per spindle turn: 3 mm pitch = 0.1875 mm per pulse 6 mm pitch = 0.375 mm per pulse 9 mm pitch = 0.5625 mm per pulse 12 mm pitch = 0.75 mm per pulse 20 mm pitch = 1.25 mm per pulse See drawing for details. Tstate is minimum 5ms in all states (11.10.00.01)	On 100 mm stroke you will have the following number of pulses: 3 mm pitch = 533 pulses 6 mm pitch = 267 pulses 9 mm pitch = 178 pulses 12 mm pitch = 133 pulses 20 mm pitch = 80 pulses
Cable	Connection M+: Brown M-: Blue VCC: Red HALL A: Yellow HALL B: Green GND: BLACK Max. length 5m.	Use cables: Standard 6 wires: 0237002-xxxx

Input/ Output specifications: Dual Hall encoded (04 in ordering example)

Item	Specification	Comment
Description	The actuator can be equipped with two hall sensors A and B and a spindle magnet. In this way you can have pulses from the actuator when it moves.	Only use for standard actuators, with LINAK A/S Control Boxes for OpenBus™.
Resolution	<p>The feedback system has an 8P magnet which gives 16 shifts in pulses per spindle turn:</p> <p>3 mm pitch = 0.1875 mm per pulse 5 mm pitch = 0.3125 mm per pulse 6 mm pitch = 0.375mm per pulse 9 mm pitch = 0.5625mm per pulse 12 mm pitch = 0.75mm per pulse 20 mm pitch = 1.25 mm per pulse</p> <p>See drawing for details. Tstate is minimum 5ms in all states (11.10.00.01)</p>	<p>Pulse/pause minimum 10 milli-seconds.</p> <p>On 100 mm stroke you will have the following number of pulses:</p> <p>3 mm pitch = 533 pulses 5 mm pitch = 320 pulses 6 mm pitch = 267 pulses 9 mm pitch = 178 pulses 12 mm pitch = 133 pulses 20 mm pitch = 80 pulses</p>
Connection	6 pins mini-fit	Use cables: Standard 6 wires: 0237003-xxxx
Combination	Only standard	

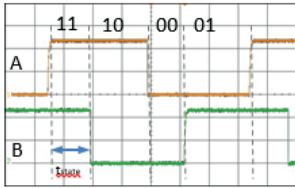

Input/ Output specifications: Hall Potentiometer feedback (1x and 2x in ordering example).

The Hall Potentiometer feedback is an option on LA23. This is especially suitable for wheelchairs or Techline applications as the LINAK control boxes are not capable of handling the signal.

The main advantages are:

- Hall potentiometer is close to being an absolute positioning system
- Hall potentiometer is a long lasting and wear-resistant positioning system
- Enables compact products to have precise positioning (potentiometer increases the product potential)

Input/Output specifications: Hall Potentiometer feedback

Item	Specification	Comment
Description	The actuator can be equipped with an electronic circuit that gives a feedback signal when the actuator moves.	
Input voltage	10 - 28VDC Ripple down to 6V acceptable Limit supply to 500mA or 500mA fuse in case of wrong polarisation.	Feedback circuit has to be powered 1 second before and after the motor runs and until the actuator has stopped. Cable dimension 0.5mm ² AWG20
Output voltage	0 - 10V +/- 0.5V @ Load > 100kΩ 0V = Fully retracted 10V = Fully extended	Can be configured between 0 - 10V Example: 1V = Fully retracted 9V = Fully extended
Current consumption	Current consumption is max. 40mA @ 12V	Also when actuator is not running.
Connection	Supply: White Ground: Black Signal: Violet	Use Cables: PLC/Absolute positioning 8 wires 0237003-xxxx
Combinations	The absolute positioning can be combined with potential free switches. But cannot be combined with relative positioning.	

 

Input/ Output specifications: Hall PWM positioning feedback (3x and 4x in ordering example)


The Hall PWM positioning feedback is an option on LA23. This is especially suitable for wheelchairs or TECHLINE applications as the LINAK control boxes are not capable of handling the signal.

The main advantages are:

- Hall potentiometer is close to being an absolute positioning system
- Hall potentiometer is a long lasting and wear-resistant positioning system
- PWM is more immune to noise than Hall Potentiometer feedback
- Enables compact products to have precise positioning (potentiometer increases the product potential).

Input/Output specifications: Hall PWM positioning feedback

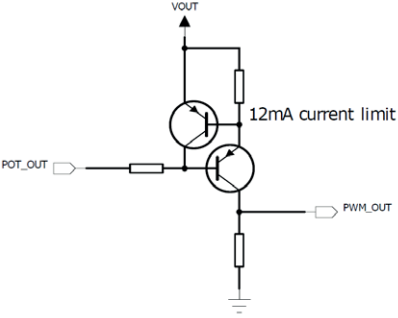



Item	Specification	Comment
Description	The actuator can be equipped with an electronic circuit that gives a PWM position feedback.	
Input Voltage	10 - 28VDC Ripple down to 6V acceptable Limit supply to 500mA or 500mA fuse in case of wrong polarization	Feedback circuit has to be powered 1 second before motor runs and until the actuator has stopped. Cable dimension 0.5mm ² AWG20
PWM Output	Frequency: 75Hz ± 5Hz Accuracy: ±2% Resolution: pitch divided 16 PNP source current: max. 12mA. PWM_HIGH: 10V±1V PWM_LOW: 0.5V±0.5V tRISE < 30us @ LOAD:5m cable 1nF//10KΩ tFALL < 30us @ LOAD:5m cable 1nF//10KΩ	
Current	Current consumption is max. 40mA @12V	Also when actuator is not running
Cable	Connection VCC: White PWM: Violet GND: BLACK Max. length 5m.	Use cables: Standard 8 wires: 0237001-xxxx
Combinations	The absolute positioning can be combined with potential free switches. But cannot be combined with relative positioning.	

LINAK® 

WE IMPROVE YOUR LIFE

DESIGNED IN DENMARK
 Item No. : 2362002000050B4
 Prod. Date : 2014.06.20 S.O.6151450
 Max Load : Push/Pull 1500 N IPX4
 Power Rate: 24 V= / Max. 2.3 A
 Duty Cycle : 10%, Max. 2 min. / 18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
 NE PAS A OUVRIER PAR PERSONNEL NON-AUTORISE


P.O.2140274-0001 MADE BY LINAK A/S DENMARK

CIN 12 06 90

The LA23 is a small and strong push/pull actuator (up to 2500N). LA23 can be used in various applications where size is important. The actuator does have build in electrical limit switches and guided nut.

Usage:

- Duty cycle: 10 %, 2 minutes continuous use followed by 18 minutes not in use
- Usage temperature: -30 °C to +55 °C (according to ISO 7176-9)
- Storage temperature: -45 °C to +70 °C (according to ISO 7176-9)
- Fire category: Enclosure UL94-V0

 **Warnings**

- All LA23 IC (Integrated Controls) versions are not compliant for Medical use.
- Do not sideload the actuator.
- Only use the actuator within specified working limits.
- Always use steel backfixture for LA23 over 1500 N and for pull loads.
- When mounting the LA23 in the application ensure that the bolts can withstand the wear and that they are secured safely.
- Motor type A: 12 V motor
Motor type B: 24 V motor.
- If an actuator with stroke length below 50 mm is used, and the electrical end-stop switch fails, please be aware that the distance before reaching the mechanical end-stop will be prolonged. The extra distance will be 50 mm minus actual stroke length. I.e. If an actuator with 20 mm stroke length is used and the switch fails, it will travel an additional 30 mm before reaching the mechanical end-stop.
- Instruction concerning the turning of the piston rod eye. When mounting and taking into use, it is not permitted to make excessive turns of the piston rod eye. In cases where the eye is not positioned correctly, it is permitted to first screw the eye down to its bottom position, at a maximum torque of 2 Nm (1), and thereafter a maximum half turn outwards again (2).



 **Recommendations**

- Do not place load on the actuator housing and do prevent impact or blows, or any other form of stress to the housing.
- Ensure that the cable lock is mounted correctly.
- Ensure that the duty cycle and the usage temperatures for LA23 actuators is respected.
- Ensure that the cable cannot be squeezed, pulled or subjected to any other stress.

The item numbers for ordering the Cable Lock are:

- Item number: 0231007 (light grey) for one cable lock (1 piece).
- Item number: 0231037 (black) for one cable lock (1 piece). Below you see an instruction in how to mount and remove the cable lock from LA23.

a) Mount a cable lock:



Push down until the cable lock clicks into place.

b) Cable lock removal



Step 1:
Insert e.g. a screwdriver at a 45 °C angle as illustrated.



Step 2:
Turn the screwdriver to release the cable lock.




Step 3:
Now the cable lock can be removed by hand.

Note: When a cable lock has been removed, it is recommended to replace it with a new.

Connection diagrams:


Standard electrical end stop - no positioning

23XXXXXX00XXXXX

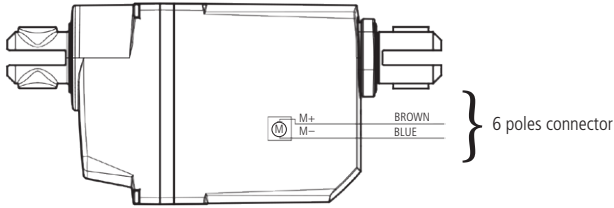


Standard electrical end stop and potential free end stop - no positioning

23XXXXXX01XXXXX

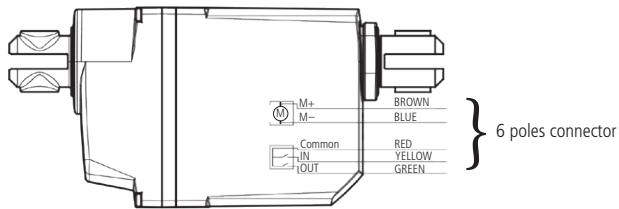

Dual Hall digital positioning

23XXXXXX02XXXXX

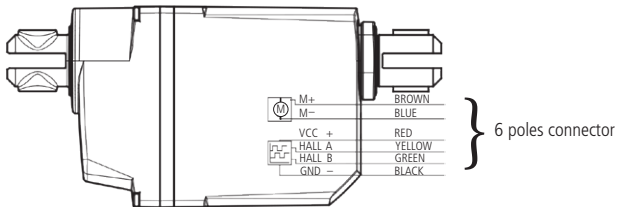

Dual Hall PNP positioning

23XXXXXX03XXXXX




Note: Connection colours only fit with "open-end" cables.




Note: If reversed driving is wanted this has to be done by using different cables.


Hall Potentiometer feedback and potential free end stop
 23XXXXXX2XXXXXX

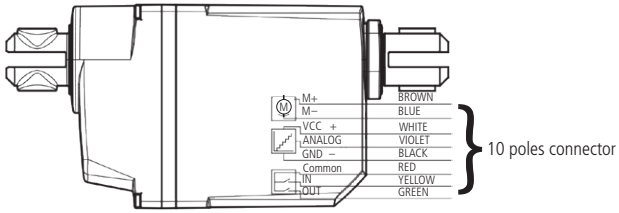

Hall Potentiometer feedback
 23XXXXXX1XXXXXX

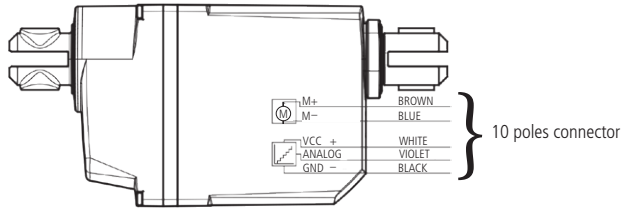


Hall PWM position feedback and potential free end stop
 23XXXXXX4XXXXXX

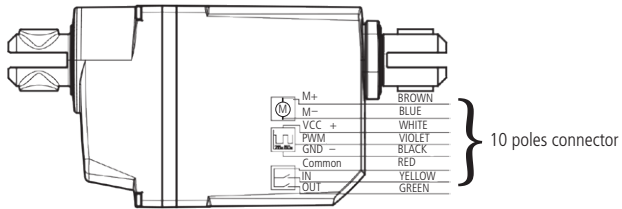

Note: Connection colours only fit with "open-end" cables.


Hall PWM position feedback
 23XXXXXX3XXXXXX

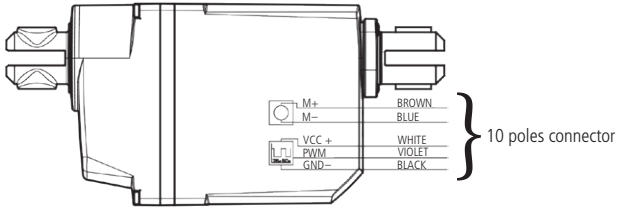

Standard Integrated Control
 23XXXXXX5XXXXXX


Integrated Control with Hall Potentiometer position feedback
 23XXXXXX6XXXXXX

Integrated Control with Hall PWM position feedback
 23XXXXXX7XXXXXX

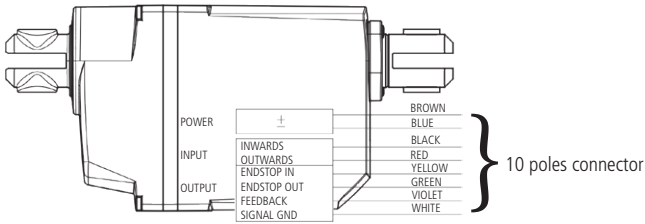

Drawing no.: 0239010-A

 LA23 with integrated control is not approved according to IEC60601-1:2005 3rd ed., ANSI / AAMI ES60601-1:2005, 3rd edition.

 Note: Connection colours only fit with "open-end" cables.



Item No. : 273100A01405040
 Prod. Date : 2009.03.18 S.O.7654321
 Max Load : Push 1500 N IPX4
 Power Rate : 24 V= / Max. 3.5 A
 Duty Cycle : Max. 10%

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL



P.O.123456-0001 MADE BY LINAK A/S DENMARK



The LA27 actuator is a powerful actuator designed for a variety of medical applications. It is developed for both push and pull applications and has a very robust construction because of the ultrasonic welded plastic housing.

Usage:

- Duty cycle: 2/18; 2 minutes continuous use followed by 18 minutes not in use
- Ambient temperature: +5 °C to +40 °C (the actuator must also be at this temp.)
- LA27 is approved according to IEC 60601-1, ANSI/AAMI ES 60601-1 and CAN/CSA C-22.2 No. 60601-1
- With connection to a static voltage power supply of 33V the lifetime could be reduced to 5000 cycles (at a constant load of 6000 N).

NOTE: Re. LA27 with 6.000 N specification (274x3xxx1xxx0xZ; Z = A or B with worm shaft*) for OpenBus™.

This combination reduces the self-lock ability because of lower friction from the worm shaft which has a rolled axle. This worm shaft is however needed because of the OpenBus™ output power.

The self-lock ability may be reduced in cases where the load curve is 6.000 N in both minimum and maximum stroke length.



* Z as type "0" does not use the rolled worm shaft. However, type "0" is NOT compatible with the transformer used for OpenBus™ CBs.



Recommendations

- LA27 is not meant to have CB6S OBF mounted on the actuator. The CB6S OBF must be mounted separately using a bracket.
- LA27 must have a minimum installation dimension of 320 mm if control box CB6 is to be mounted on the actuator.
- The cable for the LA27 is not part of the actuator therefore it must be ordered separately.
- Piston rod eye: The distance from the centre of the eye, to the end of the actuator.
- Change between push and pull not allowed
- Inspect actuator once a year, for wear and jarring sound.
- We recommend using a safety nut in medical applications
- Do not expose actuators without all cables fitted to water/cleaning.
- No thread on bolt inside back fixture.


Note: For CB6, the current will be cut off when the total current on all channels reaches approx. 5.1 to 5.4 Amp.

This means that when two LA27s, running simultaneously, are connected to a CB6, they will not be able to lift the max. load mentioned under technical specifications.

Ratchet Spline:



Quick Release gear with spline.
 Drawing no.: LA27QR_18

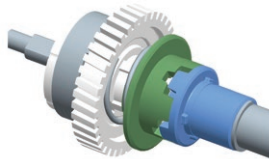

Quick Release gear without spline.
 Drawing no.: LA27QR_17

Mounting of the release cable:



Remove the quick release cover, and the cable mounting holes can be seen.



Mount the cable in one of the cable mounting holes /slots. (If needed both holes/slots can be used)



Replace the Quick Release cover all the way so that it "clicks" into place.

Application requirements:



To avoid damage to the LA27 with QR, it is necessary for certain parameters to be specified in the application.

You should therefore be aware of the following facts when supplying an LA27QR to a customer.

Constant pressure on the actuator:

- The QR concept is such that the actuator can pull with max. 100 N. Therefore there must always be a load on the actuator when it is run inwards to ensure correct operation.
- When the QR is activated there must be a minimum load on the actuator in order to ensure that the actuator runs inwards. This load is depends on the spindle pitch: 5 mm must have 750 N load. 6 mm must have 500 N load.

Mechanical stop in the application:

- When the QR is activated the actuator will run inwards, until it blocks. Depending on the specification, the actuator will run inwards until either the spindle nut runs against the sliding bearing or when the end plug of the inner tube runs against the spindle.
- The solution is not constructed to absorb the impact that can occur when the QR is activated and the actuator is driving into endstop with a heavy load.
- Therefore there must be a mechanical stop built into the application to stop the movement 5mm before the actuator runs into endstop and blocks.

Activation of QR function:

- If the QR is activated at the same time as the actuator is running, then in order for the QR parts to get into position, it may be necessary first to run the actuator in an inward direction using the handset until the QR parts are in place.



Use of the QR function:

- LA27 with QR is designed to be used as part of the back rest function on a bed. When a situation occurs where the patient in the bed has to lie down as quickly as possible, the QR function is activated and the back rest can be lowered, when the actuator is no longer in motion the QR handle is released.

Locking plate must be mounted:


- To ensure that the Bowden cables are fixed correctly the locking plate must be mounted.


Quick Release cable dimensions:

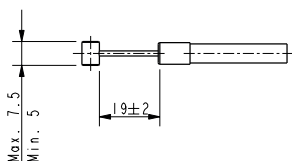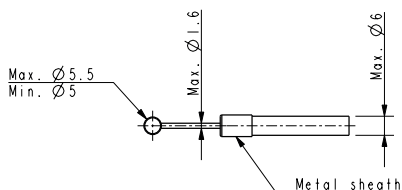


- The release cable has to be provided by the customer.
- The force required to operate the Quick Release is approx. 1 - 28 kg., depending on the actuator load.
- When operating the Quick Release function, the Quick Release must be activated all the way down and not stopped halfway!
- The Quick Release can only be ordered with 5 and 6 mm pitch.

 Mounting bracket instructions:




 To avoid damage to the actuator when the actuator is in the "rest" position there should be no load / tension on the actuator.

LA27 without cable lock

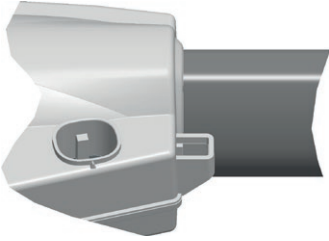

LA27 with cable lock

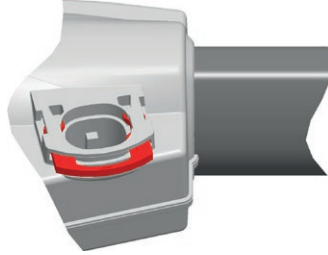



Item No. : 281100+00100000
 Prod. Date : 2009.07.01 S.O.7654321
 Max Load : Push 2000 IPX1
 Power Rate: 24 V $\overline{=}$ / Max.2.3 A

Duty Cycle : Max. 10%, Max. 2 min. / 18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL



P.O.123456-0001 MADE BY LINAK A/S DENMARK



The LA28 is primarily a system actuator. The actuator is very quiet and powerful designed for use in the furniture, rehabilitation, and hospital bed line of businesses.

The actuator is also ideal for use in agricultural machinery and for a wide range of industrial applications.

Reed-switch:

Reed-switch gives a number of pulses for each rotation of the motor. These pulses are used to calculate the piston rod's position as well as to control several actuators running in parallel.

Your nearest LINAK dealer can inform the number of pulses per stroke length.

Regarding Reed-switch connection, **Figure 6.8** (LA28R)

Built-in end-stop circuit (CS28/CS28S)

In the LA28 actuator, with built-in CS28 A-, B- or C-PCB, the actuator is switched off at the end position or when overloaded.

LA28 actuator with:

- The CS28 A is standard IPX1 and is connected to a HB41 hand control with a telephone plug.
- The CS28 B is standard IPX5 and is connected to a HB41 hand control with a DIN plug. CS32 B is also available in IPX6.
- The CS28 C is standard IPX1 and is connected to an external contact or control. **See figure 6.7.**

Mechanical spline:

The splines function so that the actuator can only push, not pull. During pull in the actuator, the inner tube is lifted off the thread bush, and the actuator can therefore never pull a load, only push.

Functional test of mechanical splines:

When the piston rod is at the innermost position, it must be possible to pull it out manually to its full travel length and to press it in again without much resistance and without using the motor. If this is not possible, contact your nearest LINAK dealer.



Warning

Do only use the actuator within specified working limits.

Usage:

- Duty cycle: Max. 10 % or max. 2 min. continuous use followed by 18 min. not in use.
- Ambient temperatures: + 5 °C to + 40 °C
- Compatibility: CB8, CB12, CB14, and CBJ
- Approvals: IEC 60601-1, ANSI/AAMI ES60601-1 and CAN/CSA-22.2 No 60601-1



Recommendations

- LINAK control boxes are designed so that they will short-circuit the motor terminals of the actuator(s), when the actuator(s) are not running. This solution gives the actuator(s) a higher self-locking ability. If the actuator(s) are not connected to a LINAK control box, the terminals of the motor must be short-circuited to enable self-locking of the actuator.
- The maximum load in pull is 2000 N.
- Min. stroke length for the LA28 with splines is 80 mm
- The current supply to LINAK actuators must be cut off in case of overload and when the actuators reach end position.
- Ambient operating temperature is 22 °C.
- LA28 Compact cannot be used in pull applications, unless fitted with an aluminium back fixture.

 
Further information:

Noise level:


- LA28: dB(A) 45; measuring method DS/EN ISO 3743-1, actuator not loaded
- LA28S: dB(A) 54; measuring method DS/EN ISO 3743-1, actuator not loaded

Material:

- The piston rod eyes are "crimped" in place and cannot be unscrewed.



"Crimped" piston rod eye

 

Piston rod without eye (are not tested)

8. LA28 Compact (MEDLINE® CARELINE® TECHLINE®)



WE IMPROVE YOUR LIFE

DESIGNED IN DENMARK

Item No. : 28110A-00100030
 Prod. Date : 2014.06.17 S.O.7654321
 Max Load : Push 2000 N IPX0
 Power Rate: 24 V = / Max. 2.3 A

Duty Cycle: 10%, Max. 2 min. / 18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS A OUVRIER PAR PERSONNEL NON-AUTORISE



P.O.12345678-0001 MADE BY LINAK A/S DENMARK

The LA28 Compact is a small and powerful actuator designed for use in system solutions for healthcare equipment or industrial applications. Ideal applications are for example wheelchairs, treatment chairs, patient lifts or beds.

Usage:

- Duty cycle: Max 10 % or max. 2 min. continuous use followed by 18 min. not in use.
- Ambient temperatures: + 5 °C to + 40 °C
- Compatibility: CB8, CB12, CB14 and CBJ
- Approvals: IEC 60601-1, ANSI/AAMI ES60601-1 and CAN/CSA-22.2 No 60601-1



Recommendations

- *LINAK control boxes are designed so that they will short-circuit the motor terminals of the actuator(s), when the actuator(s) are not running. This solution gives the actuator(s) a higher self-locking ability. If the actuator(s) are not connected to a LINAK control box, the terminals of the motor must be short-circuited to enable selflocking of the actuator.
- Min. stroke length for LA28 with splines is 80 mm
- The current supply to LINAK actuators must be cut off in case of overload and when the actuators reach end position.
- Ambient operating temperature is 22 °C.
- LA28 Compact cannot be used in pull applications, unless fitted with an aluminium back fixture.

Further information:

Noise level:

 
- LA28: dB(A) 45; measuring method DS/EN ISO 3743-1, actuator not loaded
- LA28S: dB(A) 54; measuring method DS/EN ISO 3743-1, actuator not loaded

Material:

- The piston rod eyes are "crimped" in place and cannot be screwed loose.



"Crimped" piston rod eye



Piston rod without eye (are not tested)

9. LA29 (HOMELINE®)



WE IMPROVE YOUR LIFE

Item No. : 296100-0115005A
 Prod. Date : 2009.03.18 S.O.7654321
 Max Load : Push 1000 N
 Power Rate: 24 V = / Max. 3.5 A

Duty Cycle: 10%, Max. 2 min. / 18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL



P.O.123456-0001 MADE BY LINAK A/S DENMARK

The LA29 actuator is a HOMELINE® actuator specially made for domestic applications. The actuator has a very short installation dimension as the distance between the two fixing points is small when the actuator is retracted and at the same time independent of the stroke length. This feature makes the actuator ideal as a lifting actuator for self-lifting recliners.

Another special feature here is the flexible back fixture, which can adapt misalignments in e.g. a recliner application.

The LA29 is compatible with various HOMELINE® control boxes.

Reed switch:

The Reed switch gives a number of pulses for each rotation of the motor. These pulses are used to calculate the position as well as to control several actuators running in parallel.

Your nearest LINAK dealer can inform the number of pulses per stroke length.

Regarding Reed-switch connection, **see Figure 6.10**.

Hall

The Hall principle is very similar to the Reed principle. A Hall sensor is based on a magnet that rotates. Two hall sensors are placed close to the magnet field. The control box (CB20/CB6S OBF/CB16 OBF/CBD4/CBD5) can detect whenever the magnetic field changes direction.

The two Hall sensors are placed close to each other, but with a small displacement. This distance leads to a timing difference between the two pulses. Whichever one of them comes first indicates the direction of movement. Therefore, there will be no error summary (as with the reed switch) Hall is therefore a very precise system. Hall is not suitable for use in quick release actuators - **see figure 10**.

Built-in end-stop circuit

The end-stop switch is part of the actuator construction. Each time the actuator reaches end-stop position the switch is activated and the current is cut off.



Warning

Do only use the actuator within specified working limits.



Designed in Denmark
DK - 6430 Nordborg

Item No. : 3011P0-00100504

Prod. Date : 2016.09.27

Max Load : Push 3000 N IPX0

Power Rate : 12 V = / Max. 16.5 A

Duty Cycle : 10%, Max. 2 min./18 min.



NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISE



W/O #2775610-0001 MADE BY LINAK A/S DENMARK

The actuator can be supplied with options such as built-in potentiometer for servo operation or an extra powerful motor for increased speed and strength (S-motor).

In addition to industrial and agricultural applications, the actuator is also ideal for positioning satellite dishes.

Usage:


- Duty cycle: 10 %, 2 minutes continuous use followed by 18 minutes not in use
- Ambient temperature: + 5 °C to + 40 °C
- Storage temperature: - 40 °C to + 70 °C
- Compatibility: CB8, CB12,
- Approvals: IEC 60601-1, ANSI/AAMI ES60601-1 and CAN/CSA-22.2 No 60601-1
- Should the LA30 be used with a non LINAK control unit, please ask the nearest LINAK representative for further details



Recommendations

LINAK control boxes are designed so that they will short-circuit the motor terminals (poles) of the actuator(s), when the actuator(s) are not running. This solution gives the actuator(s) a higher self-locking ability. If the actuator(s) are not connected to a LINAK control box the terminals of the motor must be short-circuited to achieve the self-locking ability of the actuator.

Improved self-locking ability

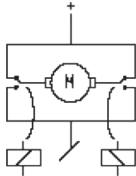

The H-bridge ensures that the motor is shorted when the relays are inactive. This is necessary to improve the self-locking of the actuator.



When using the LA30 with stereo jack plug be aware of the reversed direction of travel as standard.



The current supply to LINAK actuators must be cut off in case of overload when the actuators reach end position.


Various other information:

Noise levels:


LA30: dB(A) 50; LA30S: dB (A) 55; LA30L: dB(A) 48.

Measuring method DS/EN ISO 3743-1, actuator not loaded.

LA30 Actuator with potentiometer

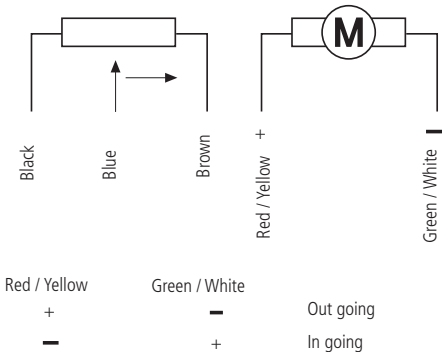

LA30 Actuator with reed (only possible with 24V L-motor)

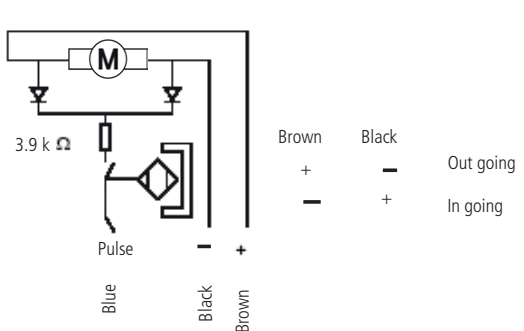

Please note that the voltage level og feedback signal depends on the actuator load.



WE IMPROVE YOUR LIFE

DESIGNED IN DENMARK

Item No. : 311100+2015004E

Prod. Date : 2014.06.20 S.O.6415420

Max Load : Push 6000 N IPX4

Power Rate: 24 V = / Max. 4.3 A

Duty Cycle : 10%, Max. 2 min./18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS A OUVRIER PAR PERSONNEL NON-AUTORISE

CE, RoHS, and other compliance symbols.

P.O.2140274-0001 MADE BY LINAK A/S DENMARK

The LA31 is a compact, quiet and powerful actuator designed for a variety of applications in the MEDLINE® & CARELINE® segment, such as hospital beds, couches and nursing home beds.

The standard LA31 actuator features known parts such as piston rod eye with slot, and comes in different variations with e.g. fast motor, hall positioning and emergency lowering. The LA31 actuator has exchangeable cables and is ideal in combination with OpenBus™ control boxes.

The LA31 actuator has an ingress protection of IPX6 and is available in version with up to 6000N in push and 4000N in pull.

Usage

- Duty cycle: Max 10 % or 2 minutes continuous use followed by 18 minutes not in use
- Cycles: The LA31 life cycle test has been performed with a stabilised power supply (10 % duty cycle) on a 200 mm stroke actuator at max. load for 10,000 cycles (at ambient temperature)
- Ambient temperature: + 5 °C to + 40 °C
- Approvals: IEC 60601-1, ANSI/AAMI E560601-1 and CAN/CSA-22.2 No 60601-1



To avoid damage to the actuator

When the application is in the "rest" position there should be no load/tension on the actuator.


If electrical end stop fails to function the actuator will continue to retract or extend until mechanical end stop is reached.

The application of the customer must be able to obtain or withstand an actuator with failing electrical end stop.

Minimum length of actuator reaching mechanical end stop: nominal BID - 7 mm.

Maximum length of actuator reaching mechanical end stop: nominal BID + nominal SL + increase + 7 mm.

Mounting bracket instructions:

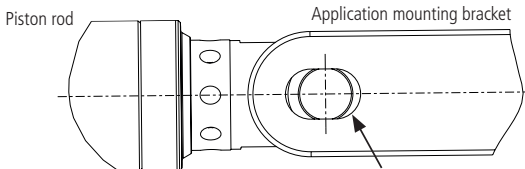

- LA31 with internal quick release types A and B is not designed for use in pull.
- The necessary release force on an actuator with 5mm pitch is 75 kg for 6 mm pitch = 50 kg.
- LA31 with quick release is always with brake (push).
- The flexible back fixtures (05 or 06) must be standard when the LA31 is equipped with quick release.
- When operating the QR function of QR types A and B, the QR must be activated all the way down. Otherwise the QR will no longer function.

Mounting of the release cable:

Fig 1. Removal of QR cover.



Use only light pressure near the snap-on flanges to lift the cover.

Fig. 2. QR cover removed.




Here the cover is removed and the cable mounting can be seen.

Fig. 3. Replacement of QR cover.



Use only a small amount of pressure to replace the QR cover.

Max. angle of movement:

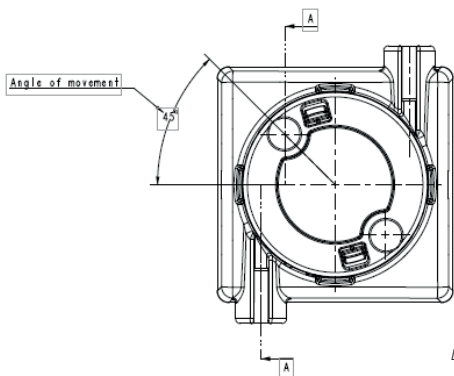

Note: To ensure operation the Quick Release must be rotated 45 °C (max.) due to tolerance/load variation. Some units may operate before 45 °C is reached. To avoid damaging the QR, it should not go above 45 °C.


Drawing no.: 031944



Recommendations

- The release cable has to be provided by the customer.
- The design of the release cable has to be as specified.
- It is important to observe the max. active (the moving part of the cable) cable length of 12 mm. Do not pull more than this length otherwise the QR will be damaged!
- The force required to operate the Quick Release is approx. 5 kg.
- When more than the recommended 5 kg force is used to activate the QR, more friction will be created in the internal actuator/QR mechanism. This means that a greater load will be required to ensure successful operation.
- The QR cover is supplied attached to the actuator but not mounted.
- LA31 with external quick release, types I, K, L, and M can maximum pull 200 N.
- The necessary release force on an actuator with 5 mm pitch is 75 kg for 6 mm pitch = 50 kg.
- It is not possible to combine splines with the external quick release.
- LA31 with quick release is always with brake (push).
- The flexible back fixtures (05 or 06) must be standard when the LA31 is equipped with quick release.
- LA31 with brake. An LA31 brake in a push application brakes actively when the actuator moves in an inward direction. The same applies to an actuator mounted with a brake in a pull direction. It brakes in an outward direction. Under this condition the standard motor uses up to 4 Amp. and the fast motor uses up to 6 Amp. (Measured after 5 cycles at normal room temperature). Therefore if the LA31 with brake is used together with a CB7 it is important that the current cut-off limit of the control box is higher than the used Amp. i.e. not lower than 4 Amp. LA31 with brake cannot be combined with CB9/CB7 with emergency lowering. For all LA31 actuators with brake self-locking ability up to max. load it is only possible in one direction: push or pull.
- The LA31 actuator must not be exposed to more than 4000 N in pull. In applications where misalignments may occur the normal back fixture can take max. 1500 N in pull whereas the flexible back fixture can take up to 4000 N in pull. The actuator must be mounted at right angles (90 °C) to it is fixing/load (max. 1.5 °C deviation)
- LA31 actuators with protection class IPX6 must be mounted with the screw holes mounted facing downwards. To ensure that any water remaining from cleaning / washing is not collected in the screw holes.

Correct mounting:

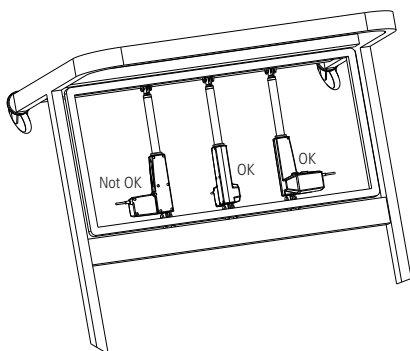

Warning

- If an LA31 is used in an application where there are repeated dynamic (push/pull) movements in the area 2000 - 4000 N, then it is necessary to contact LINAK A/S in order to make a correct specification of the actuator. Repeated push/pull movements cause extra strain to the actuator and can give safety considerations, the consequence being possible damage to the actuator.
- The LA31 actuator must not be exposed to more than 4000 N in pull. In applications where misalignments may occur, the normal back fixture can take max. 1500 N in pull, whereas the flexible back fixture can take up to 4000 N in pull.
- The actuator must not be used in pull applications when the Quick Release is activated, as the risk of personal injury can arise.
- Bowden cable must click twice, in order to be locked sufficiently.
- Do not sideload the actuator.
- Inspect the actuator minimum once a year for wear and jarring sound.
- If a LA31 is used in an application where there are repeated dynamic (push/pull) movements in the area 2000 - 4000 N, then it is necessary to contact LINAK A/S in order to make a correct specification of the actuator. Repeated push/pull movements cause extra strain to the actuator and can give safety consideration, the consequence being possible damage to the actuator.



LA31 actuators for patient hoists are marked with a label to ensure the user is aware that it is not permitted to handle the patient hoist by pulling the actuator or otherwise expose it to side forces.

LA31 with mechanical end stop - a first failure safe option:

In many applications our customers have approvals according to EN 60601-1.

The typical applications can be beds, massage couches etc.

In the norm, EN 60601-1, it is mentioned that the application must be first failure safe.

The manufacturer is responsible for making a risk analysis in order to check this. If a risk is identified it is the manufacturer of the application who makes sure that the risk is eliminated.

Normally the result of this risk analysis will state that the end stop switch in the LA31 would be questioned: Is this switch first failure safe?

The answer to this will be: No, a switch cannot be first failure safe. - In practical life we have discovered only very few defect switches.

Ask the customer: - What was the result of your risk analysis when you achieved the EN 60601-1 approval on your application?

There are several ways that an application can be made first failure safe:

- Use a mechanical stop in the application
- Use of a mechanical end stop in LA31 - is a possible option.
- Use an SLS (safety limit switch) in connection with the actuator.
- As a special solution we can offer LA31 with mechanical end stop with the same installation dimension as a standard LA31.

Contact LINAK A/S for further information if you need this solution.

LA31 with manual lowering

The purpose of the ML (Manual Lowering) is in case of a power failure, to be able to mechanically lower a patient by turning the ML part in the clockwise direction until the actuator is fully lowered.



Recommendations:

- An addition of 35 mm to installation dimension compared to standard (with spline)
- Only for push applications
- Use spline actuators
- Cannot be retro fitted



WE IMPROVE YOUR LIFE

DESIGNED IN DENMARK

Item No. : 32K500-00150412

Prod. Date : 2014.06.20 S.O.6125402

Max Load : Push 6000 N IPX5

Power Rate: 24 V = / Max. 5.3 A

Duty Cycle : 10%, Max. 2 min./18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS A OUVRIR PAR PERSONNEL NON-AUTORISE



P.O.2140274-0001 MADE BY LINAK A/S DENMARK

The LA32 actuator is a powerful actuator that can be supplied with a ball screw spindle to give outstanding performance. The ideal choice for a wide range of applications including adjustment of hospital beds.

The LA32 actuator has many special options including a safety nut, splines, quick release (F) and an optional protection up to IPX6 standard.

Reed-switch:

The Reed-switch gives a number of pulses for each rotation of the motor. These pulses are used to calculate the piston rod's position as well as to control several actuators running in parallel.

Your nearest LINAK dealer can inform the number of pulses per stroke length.

Regarding Reed-switch connection, see **Figure 6.10**.

 
Usage:

- Duty cycle: Max. 10 % or 2 minutes continuous use followed by 18 min. not in use
- Ambient temperature: + 5 °C to + 40 °C
- For use with LINAK control boxes CB8, CB12, CB14 and CS16 PCB or internal CS32 PCB
- Approvals: IEC 60601-1:2005, 3rd edition, ANSI / AAMI ES60601-1:2005, 3rd edition and CAN / CSA-22.2 No 60601-1:2008 approved



Recommendations

- The piston rod eyes are "crimped" in place and cannot be screwed loose.



- Piston rods without eyes have not been tested
- LA32 with quick release and free wheeling function must not be sold to new products



Maximum load in pull = 2000 N



LA32 actuators for patient hoists are marked with a label to ensure the user is aware that it is not permitted to handle the patient hoist by pulling the actuator or otherwise expose it to side forces.

Freewheeling of piston rod

All LA32 actuators with freewheeling as well as with quick release have the designation W on the label.

The function causes the following:

- The piston rod can be pulled out with a thrust of approx. 300 N and it remains in the new position without declutching.
- The actuator cannot pull, but only push.

Functional test:

It must be possible to pull the piston rod out with a thrust of approx. 300 N and it must remain in the new position without releasing. If this is not possible, contact your nearest LINAK dealer.

Built-in end-stop circuit (CS32)

In the LA32 actuators, with built-in CS32 A-, B- or C-PCB, the actuator is switched off at the end position or when overloaded.

LA32 actuator with:

- The CS32 A is standard IPX1 and is connected to a HB41 hand control with a telephone plug.
- The CS32 B is standard IPX5 and is connected to a HB41 hand control with a DIN plug. CS32 B is also available in IPX6.
- The CS32 C is standard IPX1 and is connected to an external contact or control. See **Figure 6.7**.

Mechanical spline:

The splines function so that the actuator can only push, not pull. During pull in the actuator, the inner tube is lifted off the thread bush, and the actuator can therefore never pull a load, only push. **See figure 8.**

Functional test of mechanical splines:

When the piston rod is at the innermost position, it must be possible to pull it out manually to its full travel length and to press it in again without much resistance and without using the motor. If this is not possible, contact your nearest LINAK dealer.

Electrical splines:

In the rear fixture on the actuator, a microswitch is fitted, which turns off the motor, if the actuator is exposed to pull forces.

Functional test of electrical splines

When the actuator is correctly fixed/mounted, the inward movement of the piston must stop, when the actuator is pulled or the movement is blocked, so that the back fixture is not put under undue stress/tension. For mounting, see **Figure 7.**

Quick release


When the quick release arm, **see Figure 9,** is turned counter clockwise approx. 75° and fixed here, the piston rod is released and can now be pressed in to its innermost position or pulled out to its outermost position. When the quick release arm is released, the arm turns back and the actuator functions normally again. The cable must not be tight.











Warning

- If the actuator does not work as described above, the risk of injury due to squeezing can arise. Therefore, the actuator must immediately be sent for service at the nearest, authorised LINAK workshop.
- The actuator must not be used in pull applications when the quick release is activated, as the risk of personal injury can arise.
- Do only use the actuator within specified working limits.

13. LA34 (MEDLINE® CARELINE®)



WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK
Item No. : 34420K-301502A0
Prod. Date : 2014.06.20 S.O.6125402 
Max Load : Push 3000 N
Power Rate: 24 V= / Max. 4 A
Duty Cycle : 10 %, Max. 2 min./18 min. IPX4 
 NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS A OUVRIR PAR PERSONNEL NON-AUTORISE 

P.O.2140274-0001   
MADE BY LINAK A/S DENMARK

LA34 is a technological state-of-the-art actuator that, due to its innovative construction can push up to 10000 N at a speed of 5 mm/sec. and with a current consumption of approx. 7 Amp. The strong LA34 actuator is made in a low weight composite material. Its compact design, the outstanding performance and a wide range of safety options makes LA34 the right choice for a variety of medical and industrial applications. The LA34 24V actuator is approved according to IEC 60601-1, ANSI / AAMI ES60601-1, and CAN / CSA-22.2 No 60601-1.

Reed-switch:

The Reed-switch gives a number of pulses for each rotation of the motor. These pulses are used to calculate the piston rod's position as well as to control several actuators running in parallel.

Your nearest LINAK dealer can inform the number of pulses per stroke length. Regarding Reed-switch connection, **see Figure 6.10.**

Options:

- Mechanical spline: When using the actuator in a vertical position, the force needed to activate the mechanical spline is maximum 60 N + the weight of the application. To reengage the spline function, a force of maximum 60N is needed. Same installation dim. as standard actuator.
- A modified Bowden cable holder is available (as a special article), with better cable alignment and improved guidance of the cables.
- Electric spline: When using the actuator in a vertical position, the force needed to activate the electric spline is maximum 100 N + the weight of the application. To reengage the spline function, a force of maximum 100 N is needed.

Usage:

- Duty cycle: 2/18 – 2 minutes continuous use followed by 18 minutes not in use
- Ambient temperature: + 5 °C to + 40 °C
- Compatibility: CB9 with EAS, CB12 with EAS, CB14*, CB18, CB20 and CBJ, CB6 OBL/ F, CB16 OBL/ F, (* = only possible with customized software)
- Approvals: IEC60601-1, ANSI / AAMI ES60601-1 and CAN / CSA-22.2 No 60601-1 for LA34 24V zinc and composite versions.



Recommendations

- Power supply without current cut-off can cause serious damage to the actuator if mechanical stop is encountered or the actuator movement is blocked in another way.
- LINAK control boxes are designed so that they will short-circuit the motor terminals (poles) of the actuator(s) when the actuator(s) are not running. This solution gives the actuator(s) a higher self-locking ability. If the actuator(s) are not connected to a LINAK control box the terminals of the motor must be short-circuited to achieve the self-locking ability of the actuator.



Warning

An LA34 actuator is not designed for repeated dynamic push-to-pull movements. This causes extra strain to the actuator and can give safety considerations, the consequence being possible damage to the actuator. Therefore, if repeated dynamic push-to-pull movements are essential for the application, perform tests to validate the performance and use a steel piston rod eye (contact LINAK A/S).



LA34 actuators for patient hoists are marked with a label to ensure the user is aware that it is not permitted to handle the patient hoist by pulling the actuator or otherwise expose it to side forces.



Tests show that uneven running can occur when retracting the LA34 composite actuator with a low load below 500N. This has no impact on the safety of the actuator and is caused by internal frictions.

If the LA34 actuator is used in connection with a non-LINAK power supply the system must be equipped with current trip cut-off.

Adjustment of the installation dimension N

As standard the installation dimension on the LA34 actuator can be manually adjusted by +4 / -0 mm (not possible for mechanical splines). The adjustment of the installation dimension must only be made without use of tools only, or hand). It is not allowed to use tools to adjust the installation dimension of the LA34 actuator as there is a risk that the inner tube may be unscrewed.

Hall

The Hall principle is very similar to the Reed principle. It is a control box, which based on Hall signals, can decide whether the actuator runs out or in. Hall, however, can detect whether the actuator runs in or out. The number of pulses is like Reed. Hall and Reed are placed opposite the potentiometer on the actuator's worm wheel. Therefore, it is not suitable for use in quick release /free wheeling actuators. **see figure 10.**

Potentiometer

The potentiometer function is mechanically attached to the spindle and registers the number of spindle revolutions. The signal from the potentiometer is measured in Ohm, where the lowest value is measured when the actuator has been run into inward switch stop. The potentiometer is a 10 - turn and therefore it is dependent on the stroke length/spindle pitch. **see figure 6.5**

Mechanical spline:

The splines function so that the actuator can only push, not pull. During pull in the actuator, the inner tube is lifted off the thread bush, and the actuator can therefore never pull a load, only push. See **Figure 8.**

Functional test of mechanical splines:

When the piston rod is at the innermost position, it must be possible to pull it out manually to its full travel length and to press it in again. When used in a vertical position the force needed to activate the mechanical spline is maximum 60 N + the weight of the application. To reengage the spline function, a force of maximum 60 N is needed. If this is not possible, contact your nearest LINAK dealer.

Electrical splines:

In the rear fixture on the actuator, a microswitch is fitted, which turns off the motor, if the actuator is exposed to pull forces.

Functional test of electrical splines

It is important that the actuator is correctly fixed with regard to the section on page 11. For mounting, see **Figure 7.**

When the actuator is correctly fixed/mounted, the inward movement of the piston must stop, when the actuator is pulled or the movement is blocked, so that the back fixture is not put under undue stress/tension.

Quick Release

LA34 (34xxxF/H) is equipped with a function which permits operation of the actuator should the power source fail. Condition for functioning: the actuator must be loaded in push direction (LA34xxxF) or pull direction (LA34xxxH).



Warning

- If the actuator does not work as described above, the risk of injury due to squeezing can arise. Therefore, the actuator must be sent immediately for service at the nearest, authorised LINAK workshop.
- The actuator must not be used in pull applications when the Quick Release is activated, as the risk of personal injury can arise.
- Do only use the actuator within specified working limits.

Activation of Quick Release

Pull the release handle in the direction of the piston rod eye (outwards), the harder you pull the button the quicker the actuator runs down.

When releasing the button the emergency lowering stops immediately. The emergency lowering is activated as long as the load on the actuator is above 100 - 150 kg. The actuator is ready for normal use when the emergency lowering is finished.

Safety device regarding functional failure of the nut (Safety nut):

The LA34 has a built-in safety nut in push as standard and is available with a safety nut in pull as an option. Actuators with safety nut in push can only function when used in push applications. The safety nut comes into operation should the main nut fail. Afterwards it is only possible to drive the actuator into the innermost position. Safety nut in pull is for pull applications and works the opposite way as described above. Thereafter, the actuator will not function any more and must be sent for service.

Built-in end-stop circuit

In the actuators mentioned the end-stop switch is part of the actuator construction. Each time the actuator reaches end-stop position, the switch is activated and the current is cut off.

LINAK® WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK

Type : 400401000A000B26+32CB127522002

Item No. : J08477

Prod. Date : 2014.12.18

Max Load : Push 8000-5500 N IPX6

Power Rate: 24 V= / Max. 6.4 A

Duty Cycle : 10%, Max. 2 min. / 18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ

W/O #1234567-0001 MADE BY LINAK A/S DENMARK



The LA40 is a low noise and powerful actuator which is available in a 1500N, 4000N, 6000N and an 8000N version. Based on the extensive knowledge and experience from previous actuator families, LINAK has developed new gear and braking principles that improve the efficiency of the new LA40. These innovative solutions are covered by several patents.

Usage:

- Duty cycle: 10 %, 2 minutes continuous use, followed by 18 minutes not in use
- Usage temperature: 5 °C to 40 °C
- Compatibility: CBHA220A software 30002001 version 1.08
In combination with TD4 software version 30002001, Version 1.21
- Relative humidity: 20 % to 90 % @ 30 °C - not condensing
- Atmospheric pressure: 700 to 1060 hPa
- Approvals: Will be approved according to EN60335-1



Please note that extension of the built-in dimension may reduce the safety factor.



If electrical endstop fails to function the actuator will continue to retract or extend until mechanical endstop is reached.

The application of the customer must be able to obtain or withstand an actuator with failing electrical endstop.

Minimum length of actuator reaching mechanical endstop: BID - 7 mm.

Maximum length of actuator reaching mechanical endstop: BID + SL + 7 mm.

**Recommendations**

- Power supply without current cut-off can cause serious damage to the actuator if a mechanical stop is encountered or the actuator movement is blocked in another way.
- Connection bolts must be dimensioned so that they have the necessary strength and tolerance in order to obtain the minimum safety factor according to the requirements of the authorities.
- The actuator must not be subject to a side load, as this can cause bending / collapse of the actuator. The actuator must never be used as a handle.
- The actuator must not be subject to off-centre loading, as this can cause bending / collapse of the actuator.
- The actuator must not be subject to impact, or any form of stress to the casing.
- The actuator must not be subject to overload, as this can reduce the lifetime of the actuator and in the worst case cause damage to the actuator.
- The actuator must never be used in dynamic pull applications, as this can cause collapse.
- Only use the actuator within the specifications.
- Connection bolts and brackets are to be inspected in connection with service, and must be replaced if there are signs of wear.
- Ensure that the cable lock is mounted correctly.
- Ensure that the duty cycle and the usage temperatures for LA40 actuators are respected.
- Ensure that the cable cannot be squeezed, pulled or subjected to any other stress.
- The LA40 is not suitable for use in outdoor applications where it can be exposed to sun and rain.

**Warning**


- The installation of spline actuators is recommended by LINAK where possible to avoid the squeezing of body parts.
- End of life issue: defective switches - endstop:
If the electrical endstop switch for outward operation fails, it may cause a prolonged actuator stroke and in addition the customer application may collapse. To avoid this, the manufacturer must take this into account when designing and making a risk analysis.

Instruction concerning the turning of the piston rod eye

When mounting and taking into use, it is not permitted to turn the piston rod eye several times.

In cases where the eye is not positioned correctly, the eye must be screwed to its bottom position

(1) and then maximum half a turn outwards again (2).

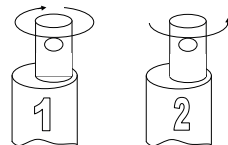**Mounting bracket instructions**

To avoid damage to the actuator, it is important that the actuator drives to the application endstop position and continues to operate in the groove until it activates the electric actuator endstop.



LINAK® WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK

Type : 400401000A000B26+32CB127522002

Item No. : J08477

Prod. Date : 2014.12.18

Max Load : Push 8000-5500 N IPX6

Power Rate : 24 V $\bar{=}$ / Max. 6.4 A

Duty Cycle : 10%, Max. 2 min. / 18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS OUVRIER PAR DU PERSONNEL NON AUTORISÉ

W/O #1234567-0001 MADE BY LINAK A/S DENMARK



The LA40 is a low noise and powerful actuator which is available in a 1500 N, 4000 N, 6000 N and an 8000 N version.

With the LA40, LINAK offers a new durable actuator with high speed/high performance and mechanical endstop for first failure safety making it the right choice for the future market. The LA40 versions are rated up to IPX6 Washable DURA™, except for the LA40 PL version which is rated up to IPX6.

The LA40 8000 N is available in three versions:

- Standard
- High Performance (HP)
- Patient Lift (PL)

Usage:

- Duty cycle: 10 %, 2 minutes continuous use, followed by 18 minutes not in use
- Usage temperature: 5 °C to 40 °C
- Storage temperature: -10 °C to 50 °C
- Relative humidity: 20 % to 90 % @ 30 °C - not condensing
- Atmospheric pressure: 700 to 1060 hPa
- Flammability rating: UL94V-2
- Approvals: IEC 60601-1, ANSI/AAMI ES60601-1, CAN/CSA-C22.2 No 60601-1

**Warning**

- The installation of spline actuators is recommended by LINAK where possible to avoid the squeezing of body parts.
- The installation of Manual Lowering (ML) is recommended by LINAK where possible to avoid the squeezing of body parts.
- Activation of a quick release can lead to a risk of squeezing body parts. Installation of a damper may reduce this risk.
- A quick release can accidentally be activated during mounting or maintenance. To avoid this, operators must be warned before service/mounting.
- End of life issue: defective switches - endstop:
If the electrical endstop switch for outward operation fails, it may cause a prolonged actuator stroke and in addition the customer application may collapse. To avoid this, the manufacturer must take this into account when designing and making a risk analysis.
- If electrical endstop fails to function the actuator will continue to retract or extend until mechanical endstop is reached.
The application of the customer must be able to obtain or withstand an actuator with failing electrical endstop.
Minimum length of actuator reaching mechanical endstop: BID - 7 mm.
Maximum length of actuator reaching mechanical endstop: BID + SL + 7 mm.
- If the actuator does not work as described above, the risk of injury due to squeezing can arise. Therefore, the actuator must immediately be sent for service at the nearest, authorised LINAK workshop.

 
**Recommendations**

- Power supply without current cut-off can cause serious damage to the actuator if a mechanical stop is encountered or the actuator movement is blocked in another way.
- Connection bolts must be dimensioned so that they have the necessary strength and tolerance in order to obtain the minimum safety factor according to the requirements of the authorities.
- The actuator must not be subject to a side load, as this can cause bending/collapse of the actuator. The actuator must never be used as a handle.
- The actuator must not be subject to off-centre loading, as this can cause bending/collapse of the actuator.
- The actuator must not be subject to impact, or any form of stress to the casing.
- The actuator must not be subject to overload, as this can reduce the lifetime of the actuator and in the worst case cause damage to the actuator.
- The actuator must never be used in dynamic pull applications, as this can cause collapse.
- Only use the actuator within the specifications.
- Connection bolts and brackets are to be inspected in connection with service, and must be replaced if there are signs of wear.
- Ensure that the cable lock is mounted correctly.
- Ensure that the duty cycle and the usage temperatures for LA40 actuators is respected.
- Ensure that the cable cannot be squeezed, pulled or subjected to any other stress.
- The LA40 is not suitable for use in outdoor applications where it can be exposed to sun and rain.
- LA40 with mechanical endstop - a first failure safe option:
In many applications customers have approvals in accordance with EN 60601-1. The typical applications are beds, massage couches etc. The norm EN 60601-1 states that the application must be first failure safe. The manufacturer has the responsibility of carrying out a risk analysis in order to check this. If a risk is identified, the application manufacturer must ensure that this risk is eliminated. A switch cannot be first failure safe.
- If there is a risk of "pull forces" in the application, the actuator must be equipped with spline functionality to avoid damage in pull.
- Patient lift and stand aids:
 - Long installation dimension: must always be used for patient lifts
 - Do not hold the inner or outer tube while the actuator is running. There can be a risk of squeezing between the manual lowering unit and the outer tube.
 - Always use the ratchet spline functions for patient lifts.
- LA40 8000 N PL actuators for patient lifts are marked with a label to ensure that the user is aware that it is not allowed to pull the actuator or otherwise expose it to side forces when handling the patient lift.



Instruction concerning the turning of the piston rod eye

When mounting and taking into use, it is not permitted to turn the piston rod eye several times. In cases where the eye is not positioned correctly, the eye must be screwed to its bottom position (1) and then maximum half a turn outwards again (2).




Mounting bracket instructions

To avoid damage to the actuator, it is important that the acuator drives to the application endstop position and continues to operate in the groove until it activates the electric actuator endstop.



To avoid accumulated water inside the quick release lid (see illustration to the right) it is recommended not to mount the LA40 quick release actuator with the lid in downward position.

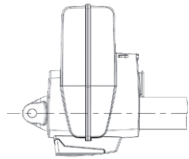

Manual lowering:

The picture to the right illustrates the manual lowering procedure.

In case of a power failure, it is possible to mechanically lower a patient placed in a patient lift. When turning the manual lowering handle clockwise, the actuator can be moved fully inwards.

 


Spline:

- Required minimum push load 200 N on the actuator to allow inward movement (otherwise the spline can be activated) (picture 1).
- Required activation pull force during inward operation: <100 N to activate the ratchet spline to avoid squeezing situations (picture 2).
- For QR versions:

Force required to manually activating spline (actuator not in operation): Static pull force = 300 - 550 N.


For manual pull out (extend) of the inner tube (picture 3).



Push:
200 N
(Ratchet spline for
HP and PL versions)




Pull:
< 100 N
(Ratchet spline for
HP and PL versions)

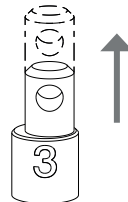


Pull:
300 - 550 N
(Ratchet spline for
QR versions)

Mounting of the quick release cable:

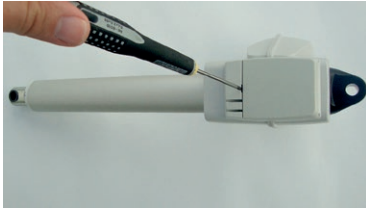


Open the quick release lid using a flat-head screwdriver. Push and twist in release hole.

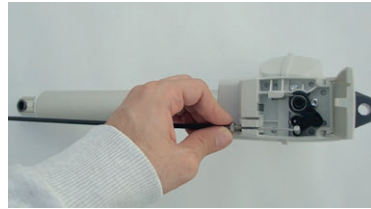

Mount the cable in one of the assigned cable mounting holes. For dual release grips, use both holes. Place cable collar in groove.



Adjust the cable with nut and make sure that the quick release is functional.

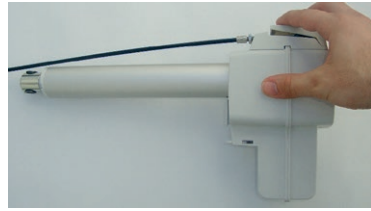

After closing the lid, the quick release is ready to be used.

Force required to operate the quick release is approximately:

- 35 N at 750 N load
- 60 N at 4000 N load

Travel of cable:


- travel until quick release approx. 15 mm
- maximum travel to endstop approx. 23 mm

The customer application design must ensure that the quick release cable cannot be pulled the full travel-to-end-stop with excessive pull force. This is to protect the quick release unit.

When operating the quick release function, the quick release must be activated all the way down and not stopped halfway.

Load curves:

LA40 Standard, HP and PL:

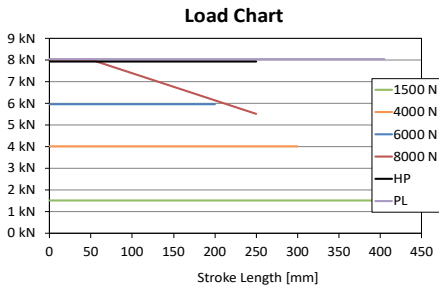

LINAK **Designed in Denmark**
DK - 6430 Nordborg

Type : 43040390A000B4-212J106842D0100

Item No. : J15273

Prod. Date : 2016.12.14

 
Max Load : 8000 N IPX4

Power Rate: 24 V= / Max. 8 A

Duty Cycle : 10%, Max. 2 min./18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS OUVRIIR PAR DU PERSONNEL NON AUTORISE

W/O #-0001



The LA43 is available in a powerful 8,000N version, ensuring safe patient handling. With the LA43 actuator, LINAK offers a product, which with its wide range of safety options, low noise level, and outstanding performance is the right choice for medical applications such as patient lifts, beds, dental chairs etc.

Usage:

- Duty cycle: 10 %, 2 minutes continuous use followed by 18 minutes not in use
- Usage temperature: +5 °C to +40 °C
- Storage temperature: - 10 °C to + 50 °C
- Compatibility: CBJ1/2, CBJ-Home, CBJ-Care, CB6S, CB16, CB20
- Approvals: IEC60601-1

**Recommendations**

- The actuator is not suitable for outdoor applications
- Power supply without current cut-off can cause serious damage to the actuator if a mechanical stop is encountered or the actuator movement is blocked in another way.
- If there is a risk of "pull forces" in the application, the actuator must be equipped with electrical spline to avoid damage in pull.
- If the actuator is operated without load (e.g. loose on a table) the electrical spline can activate and the actuator cannot run in an inwards direction. Push the back fixture and the actuator can be operated again.
- Connection bolts must be dimensioned so that they have the necessary strength in order to obtain the minimum safety factor according to the requirements of the authorities.
- The actuator must not be subject to a side load, as this can cause bending. It is also for this reason that the actuator should not be used as a handle, e.g. pulling a patient hoist sideways.
- The actuator must not be subject to off centre loading, as this can damage the actuator.
- The actuator must not be subject to impact, or any form of stress to the casing.
- The actuator must not be subject to overload, as this can reduce the lifetime of the actuator and in the worst case cause damage to the actuator.
- The actuator must not be used in pull applications, as this can cause collapse.
- Only use the actuator within the specified working limits.
- It is recommended that the actuator is serviced according to the relevant national norms for the applications in which the actuator is used.
- Connection bolts and brackets are to be inspected in connection with service, and must be replaced if there are signs of wear.
- The safety function: Electrical Spline, should be checked in connection with service. The function is checked by applying a straight pull, of max. 100 N, to the back fixture. The actuator must not be able to run in an inward direction. Hereafter press the back fixture against the housing and the actuator can run in an inward direction.
- The actuator should be cleaned regularly, in order to maintain a good hygiene.
- The application must be tested for correct functionality before putting it back into operation.
- Do not step or kick on the actuator as it may damage the housing or the motor.

Patient Lifts and Stand Aids:

- Long installation dimension: Must always be used for patient lifts.
- Do not hold the inner or outer tube while the actuator is running. There can be a risk of squeezing between the Manual Lowering unit and the outer tube.
- Do always use the electrical spline function for patient lifts



LA43 actuators for patient hoists are marked with a label to ensure the user is aware that it is not permitted to handle the patient hoist by pulling the actuator or otherwise expose it to side forces.

**Warnings**

It is not allowed to use tools to adjust the installation dimension of the LA43 actuator as there is a risk that the inner tube may be unscrewed.

Self-locking ability

- LINAK control boxes are designed so that they will short-circuit the motor terminals (poles) of the actuator(s), when the actuator(s) are not running. This solution gives the actuator(s) a higher self-locking ability. If the actuator(s) are not connected to a LINAK control box, the terminals of the motor must be short-circuited to achieve the self-locking ability of the actuator.



Manual lowering:

The following pictures illustrate the manual lowering procedure.

Fig. 1. Manual Lowering

In case of a power failure it is possible to mechanically lower a patient placed in a patient hoist. When turning the manual lowering handle clockwise the actuator can be moved fully inwards.

Fitting the plug/smart cable lock

The following pictures illustrate how to fit the plug connection using the smart cable lock manual lowering procedure.



Fig. 1

Step 1:

Insert the cable in the socket. Make sure the O-ring on the cable is fully inserted..

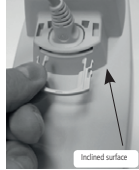


Fig. 2

Step 2:

Attach the cable lock. Make sure the inclined surface is facing upwards.



Fig. 3

Step 3:

Push the cable lock inside the slot. If necessary, the cable can be pushed down at the same time to ease the cable lock mounting.

LINAK Designed in Denmark
DK - 6430 Nordborg

Type : 43040205A050B6-2120103802D0210


Item No. : J14972

Prod. Date : 2016.12.14

Max Load : 8000 N IPX6

 us 120690

Duty Cycle : 10%, Max. 2 min./18 min.

 NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS OUVRIR PAR DU PERSONNEL NON AUTHORIZÉ

W/O #-00001



Software :02013513 Ver:1.00

The LA43 Intelligent Control (IC) enables a simple system consisting of 1 or 2 actuators, a Switch Mode Power Supply and a hand control or a footswitch. The system is for example an advantage when there is no space for a control box.

Usage:

- Duty cycle: 10 %, 2 minutes continuous use followed by 18 minutes not in use
- Usage temperature: + 5 °C to + 40 °C
- Storage temperature: -10 °C to + 50 °C
- Compatibility: SMPS30
- Approvals: IEC60601-1

**Recommendations**

- The actuator is not suitable for outdoor applications
- If there is a risk of "pull forces" in the application, the actuator must be equipped with electrical spline to avoid damage in pull.
- If the actuator is operated without load (e.g. loose on a table) the electrical spline can activate and the actuator cannot run in an inwards direction. Push the back fixture and the actuator can be operated again.
- Connection bolts must be dimensioned so that they have the necessary strength in order to obtain the minimum safety factor according to the requirements of the authorities.
- The actuator must not be subject to a side load, as this can cause bending. It is also for this reason that the actuator should not be used as a handle, e.g pulling a patient hoist sideways.
- The actuator must not be subject to off centre loading, as this can damage the actuator.
- The actuator must not be subject to impact, or any form of stress to the casing.
- The actuator must not be subject to overload, as this can reduce the lifetime of the actuator and in the worst case cause damage to the actuator.
- The actuator must not be used in pull applications, as this can cause collapse.
- Only use the actuator within the specified working limits.
- It is recommended that the actuator is serviced according to the relevant national norms for the applications in which the actuator is used.
- Connection bolts and brackets are to be inspected in connection with service, and must be replaced if there are signs of wear.
The safety function: Electrical Spline, should be checked in connection with service.
The function is checked by applying a straight pull of max. 100 N to the piston rod.
The actuator must not be able to run in an inward direction.
Hereafter press the piston rod and the actuator can run in an inward direction.
- The actuator should be cleaned regularly, in order to maintain a good hygiene.
- The application must be tested for correct functionality before putting it back into operation.
- Do not step or kick on the actuator as it may damage the housing or the motor.

Safety concept:

The user is a part of the safety concept. A light on the SMPS30 is green when a button on the hand control is not activated. When a switch is activated the light changes to orange. Orange indicates that power request is on.

When the light is orange and a button is not activated there is a fault on the system. And the user must call for service.

Cable connections:



Fig. 1

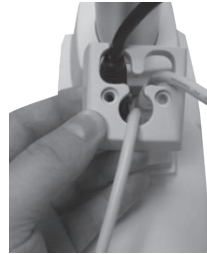


Fig. 2

Step 1:

Insert the cables in the sockets.

Make sure the O-rings on the cables are fully inserted.

Step 2:

Insert the cables into the cable lock.

Make sure that the correct cables are placed in the corresponding holes.

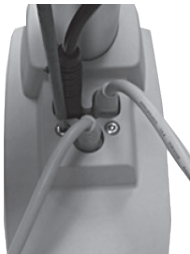


Fig. 3


Step 3:







Attach the cable lock and secure it with screws.

The tightening torque should be 0.4 Nm.

Cable connection and cable lock:

Tighten the two screws with approx. 0.4 Nm torque to secure the cable lock. Cable lock and screws to be ordered separately.



WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK
 Item No. : 442104+5L3001A0
 Prod. Date : 2014.06.20 S.O.6412569 
 Max Load : Push 12000 N
 Power Rate: 24 V= / Max. 9.5 A
 Duty Cycle : 10 %, Max. 2 min. / 18 min. IPX4 
 NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
 NE PAS A OUVRIER PAR PERSONNEL NON-AUTORISE 

 P.O.2114579-0001  
 MADE BY LINAK A/S DENMARK

The LA44 is available in powerful 10,000 N and 12,000 N versions, ensuring safe patient handling.

With the LA44 actuator, LINAK offers a product, which with its wide range of safety options, low noise level, and outstanding performance is the right choice for medical applications such as patient lifts, beds, dental chairs etc.

Usage:

- **Electrical spline functionality:** Electrical spline; can be combined with manual lowering. The Electrical-spline switch is mounted inside LA44. It activates on a pulling movement of the slightly moveable back fixture. When using the actuator in a vertical position, the force needed to activate the electric spline is maximum 100 N + the weight of the application. To reengage the spline function, a force of maximum 100 N is needed.
- **Mechanical spline functionality:** When using the actuator in a vertical position, the force needed to activate the mechanical spline is maximum 60 N + the weight of the application. To reengage the spline function, a force of maximum 60 N is needed.
- **Duty cycle:** 10 %, 2 minutes continuous use followed by 18 minutes not in use
- **Usage temperature:** 5 °C to 40 °C
- **Storage temperature:** - 10 °C to + 50 °C
- **Compatibility:** CBJ1/2, CBJ-Home, CBJ-Care, CB6s, CB16, CB20
- **Approvals:** IEC 60601-1, ANSI/AAMI ES60601-1 and CAN/CSA 22.2 No 60601-1



Recommendations:

- The actuator is not suitable for outdoor applications
- Power supply without current cut-off can cause serious damage to the actuator if a mechanical stop is encountered or the actuator movement is blocked in another way.
- If there is a risk of "pull forces" in the application, the actuator must be equipped with mechanical or electrical spline to avoid damage in pull.
- If the actuator is operated without load (e.g. loose on a table) the electrical spline can activate and the actuator cannot run in an inwards direction. Push the back fixture and the actuator can be operated again.
- Connection bolts must be dimensioned so that they have the necessary strength in order to obtain the minimum safety factor according to the requirements of the authorities.
- The actuator must not be subject to a side load, as this can cause bending. It is also for this reason that the actuator should not be used as a handle, e.g pulling a patient hoist sideways.
- The actuator must not be subject to off centre loading, as this can damage the actuator.
- The actuator must not be subject to impact, or any form of stress to the casing.
- The actuator must not be subject to overload, as this can reduce the lifetime of the actuator and in the worst case cause damage to the actuator.
- The actuator must not be used in pull applications, as this can cause collapse.
- Only use the actuator within the specified working limits.
- It is recommended that the actuator is serviced according to the relevant national norms for the applications in which the actuator is used.
- Connection bolts and brackets are to be inspected in connection with service, and must be replaced if there are signs of wear.
- The safety function: Electrical Spline, should be checked in connection with service.
 The function is checked by applying a straight pull, of max. 100 N, to the back fixture. The actuator must not be able to run in an inward direction. Hereafter press the back fixture against the housing and the actuator can run in an inward direction.
- The actuator should be cleaned regularly, in order to maintain a good hygiene.



LA44 actuators for patient hoists are marked with a label to ensure the user is aware that it is not permitted to handle the patient hoist by pulling the actuator or otherwise expose it to side forces.

Self-locking ability.

- LINAK control boxes are designed so that they will short-circuit the motor terminals (poles) of the actuator(s), when the actuator(s) are not running. This solution gives the actuator(s) a higher self-locking ability. If the actuator(s) are not connected to a LINAK control box, the terminals of the motor must be short-circuited to achieve the selflocking ability of the actuator.

Manual lowering:

The following pictures illustrate a) The manual lowering procedure and b) How to fit and remove the plug connection using the "Smart cable lock"

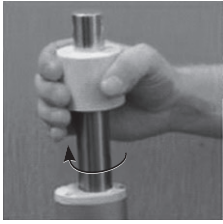


Fig. 1. Manual Lowering

In case of a power failure it is possible to mechanically lower a patient placed in a patient hoist. When turning the manual lowering handle clockwise the actuator can be moved fully inwards.

Fitting the plug/smart cable lock

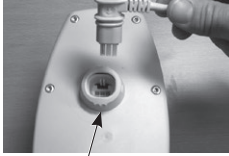


Fig. 1

Step 1:
The three flanges in this position indicate that the "smart cable locking" device is in the unlocked position.



Fig. 2

Step 2:
Position and press the cable plug into the socket.

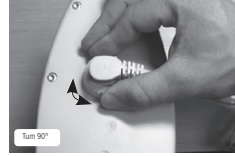

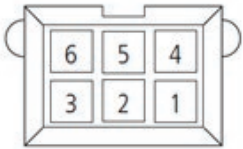


Fig. 3

Step 3:
Hold around the lock flanges and turn the lock either clockwise or anticlockwise. The cable is fully locked when turned 90 °C.




Feedback specifications

Potentiometer

Item	Specification	Comment														
Description	The actuator can be equipped with a potentiometer for precise positioning. The potentiometer is a variable resistance, the magnitude of which varies linearly with the position of the actuator rod.															
Type	ALPS RDC40, 0-10 kOhm $\pm 30\%$, linearity $\pm 1\%$															
Input voltage	3.3 V recommended															
Pin configuration	LA44 Mini-fit plug cable (potentiometer) <table border="1" data-bbox="266 1203 542 1422"> <thead> <tr> <th colspan="2">Potentiometer</th> </tr> </thead> <tbody> <tr> <td>Pin1</td> <td>Pot GND</td> </tr> <tr> <td>Pin2</td> <td>Vbus</td> </tr> <tr> <td>Pin3</td> <td>M+ (Motor/Power)</td> </tr> <tr> <td>Pin4</td> <td>Pot Position</td> </tr> <tr> <td>Pin5</td> <td>Pot + (3V3)</td> </tr> <tr> <td>Pin6</td> <td>M- (Motor/Power)</td> </tr> </tbody> </table>	Potentiometer		Pin1	Pot GND	Pin2	Vbus	Pin3	M+ (Motor/Power)	Pin4	Pot Position	Pin5	Pot + (3V3)	Pin6	M- (Motor/Power)	
Potentiometer																
Pin1	Pot GND															
Pin2	Vbus															
Pin3	M+ (Motor/Power)															
Pin4	Pot Position															
Pin5	Pot + (3V3)															
Pin6	M- (Motor/Power)															
Combinations	The potentiometer positioning cannot be combined with LA44IC.															


Feedback specifications

Hall

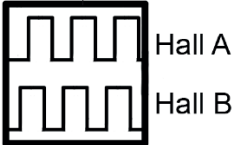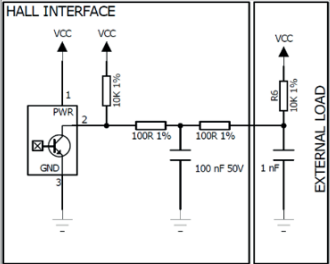Item	Specification	Comment														
Description	The actuator can be equipped with Dual Hall that gives a relative positioning feedback signal when the actuator moves.															
Input voltage	4-15V	The feedback circuit has to be powered 50 ms before driving and until the actuator has stopped moving														
Current	Maximum 15mA @10kΩ and 1nF load. See diagram.															
Pin configuration	LA44 Mini-Fit plug cable (hall) with feedback <table border="1" data-bbox="263 790 543 1005"> <thead> <tr> <th></th> <th>Hall</th> </tr> </thead> <tbody> <tr> <td>Pin1</td> <td>Hall GND</td> </tr> <tr> <td>Pin2</td> <td>Vbus</td> </tr> <tr> <td>Pin3</td> <td>M+ (Motor/Power)</td> </tr> <tr> <td>Pin4</td> <td>Hall A</td> </tr> <tr> <td>Pin5</td> <td>Hall B</td> </tr> <tr> <td>Pin6</td> <td>M- (Motor/Power)</td> </tr> </tbody> </table>		Hall	Pin1	Hall GND	Pin2	Vbus	Pin3	M+ (Motor/Power)	Pin4	Hall A	Pin5	Hall B	Pin6	M- (Motor/Power)	PCBA header top view 
	Hall															
Pin1	Hall GND															
Pin2	Vbus															
Pin3	M+ (Motor/Power)															
Pin4	Hall A															
Pin5	Hall B															
Pin6	M- (Motor/Power)															

Unlocking the plug/smart cable lock

Flanges in locked position

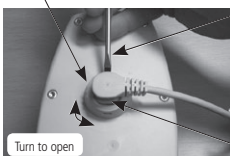

Press here with tool

Fig. 1

No tap on this side

Using a tool, release the lock (must be from the side shown) by pushing the tap (through the small slot in the side of the lock).

At the same time, turn the lock 90 °C in either direction to release the plug connection.



WE IMPROVE YOUR LIFE

DESIGNED IN DENMARK

Item No. : 442200+1L3001AG

Prod. Date : 2014.06.20 S.O.6178941

Max Load : Push 12000 N

Power Rate: 24 V= / Max. 9.5 A

Duty Cycle : 10 %, Max. 2 min. / 18 min. IPX4

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS A OUVRIR PAR PERSONNEL NON - AUTORISE



P.O.2114579-0001 MADE BY LINAK A/S DENMARK




The LA44 Intelligent Control (IC) enables a simple system consisting of 1 or 2 actuators, a Switch Mode Power Supply and a hand control or footswitch.

The system is for example an advantage when there is no space for a control box.

Usage:

- Duty cycle: 10 %, 2 minutes continuous use followed by 18 minutes not in use
- Usage temperature: + 5 °C to + 40 °C
- Storage temperature: -10 °C to + 50 °C
- Compatibility: SMPS30
- Approvals: IEC60601-1, ANSI/AAMI ES60601-1

Cable connections:

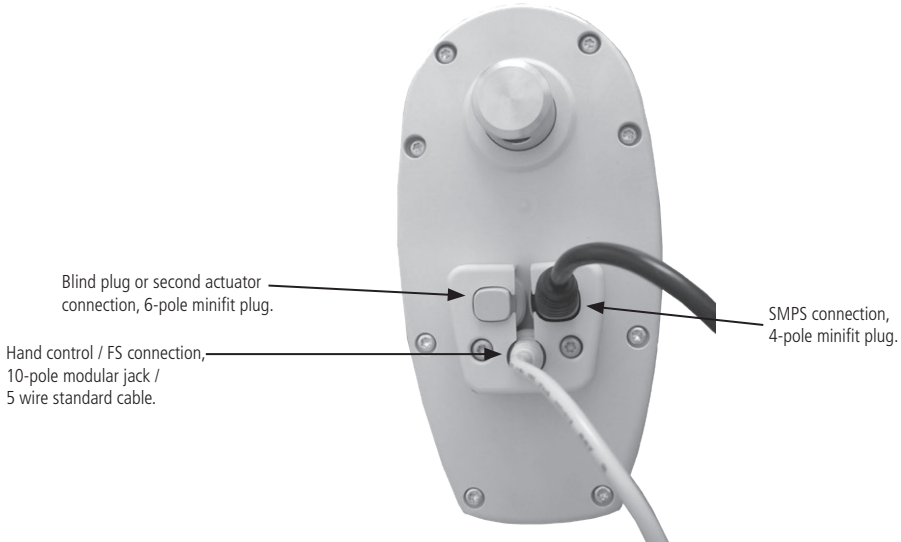

Cable connection and cable lock

Tighten the two screws with approx. 1.5 Nm torque, to secure the cable lock.

Precautions, Recommendations and Warnings - please see LA44 user manual

4. Information on specific columns

1. BB3 (MEDLINE® CARELINE®)



WE IMPROVE YOUR LIFE

DESIGNED IN DENMARK

Item No. : BB3610A03400345

Prod. Date : 2014.06.20 S.O.6145789

Max Load : Push 1600 N IPX0

Power Rate: 24 V= / Max. 3.5 A

Duty Cycle : 10 % , Max. 2 min./18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS A OUVRIER PAR PERSONNEL NON -AUTORISE



P.O.2114579-0001 MADE BY LINAK A/S DENMARK

The BB3 3-part telescopic actuator is the ideal choice for vertical lift of beds where design and easy integration in the customer's guidance ensures optimum freedom of design.

The BB3 is a 3-part telescopic actuator designed to meet EN 1970 for care beds, which demands an adjustment range from 350 mm up to 750 mm.

Reed-switch:

The Reed-switch gives a number of pulses for each rotation of the motor. These pulses are used to calculate the piston rod's position as well as to control several actuators running in parallel.

Your nearest LINAK dealer can inform you of the number of pulses per stroke length.

Regarding reed-switch connection, see **Figure 6.10**.

- The columns must be securely mounted before operation, no rotation must be possible
- The motor housing must be mounted uppermost.



Warning

Do only use the column within specified working limits.

2. BL1 (MEDLINE® CARELINE® TECHLINE®)



WE IMPROVE YOUR LIFE

DESIGNED IN DENMARK

Item No. : BL1411A01400A

Prod. Date : 2014.06.20 S.O.6148789

Max Load : Push 2000N IPX6

Power Rate: 24V= / Max. 4.4 A

Duty Cycle : 10% , max. 2 min./18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS A OUVRIER PAR PERSONNEL NON -AUTORISE



P.O.2114579-0001 MADE BY LINAK A/S DENMARK

The BL1 is a 3-part lifting column designed to be used for example in hospital beds, nursing home beds, treatment chairs, couches and dental chairs.

The lifting column is compact and has a long stroke length. The 3-part guidance enables an overlap between the individual profiles, which ensures a high degree of stability.

The lifting column has an open spindle actuator with a chain drive inside which is practically noiseless.

Usage:

- Duty cycle: 10%, 2 minutes continuous use followed by 18 minutes not in use
- Usage temperature: + 5 °C to + 40 °C
- Storage temperature: Max 50 °C
- Compatibility: CB6 OBL, CB6 OBF, CB16 and CB20
- Approvals: IEC60601-1, ANSI/AAMI ES60601-1, CAN/CSA-22.2 No 60601-1, IEC 60601-1-6, IEC 60601-1-2

Input/output specifications: dual Hall, digital positioning

Column with Dual Hall (BL141H) are equipped with two hall sensors, A and B and a spindle magnet. In this way you can have pulses from the column when it moves.


The feedback system has a 8P magnet which gives 16 shifts in pulses per spindle turn.



Hall Output:

4 mm spindle = 0,25 mm per pulse and 400 pulses per 100 mm stroke.

9 mm spindle = 0,5625 mm per pulse and 178 pulses per 100 mm stroke.

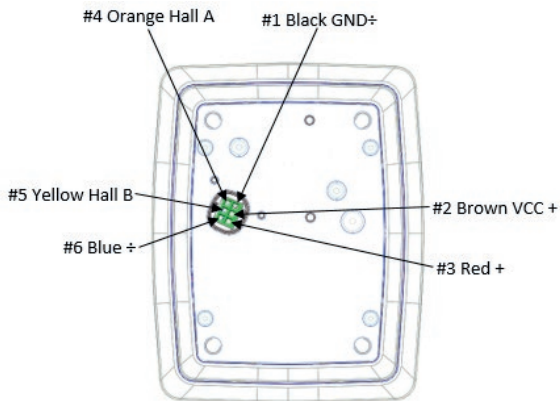

Important:

The motor must always be short-circuited to obtain self-locking in accordance with the rated label value.



Recommendations

- Please follow the important BL1 mounting guidelines.
- Max. storage temperatures: +50 °C.
- BL 1 is for use in push applications, cable outlet from smallest profile (top) or biggest profile (bottom). See top and bottom plate dimensions.
- When washing according to IPX6 parameters, it is not allowed to splash water directly onto the plastic frames between the profiles. Direct splashing is only permitted on the aluminium profiles. Alternatively, BL1 can be mounted upside down with the largest profile at the top. In this configuration, no IP rating applies.




Warnings



- BL 1 is heavy (9.8 kg) To avoid personal injury, DO NOT DROP !
- Do not adjust anything during movement, can cause personal injury !
- LINAK recommend using a safety nut in medical applications !
- A broken chain causes a drop of half the length of actual stroke. Therefore do not overload !
- The BL 1 is designed for use in push applications, dynamic "Pull forces" can result in damage to the column and cause collapse of the application.
- Do not loosen any screws on the BL1, this can cause collapse of the column !
- LINAK recommends making regular measurement of Class 1 protective ground conductivity in the application to avoid a disconnected grounding cable. Worn out or defect parts must be replaced.

BL1 end plate kit without cable through:

Top plate dimensions:

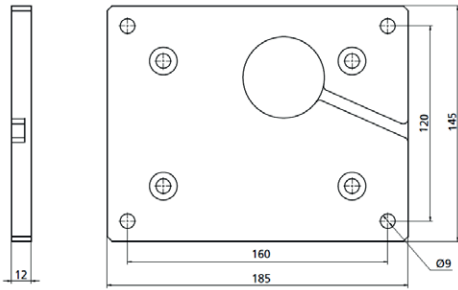


Bottom plate dimensions:

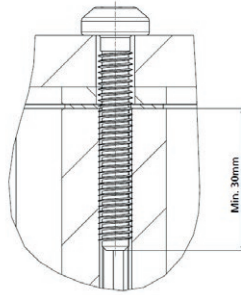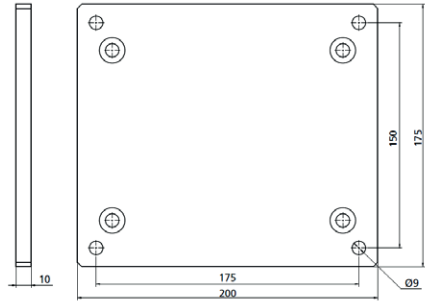


BL1 end plate kit with cable through:

Top plate dimensions:

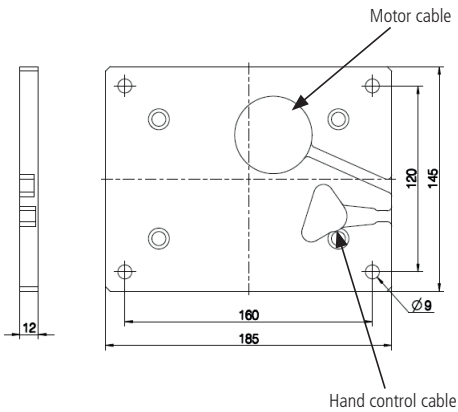


Bottom plate dimensions:

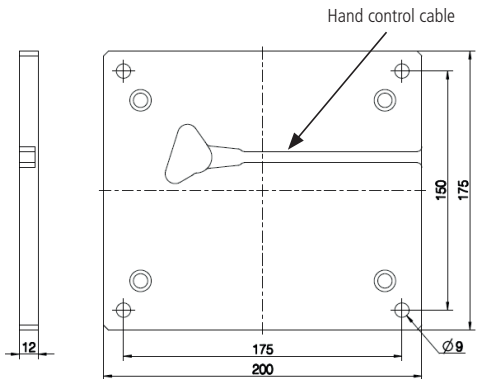

Please notice the thickness of the bottom plate is 12 mm. The thickness of the bottom plate without connections is 10 mm.

Mounting of BL1 with cable through:

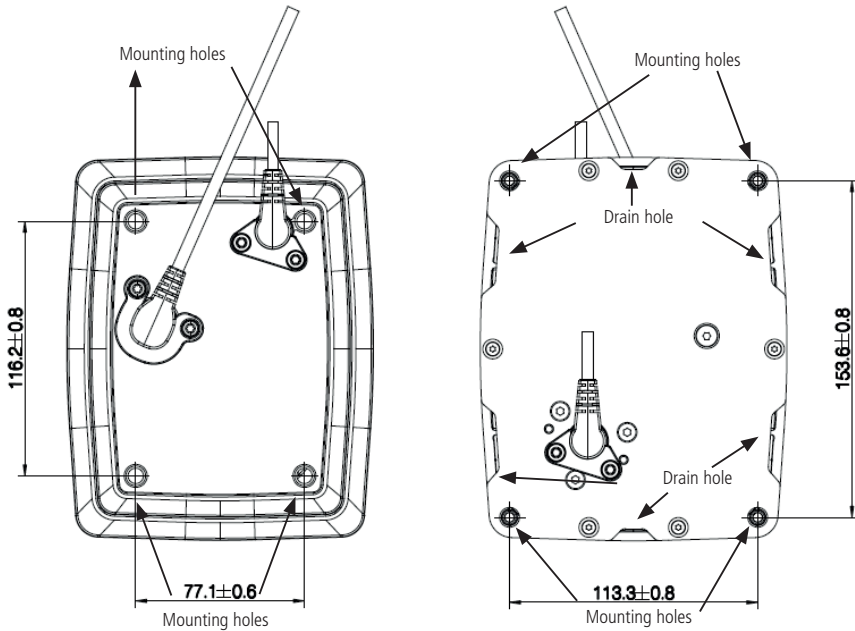


Drawing no.: 0807001-1




Recommendations

- The mounting plate in the application must cover the entire top plate of the BL1 and be strong enough to carry the load.
- Remember to secure the cable mounted in the top of the column to the application, so that it cannot be pulled out of the column.
We recommend to use LINAK Cable:
 - Lock kit for BL1 with motor cable: 0808040
 - Lock kit for BL1 with hand control cable through: 0808046Use only the screws included in the kit.
- For motor cable mounted at the top, use the long screw with the coarse thread.
Screw torque 1.7 Nm.
- For motor cable mounted at the bottom and for cable through, use the short screw with the fine thread. Screw torque 2.7 Nm.
- Electro Static Discharges!
There is no electrical connection through the length of the BL1 column. Therefore, to avoid ESD issues, consider external potential alignment between the top and bottom of the bed frame.
To connect for further earth wiring in the application, use an appropriate $\varnothing 8$ mm cable shoe under one of the 8 mm screws at both the top plate and the bottom plate.
- Remember to mount the blind plugs in the top plate if the motor cable is connected from the bottom plate to ensure the IPX6 protection.


When mounting more than one BL1 you need to consider the fixation:

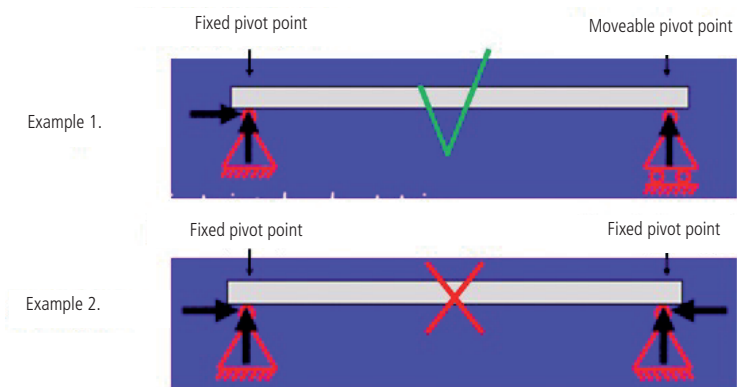

The reason why it is important only to fix one column, is that the columns will not move exactly in parallel – even if you have positioning such as hall. If more than one column is fixed it can lead to dangerous situations.

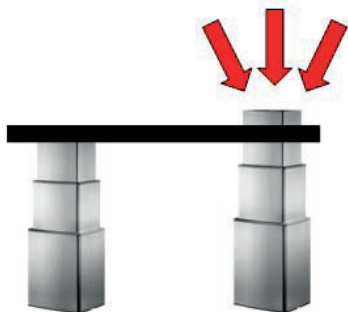

If you have a trend/anti-trend function in your application, you need to mount one or more BL1s with a slider. Having sliders prevents the column from bending as illustrated below.

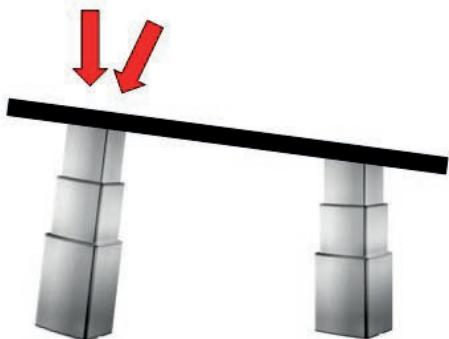



WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK
Type : BL46XRA03400A
Item No. : BL40007-00
Prod. Date : 2012.07.13 S.O.7654321
Max Load : Push 1600 N IPX6
Power Rate: 24 V ~
Duty Cycle : Max. 10%, Max 2 min./ 18 min.
NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL






P.O.1234567-0001 MADE BY LINAK A/S DENMARK

The BL4 is a 4-part lifting column specially designed for hospital and care beds; the BL4 can of course be used for other applications where a compact lifting column with a long stroke length is needed.

The lifting column is based on the BB3 actuator, which is practically noiseless. The specifications comply with the demands to the lifting functions in beds as to load, speed and stroke length.

Reed-switch:

Reed-switch gives a number of pulses for each rotation of the motor. These pulses are used to calculate the piston rod's position as well as to control several actuators running in parallel.

Usage:

- Duty cycle: up to 10% or max. 2/18 min.
- Ambient temperatures: + 5 °C to + 40 °C
- Compatibility: CB9AF, AL, AM, CB12H (special version), CB14 and OpenBus™ control boxes e.g. CB20


Technical specification:

Load in push :	Max. 1500 N See label
Load in pull (dynamic):	ON
Load in pull (static) :	Max. 600 N
Bending moment (static) :	Max. 500 Nm
Bending moment (dynamic) :	Max. 250 Nm
Duty cycle:	10 % Max. 2 min./18 min. See label
Protection classes:	IPX4, IPX6 and IPX6 Washable
Usage temperature:	+5 °C to +40 °C
Storage temperature:	Max. 50 °C

Your nearest LINAK dealer can inform the number of pulses per stroke length.

Regarding Reed-switch connection, **see Figure 6.10.**

- There are mounting holes in the endplates and motor housing
- The columns must be securely mounted before operation, no rotation must be possible
- The motor housing must be mounted uppermost
- The mounting bracket tension must be adjusted correctly

 **Warnings**

- Do only use the column within specified working limits.
- The BL4 is heavy (8.2 kg) To avoid personal injury, DO NOT DROP!
- Do not adjust anything during movement, can cause personal injury!
- The BL4 is designed for use in push applications, dynamic "Pull forces" can result in damage to the column and cause collapse of the application.
- Do not loosen any screws on the BL4, this can cause collapse of the column!
- IPX6 washable versions must not be dismantled and then rebuilt again without the motor housing being changed in order to ensure the washability.
- There must be at least 4 hours between each washing cycle to allow the BL4 to resume normal temperature.

 **Recommendations**

- Max. storage temperatures: +50 °C.
- BL4 is for use in push applications only and only mounted with the motor housing uppermost.
- Actuators using "buffer" end-stop principle are not compatible with BL4 and CB9 systems.
- If the column is driven in end-position (end-stop switches in the actuator will be activated) and if the hand control is kept activated you will in some cases, depending on the column load, see that the actuator starts and stops as long as the hand control is activated.


Recommendations with washable versions:

- IPX6 Washable versions must not be dismantled and then be rebuilt again without the motor housing being changed in order to ensure the washability.
- There must be at least 4 hours between each washing cycle to allow the BL4 to resume normal temperature.

BL4 Mounting guidelines:




- The BL4 must always be mounted vertically before operation and always vertical with the motor housing uppermost. (Otherwise, the internal end-stop switch system can break due to rotation).
- Both the motor housing and the bottom tube (the one with the largest diameter) must be secured in the application in such a way that no rotation can occur.
- It is recommended to monitor the current consumption in order to determine the necessary tensioning force for the mounting bracket. If the current consumption rises the BL4 has been tightened too much.

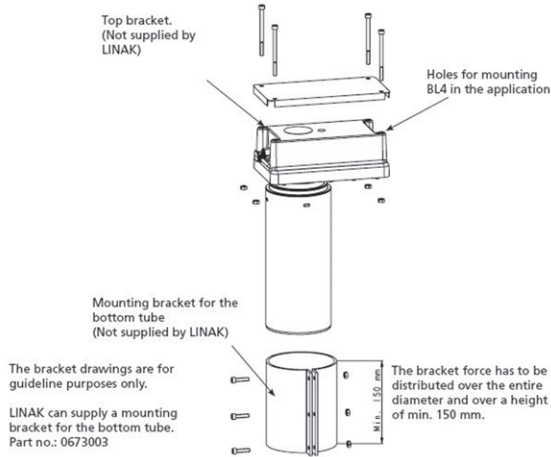

- The mounting plate in the application must cover the entire top plate of the BL1 and be strong enough to carry the load.
- It is recommended that all 4 holes in the motor housing are used to fasten the BL4 to the application.
- The screws must provide a secure fixing e.g. as with self-locking.
- Remember to secure the cable to the housing with a cable tie. Use the fixing eye next to the connector socket. On the BL4 cables, clip sleeve are mounted, they need to be removed.
- **Electro Static Discharges!**
Be aware that there is no electrical connection through the length of the BL4 column. Therefore, to avoid ESD issues, consider external potential alignment between the top and bottom of the bed frame.

When mounting more than one BL4 you need to consider the fixation:


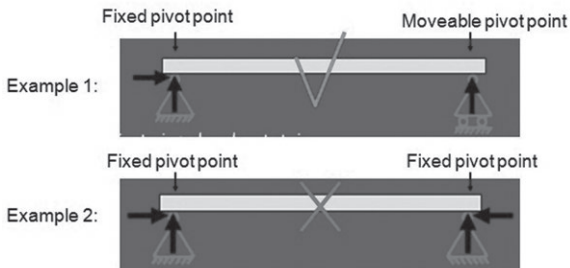


The reason why it is important only to fix one column is that the columns will not move exactly in parallel – even if you have positioning such as hall.


If more than one column is fixed, it can lead to dangerous situations.

If you have trend/antitrend function in your application you need to mount one or more of the BL4s with a slider.

Having sliders prevents the column from bending like illustrated below.

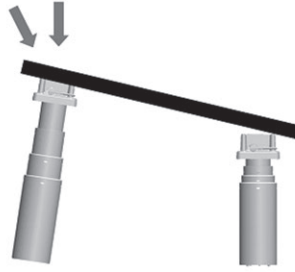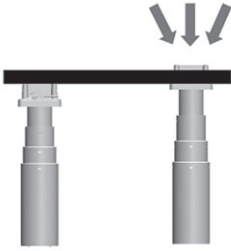

LINAK mounting bracket part no.: 0673003-A

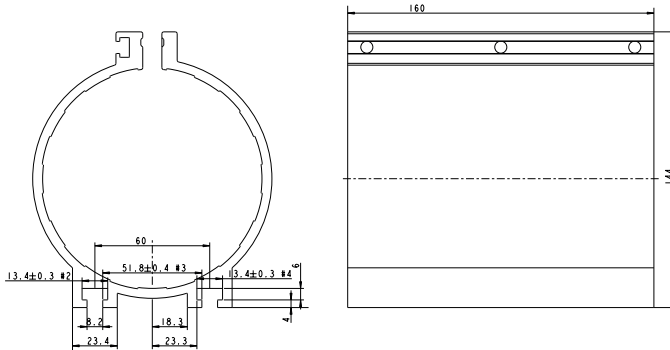


Mounting guidelines for the BL4 bracket, supplied by LINAK, part no. 0673003:

Mounting the bracket in the application:

- The bracket must be mounted to an even abutting plate in the application by using the 2 slits.
- In each slit at least 3 bolts must be mounted. Type M8 8.8.
- Tightening moment must be 22.7 - 26.1 Nm.
- The 3 bolts must be placed in the same height as the 3 holes.

Mounting of the BL4 into the bracket:

- The BL4 must be fitted in the bracket after mounting the bracket to the application.
- 3 bolts and nuts must be mounted in the 3 holes. Type M6 8.8
- Tightening moment must be 10.3 ± 0.3 Nm

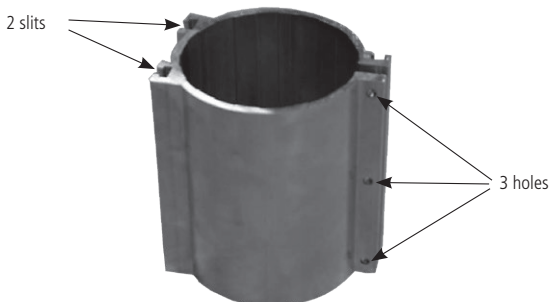

The mounting points must be re-tightened at least once a year with the above specified moments.

4. LC2 (MEDLINE® CARELINE® TECHLINE®)

LINAK WE IMPROVE YOUR LIFE		"CAUTION: NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL" WARNING: Improper use of an actuator may cause injury or damage. Contact LINAK for application advice before installing.	
ITEM NO	: LC22-U001-000	MADE BY LINAK A/S DENMARK	
INSTALL	: 507	NISO	
PROD. DATE	: 2009.03.18 P.O. 123456-0001		
MAX. LOAD	: Push: 1500 N		
POWER RATING	: 24 V _{DC} / Max. 4.6 Amp		
DUTY CYCLE	: 10 % Max. 2 min. / 18 min.		

The LC2 column is an update of the LP2 programme. It has an improved "twisting" stability and end-stop switches as standard. The column is designed to be used in a vertical position and only for lifting purposes. It is not possible to use the column in any kind of "pull" application.

Depending on the application, the LC2 can be operated either as a single column or several columns in a parallel system by choosing a control box with microprocessor.

It is designed to provide vertical lifting (push only) where simultaneous bending and torsion moments may occur.



Warning

Do only use the column within specified working limits.

5. LC3 (MEDLINE® CARELINE®)

LINAK		Designed in Denmark	
DK - 6430 Nordborg			
Type	: LC3100400T0000M0320G114-000		
Item No.	: J90315		
Prod. Date	: 2018.07.03		
Max Load	: Push 4000 N IPX4		
Power Rate	: 24 V _{DC} , Max. 13.8 A		
Duty Cycle	: 10%, Max. 2 min. / 18 min.		
NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL NE PAS OUVRIER PAR DU PERSONNEL NON AUTORISE		CE, NISO, IPX4	
W/O# - 0001			


The LC3 sets the standard for vertical lifting columns to high-end medical applications. This compact lifting column fulfils the market requirements for a solid and stable lifting column.

Usage:

- Duty cycle: 10%, 2 minutes continuous use followed by 18 minutes not in use
- Operation temperature: +5 °C to + 40 °C
- Storage temperature: -40 °C to + 70 °C
- Compatibility full performance: CO71
- Relative humidity: 20 % to 80 % at 30 °C - non-condensing
- Atmospheric pressure: 700 to 1060 hPa
- Meters above sea level: Max. 3000 meters
- Approvals: IEC 60601-1
IEC 60601-1-6
ANSI/AAMI ES60601-1
CAN/CSA-C22.2 No. 60601-1

LC3 mounting guidelines

LC3 is for use in push or pull applications and can be mounted in both directions – Largest profile down or largest profile up. LC3 must be specified for specific mounting direction.

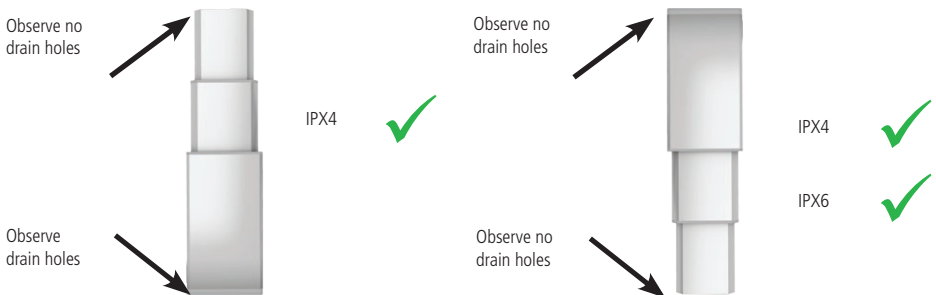


IPX6 is only available when LC3 is mounted with the largest profile up.

Note: The cable outlet for motor connection can be positioned at the top (smallest profile) or from the side of the column.

It is very simple to mount the LC3 in the application using the 4 x M10 mounting holes in both endplates.

Use 4 pcs. M10 8.8 screws, in each end, for mounting to the application. The screw depth must be min. 20 mm and max. 30 mm in aluminum profile.



Screw torque: 35 Nm.

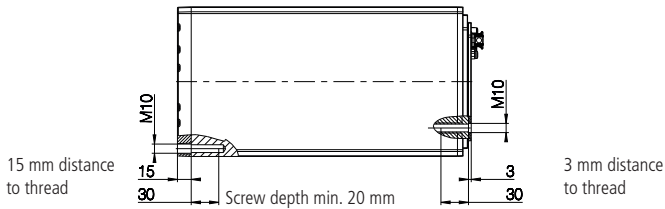

Drawing no.: 1002W9005

Mounting holes

Mounting holes

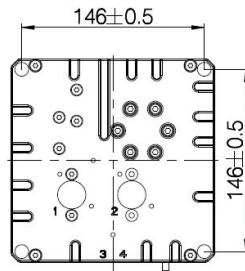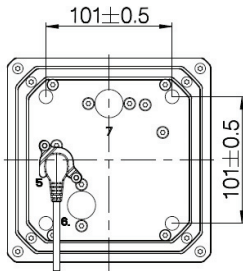

Notice that the cable plug must be mounted correctly. The cable slot must fit into the socket.





Remember to secure the cable mounted in the top of the column to the application, so that it cannot be pulled out of the column.

We recommend to use LINAK Cable:

- Lock kit for minifit cable: 1002W8136-A.
- Lock kit for hand control cable through: 1002W8137-A

Use only the screws included in the kit. Screw torque: 2 Nm

The cables coming out of the side of the column should follow below guidelines. The internal radius should not be more than 3 times the outer dimension – OD - of the cable. For instance if the outer cable dimension is Ø7, the internal radius of the maximum cable bending is 21 mm.











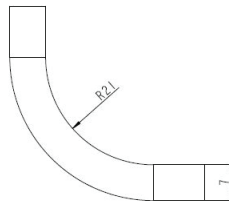
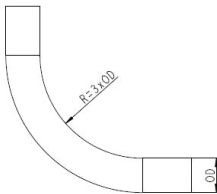


- Protective grounding cable
LC3 has potential equalization between top and bottom plate but the middle profile is not grounded.






- It is recommended to use screws with thread-lock adhesive
- Screws of high quality steel 8.8 or 10.9 must be used to secure safe mounting of the LC3 to the application.

Cable connections overview

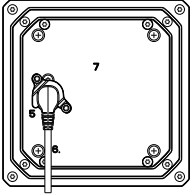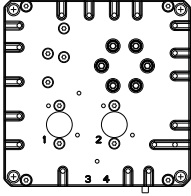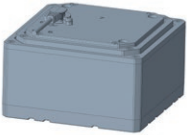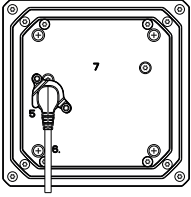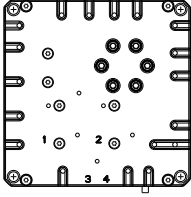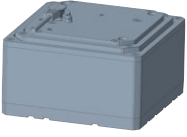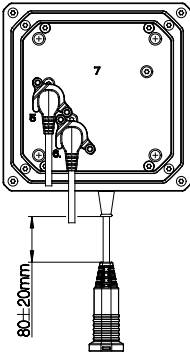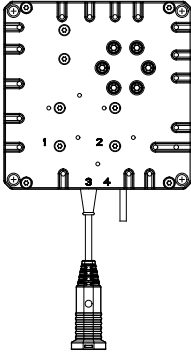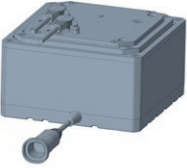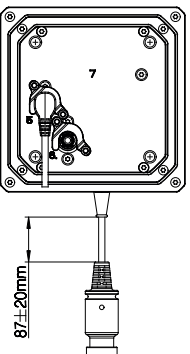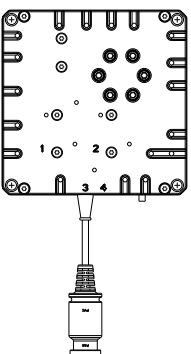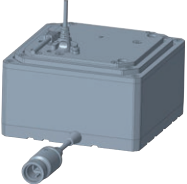Variant	Top plate Drawing no.:1002W9005	Side entry Drawing no.:1002W9005	Model view
<p>T000</p> <p>Connections</p>	 <p>5: Motor</p>		
<p>T001</p> <p>Connections</p>	 <p>5: Motor</p>		<p>Including protective grounding cable</p> 
<p>T100</p> <p>Connections</p>	 <p>5: Motor 6: Minifit through</p>	 <p>← 3: Minifit through</p>	
<p>T200</p> <p>Connections</p>	 <p>5: Motor 6: HB through</p>	 <p>← 3: HB through</p>	

T030

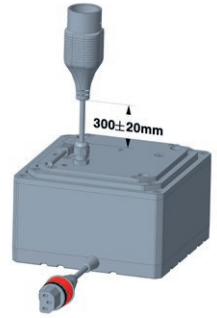
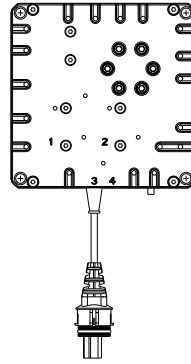
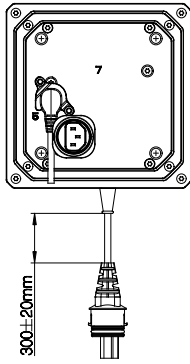


Connections

5: Motor
 6: Mains through 1
 Female connection top entry, male connection side entry

←→ 3: Mains through 1
 Female connection top entry, male connection side entry

T040

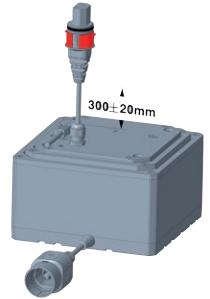
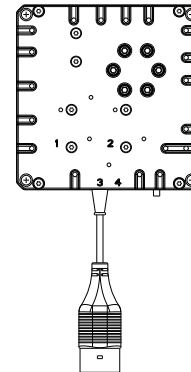
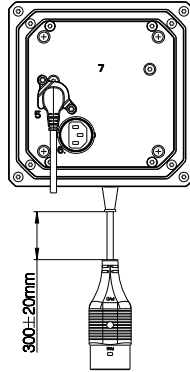


Connections

5: Motor
 6: Mains through 2
 Male connection top entry, female connection side entry

←→ 3: Mains through 2
 Male connection top entry, female connection side entry

T101




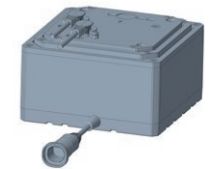
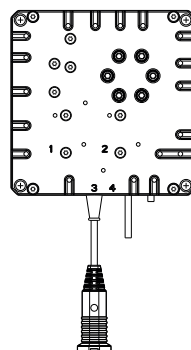
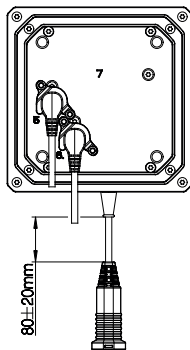





Connections




5: Motor
 6: Minifit through

←→ 3: Minifit through

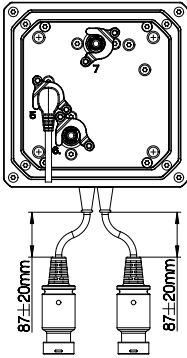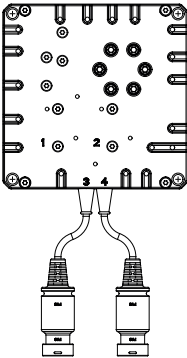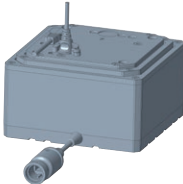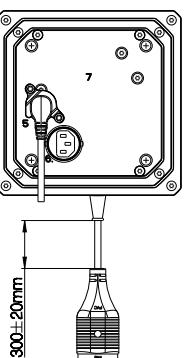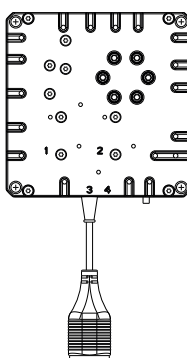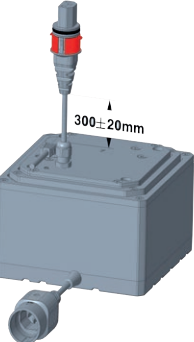Including protective grounding cable

<p>T201</p>	 <p>87 ± 20mm</p> <p>87 ± 20mm</p>	 <p>87 ± 20mm</p> <p>87 ± 20mm</p>	
<p>Connections</p>	<p>5: Motor 6: HB through</p>	<p>← 3: HB through</p>	<p>Including protective grounding cable</p>
<p>T031</p>	 <p>300 ± 20mm</p>	 <p>300 ± 20mm</p>	 <p>300 ± 20mm</p>
<p>Connections</p>	<p>5: Motor 6: Mains through 1 Female connection top entry, male connection side entry</p>	<p>← 3: Mains through 1 Female connection top entry, male connection side entry</p>	<p>Including protective grounding cable</p>
<p>T041</p>	 <p>300 ± 20mm</p>	 <p>300 ± 20mm</p>	 <p>300 ± 20mm</p>
<p>Connections</p>	<p>5: Motor 6: Mains through 2 Male connection top entry, female connection side entry</p>	<p>← 3: Mains through 2 Male connection top entry, female connection side entry</p>	<p>Including protective grounding cable</p>

T110

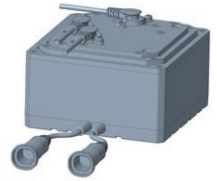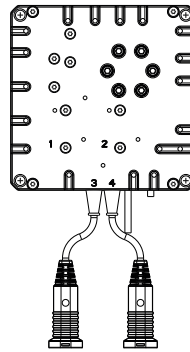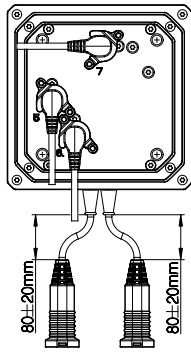

Connections

5: Motor




6: Minitfit through (top)

7: Minitfit through (top)

↔ 3: Minitfit through (side)

↔ 4: Minitfit through (side)

T120

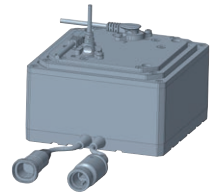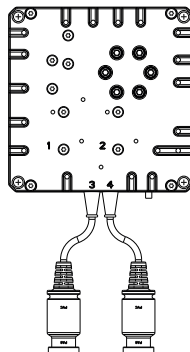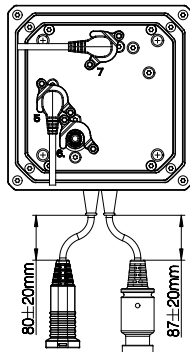

Connections

5: Motor




6: HB through

7: Minitfit through

↔ 3: HB through

↔ 4: Minitfit through

T220

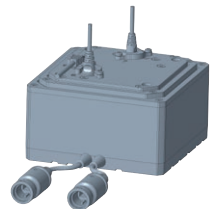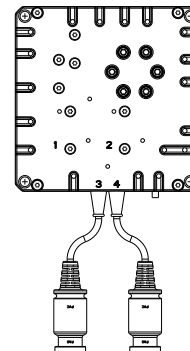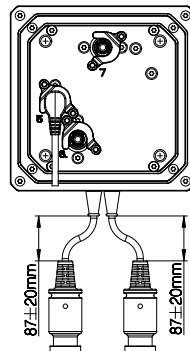

Connections

5: Motor


 



6: HB through (top)

7: HB through (top)

↔ 3: HB through (side)

↔ 4: HB through (side)

T130

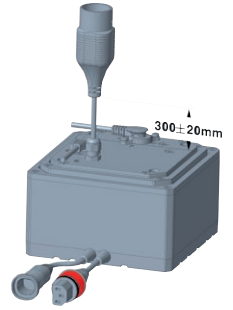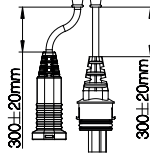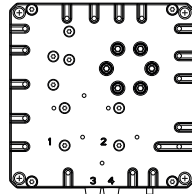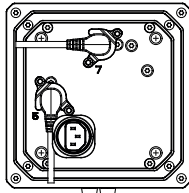

Connections

5: Motor
 6: Mains through 1
 Female connection top entry,
 male connection side entry
 7: Minifit through


 





3: Mains through 1
 Female connection top entry,
 male connection side entry



4: Minifit through

T140

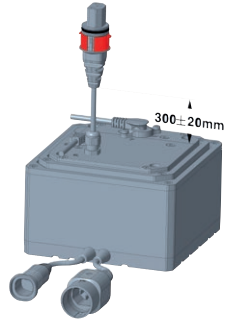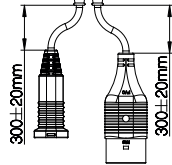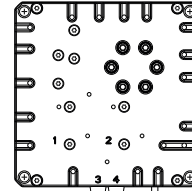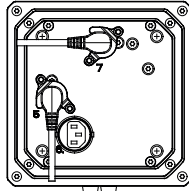

Connections

5: Motor
 6: Mains through 2
 Male connection top entry,
 female connection side entry
 7: Minifit through


 





3: Mains through 2
 Male connection top entry,
 female connection side entry



4: Minifit through

T230

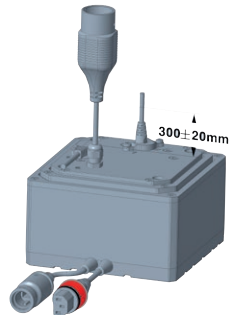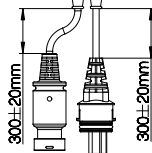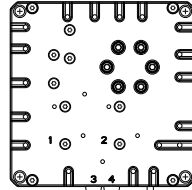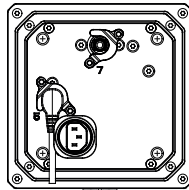

Connections

5: Motor
 6: Mains through 1
 Female connection top entry,
 male connection side entry
 7: HB through


 





3: Mains through 1
 Female connection top entry,
 male connection side entry



4: HB through

T240

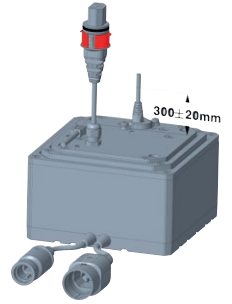
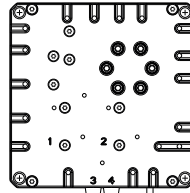
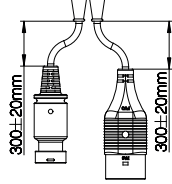
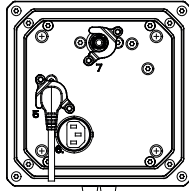


Connections

5: Motor
6: Mains through 2
Male connection top entry,
female connection side entry
7: HB through

← 3: Mains through 2
Male connection top entry,
female connection side entry
← 4: HB through



 

S300

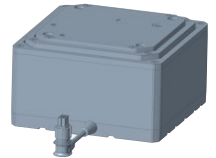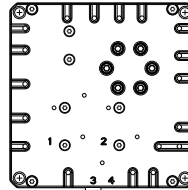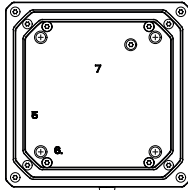

Connections

3: Motor supply


 

S400

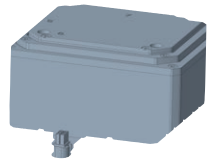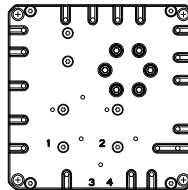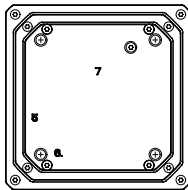

Connections

3: Motor supply




S500

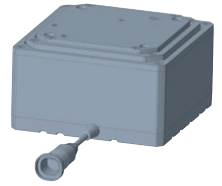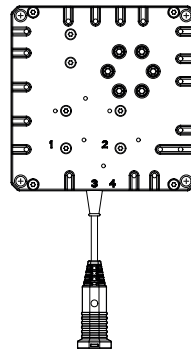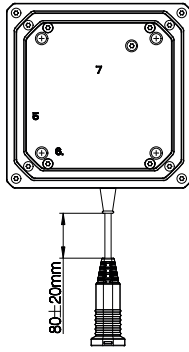

Connections

3: Motor supply

S301

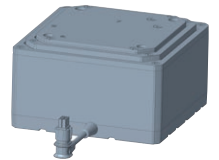
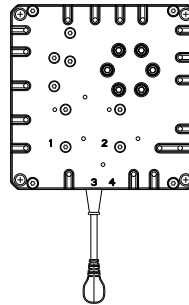
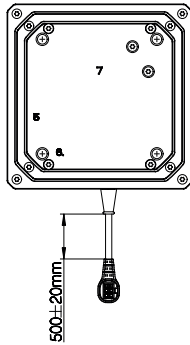


Connections

3: Motor supply

Including protective grounding cable

S401

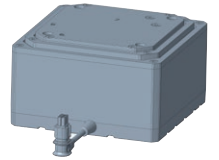
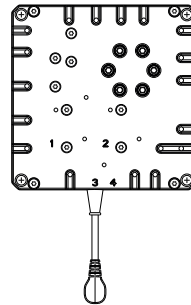
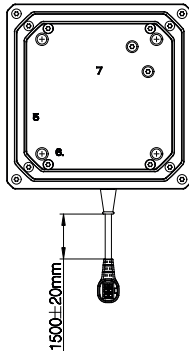


Connections

3: Motor supply

Including protective grounding cable

S501

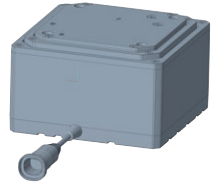
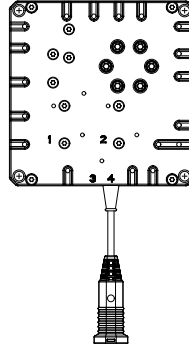
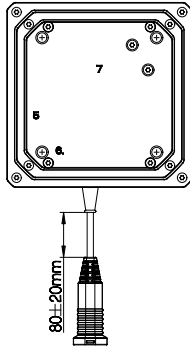


Connections

3: Motor supply

Including protective grounding cable

S310

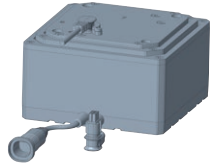
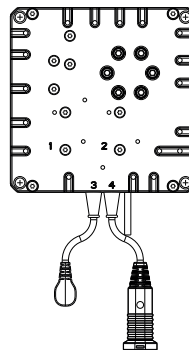
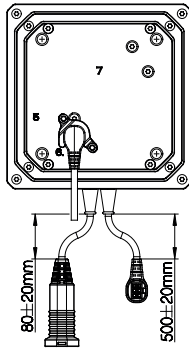


Connections

6: Minifit through

3: Motor supply
← 4: Minifit through

S320

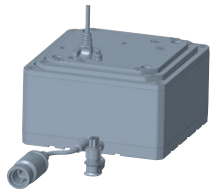
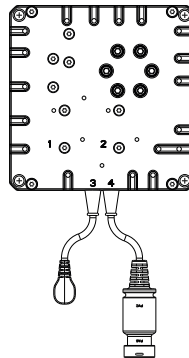
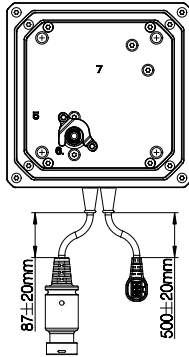


Connections

6: HB through

3: Motor supply
← 4: HB through

S410

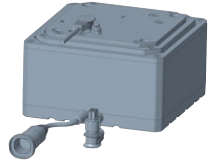
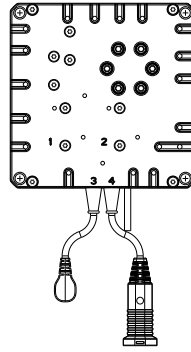
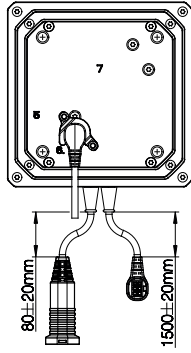


Connections

6: Minifit through

3: Motor supply
4: Minifit through

S420

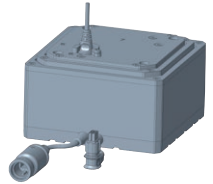
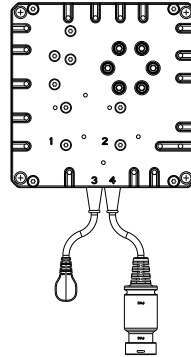
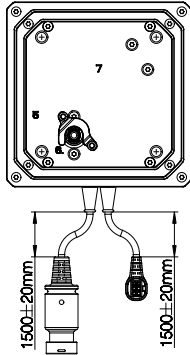


Connections

6: HB through

3: Motor supply
4: HB through

S510



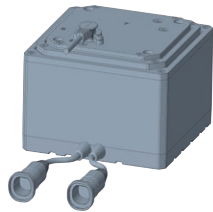
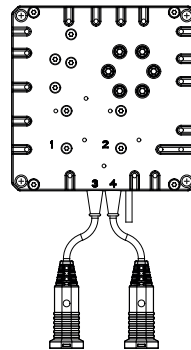
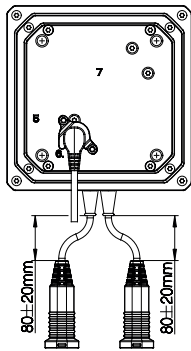


Connections

6: Minifit through

3: Motor supply
4: Minifit through

 S520

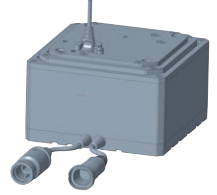

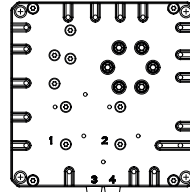
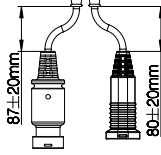
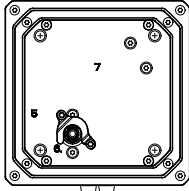


Connections

6: HB through

3: Motor supply
4: HB through

 S330

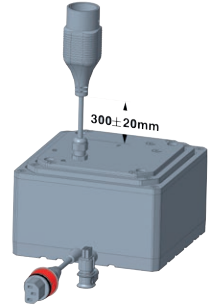

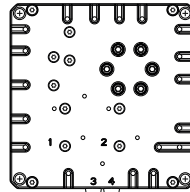
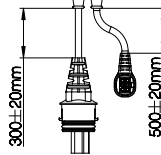
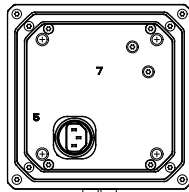


Connections

6: Mains through 1
Female connection top entry,
male connection side entry

3: Motor supply
4: Mains through 1
Female connection top entry,
male connection side entry

 S340

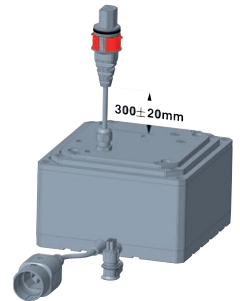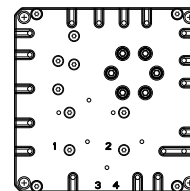
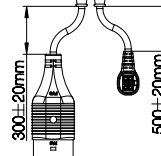
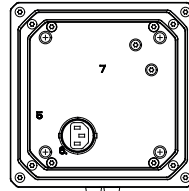


Connections

6: Mains through 2
Male connection top entry,
female connection side entry

3: Motor supply
4: Mains through 2
Male connection top entry,
female connection side entry

S430

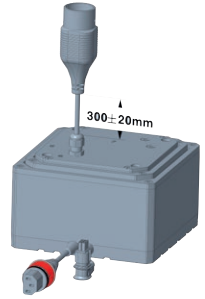
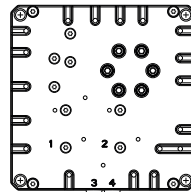
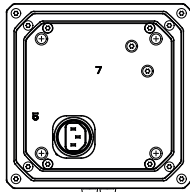


Connections

6: Mains through 1
Female connection top entry,
male connection side entry

3: Motor supply
4: Mains through 1
Female connection top entry,
male connection side entry

S440

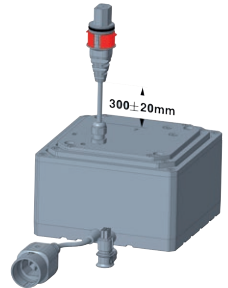
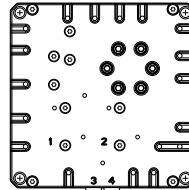
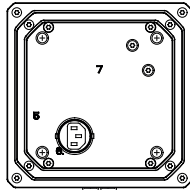


Connections

6: Mains through 2
Male connection top entry,
female connection side entry

3: Motor supply
4: Mains through 2
Male connection top entry,
female connection side entry

S530

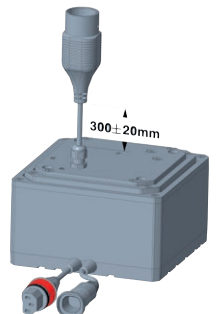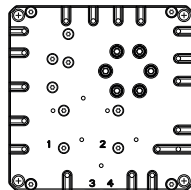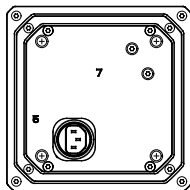


Connections

6: Mains through 1
Female connection top entry,
male connection side entry

3: Motor supply
4: Mains through 1
Female connection top entry,
male connection side entry


Connections

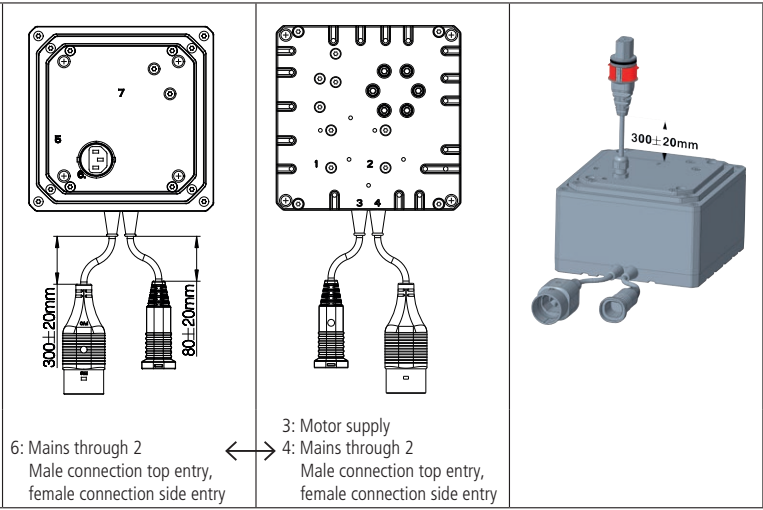

Mounting of a product on the side of an LC3

It is possible to mount a product on all 4 sides of the LC3 at the same time. However, it requires that the holes for mounting are placed with different distances from the top and/or bottom plate. Otherwise the mounting screws will collide.

Minimum distance from the top and bottom plate must be observed.

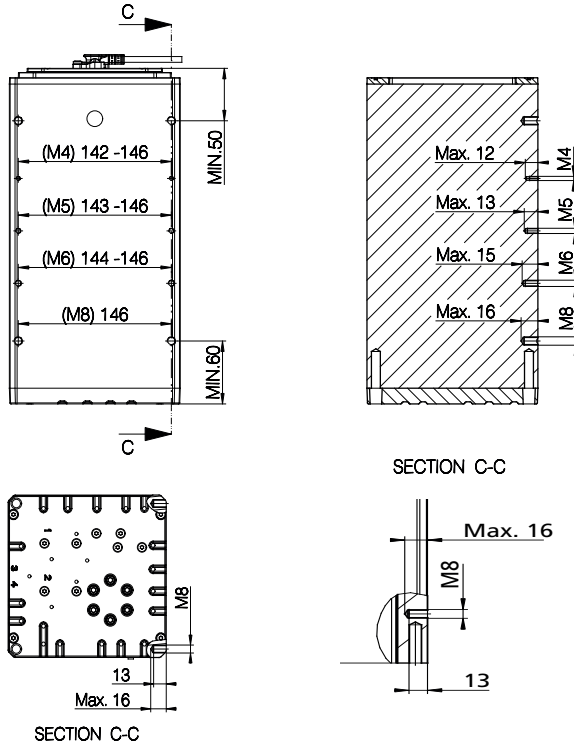

General tolerance +/- 0,5 mm

Drawing no.: 1002w9005


Screws used for mounting of a product on the side of the LC3 must be 8.8.

Screw type	M8	M6	M5	M4
Screw torque Nm	17	7	4	2

When mounting more than one LC3 you need to consider the fixation:


The reason why it is important only to fix one column, is that the columns will not move exactly in parallel – even if you have positioning such as hall.

If more than one column is fixed it can lead to dangerous situations.

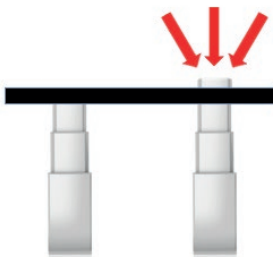

If you do have a trend/anti-trend function in your application, you need to mount one or more of the LC3's with a slider.


Having sliders prevents the column from bending as illustrated below.

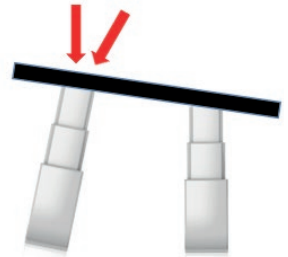


Feedback specifications: Potentiometer

Ordering code no.: 0P

E1 (power switch) F6 (potentiometer)	
1	Potentiometer 0V
2	Not connected
3	M+ (motor/power)
4	Potentiometer output
5	Potentiometer VCC
6	M- (motor/power)

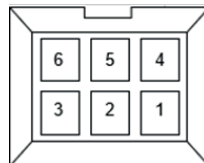

Feedback specification	
VCC max.	15 V
Potentiometer total resistance	10 kΩ ± 20%
Non-linearity	±2%
Hysteresis	±2%

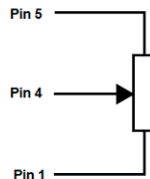

Calculation of output vs. SL/pitch

Notice: Only one gearing available for stroke length variants up to 700 mm

The output ratio of a potentiometer for a given position is defined as:

$$V_{\text{out}} = 5\% \times \text{Supply V} + \frac{\left(\frac{\text{SL}_{\text{position}} [\text{mm}]}{\text{Pitch} \left[\frac{\text{mm}}{\text{rev}} \right]} \right)}{62,83} \times \text{Supply V}$$

where $\text{SL}_{\text{position}}$ is the actual position in millimeters on the stroke length (SL), relative to end-stop inwards. In that position, the potentiometer output is 5% of full-scale. Spindle pitch is dependent on the variant, whose value can be found in the table below:

Variant	Pitch [mm/rev]
4000 N	20
5000 N	16
6000 N	12

Example, in a system connecting a 10 V supply to potentiometer with an SL position of 400 mm and 6000 N variant, the output voltage at the given position is:

$$V_{\text{out}} = 0,05 \cdot 10V + \frac{\left(\frac{400 \text{ mm}}{12 \frac{\text{mm}}{\text{rev}}} \right)}{62,83} \cdot 10V \cong 5,81V$$

Input/output specifications: dual Hall positioning

Dual Hall digital (F3) with power switch

Item	Specification	Comment												
Pin configuration	<table border="1"> <tr> <td>Pin1</td> <td>GND</td> </tr> <tr> <td>Pin2</td> <td>VCC</td> </tr> <tr> <td>Pin3</td> <td>M+</td> </tr> <tr> <td>Pin4</td> <td>HALL A</td> </tr> <tr> <td>Pin5</td> <td>HALL B</td> </tr> <tr> <td>Pin6</td> <td>M-</td> </tr> </table>	Pin1	GND	Pin2	VCC	Pin3	M+	Pin4	HALL A	Pin5	HALL B	Pin6	M-	
Pin1	GND													
Pin2	VCC													
Pin3	M+													
Pin4	HALL A													
Pin5	HALL B													
Pin6	M-													
VCC	4-15V													
Current	<p>Maximum 15mA @10 kΩ and 1nF load.</p> <p>See diagram.</p>													
HALL A/B	<p>T_{state} is minimum 5ms in all states (11,10,00,01) at a minimum mechanical load. Tested with the above specified load.</p> <p>Duty cycle Hall A 30-70% Duty cycle Hall B 30-70%</p> <p>Low level <GND+0.5V @10 kΩ and 1nF load High level >VCC-0.5V @10 kΩ and 1nF load</p>	<p>Signal pattern during movement:</p> <p>Driving outwards</p> <p>Driving inwards</p>												
Resolution	<p>Number of dual Hall state shifts/spindle turn: $N \cong 61.67$ state/turn. 4000 N: 0.324 mm per shift 5000 N: 0.260 mm per shift 6000 N: 0.195 mm per shift</p>													



Recommendations:

- Please follow the important LC3 mounting guidelines.
- LC3 is for use in push or pull applications, cable outlet from smallest profile (top) or biggest profile (bottom). See top and bottom plate dimensions.
- When washing according to IPX6 parameters please notice that the large profile of the LC3 column must be placed upwards (bottom up).
- We recommend making a functional test of the application with all accessories connected before putting it into operation.
- Regular cleaning is recommended to reduce bacteria and increase the hygiene level
- Intended for indoor use only
- Not intended for use in harsh environments like e.g. pool environment, marine environment and agriculture buildings with ammonia vapors.



Warnings:

- Always check correct assembly after mounting and service to ensure that the cable locks are mounted.
- Ensure that the cable cannot be squeezed, pulled or subjected to any other stress or damages.
- LC3 is heavy (more than 10 kg). To avoid personal injury and product damage, DO NOT DROP!
- Take special precautions concerning 3rd party interfacing. Please contact LINAK for further information.
- Do not exceed the max. pull load specified on the label.
- Do not add dynamic load when changing between pull and push.
- Do not adjust anything during movement or while connected to mains, it can cause personal injury.
- To avoid cable interruption and actuator defects make a proper cable installation and inspect regularly for wear, damage and jarring sound. Defective parts must be replaced.
- After service inspection, the application must be tested for correct functionality before it is put into operation, to avoid misalignment between two columns moving in parallel.
- LINAK recommend using a safety nut in medical applications! LC3 has safety nut as standard.
- Do not loosen any screws on the LC3, this can cause collapse of the column!
- LINAK recommends making regular measurement of Class 1 protective ground conductivity in the application to avoid a disconnected grounding cable. If there are worn out or defect parts, the complete LC3 must be replaced.
- Interconnecting cables must remain plugged in during cleaning to prevent the ingress of water.




WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK
 Item No. : LP22AR000300505
 Prod. Date : 2014.06.20 S.O.6154781
 Max Load : Push 2600 N
 Power Rate: 24 V= / Max. 4.5 A
 Duty Cycle : 10%, Max. 2 min./18min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
 NE PAS A OUVRIER PAR PERSONNEL NON-AUTORISE



P.O.2114579-0001 MADE BY LINAK A/S DENMARK



The LP2 range of vertical lifting columns is ideal where vertical positioning of substantial loads is required.


The design allows the LP2 range to be built in a complete motion control system simply by adding a suitable LINAK control box and hand control.


Advanced design and high quality construction allows the column to be operated either as single or parallel with up to a maximum of four units and/or with a memory function.


The LP2 lifting column is the ideal choice for duties such as height adjustment on computer workstations, work benches, or a wide selection of other duties.


- There are mounting holes in the end plates.
- The largest profile must be mounted uppermost.

 **Warning**
Do only use the column within specified working limits.

 **Warning**
Ensure a safe connection between column and application

 **Warning**
Side mounting bracket screws: use the correct torque on the side mounting bracket screws.

 **Warning**
The column can not be used in pull

 **Warning**
Max. bending: LP22 = 550 Nm
 LP25 = 1000 Nm



WE IMPROVE YOUR LIFE

DESIGNED IN DENMARK

Item No. : LP36AROM0600550

Prod. Date : 2014.06.20 S.O.614528

Max Load : Push 2400 N

Power Rate: 24 V \approx / Max. 8 A

Duty Cycle : 10%, Max. 2 min./18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS A OUVRIR PAR PERSONNEL NON-AUTORISE



P.O.2114579-0001 MADE BY LINAK A/S DENMARK

The LP3 is developed for vertical lifts and can resist a bending moment by virtue of the effective telescopic system.

The lifting column is designed for applications where a small installation dimension is requested without compromising the lifting capacity.

The LP3 is characterised by having a lower installation dimension proportional to the stroke length compared to the LP2. The LP3 can also attain a higher speed than the LP2.

The telescopic column is compatible with LINAK's control boxes and can run individually; as 2 x LP3 parallel and/or with memory.

The LP3 is the perfect choice for height adjustment on dental, gynaecologist, and wheelchairs as well as for operating, office and working benches etc.



The column can only be loaded with the maximum bending moment over the first 80 % of the stroke. The maximum bending moment will be reduced to 50 %.



The column must be mounted with the largest profile uppermost!

- There are mounting holes in the end plates.
- The largest profile must be mounted uppermost.



Warning

Do only use the column within specified working limits.



Warning

Ensure a safe connection between column and application



Warning

Side mounting bracket screws: use the correct torque on the side mounting bracket screws.



Warning

The column can not be used in pull



Warning

Max. bending: LP3 = 375 Nm

5. Information on specific control boxes

Please be aware if the control box is not visible after mounting, all information regarding limitation of use shall be marked on the end product.

Output voltage

On control boxes connected to the mains the voltage of the actuator output is dependent on load, and the no-load voltage can reach 50 V. Control boxes connected to a battery can reach a voltage of 30 V during charging and no load.

For all control boxes with battery

Prior to first use of LINAK batteries, please make sure that they are being charged 24 hours in order to reach proper function and prolong the lifetime of the batteries.



Warning

Please observe the following maintenance, replacement, and disposal requirements to ensure a safe and reliable operation.

Maintenance of batteries

The batteries are to be replaced after 4 years at the latest. Perhaps earlier, dependent on the pattern of use. Frequent and high-powered discharges reduce the battery life. For an optimum lifetime the product must be connected to the mains voltage as often as possible. It is recommended that the batteries are to be charged at least every 3rd month - otherwise will the batteries have reduced capacity due to self-discharge. It is recommended to test the battery function at least once every year.

Replacement of batteries

The batteries must only be replaced by the same type of batteries or mechanical and electrical equivalent types. The batteries must be new or maintained by means of charging at least every 3rd month. The batteries, which make a set, must be supplied with identical production codes. Mismatching of production codes may lead to a severely reduced life time expectancy. Before mounting ensure that the battery set is correctly connected, compare with the drawing in the battery room, and check that no connectors are loose.



Warnings

From the factory the battery room is hermetically separated from the electronics room. When replacing the batteries this separation must not be damaged or modified as this may allow penetration of battery gas into the electronics room with risk of explosion.

When replacing batteries in waterproof products (IPX5 and IPX6) precautions must be taken that the sealing material (silicone ring or joint filler) is not damaged and that it is correctly placed in the groove. Hereafter the screws in the cover are to be fastened with approx. 1 Nm. If the seal is damaged it must be replaced by a new silicone string (LINAK article no. 0008004 for a roll of 100 metres).

Disposal

The batteries, which are lead-acid batteries, can be returned to LINAK or disposed in the same way as car batteries.



Warnings

The battery room is supplied with ventilation that ensures correct and necessary airing of the battery room. This airing must not be blocked or covered as a positive pressure may occur with risk of explosion.

If the product has been exposed to mechanical overload (lost on the floor, collision/squeezing in the application or a powerful stroke) the product must be sent to an authorised workshop for control of the hermetic separation between the battery and electronics rooms.

Using control boxes with speed control

The common way of carrying out a speed control of the actuators is by using PWM, switching the motor on/off at a high frequency. In rare cases, while switching the motor on/off, we have experienced that the coupling between the actuators and application frame and ground is too high, thus generating a slight current noise which exceeds the allowable EMC limits. The current in question is extremely low and is in no way related to any personal or patient risk.

The coupling is defined by the mechanical layout of the application, and no real guidelines can be given. Using plastic bushings or similar can improve the application.

If an application faces this issue, it can easily be solved by connecting ground of the CB box to the application frame-, through a cable with built in serial connection of a resistor and a capacitor.

The EMC test defined in IEC60601-1-2, applicable for all medical products, will show if this is an issue concerning the specific applications.

If you need more information or have any issues on this subject, please contact your LINAK A/S Sales contact.

Design criteria when using a customized CB

When using a customized CB together with a LINAK actuator, the interface connection between the CB vs. Actuator as well as the purpose of the actuator (with or without feedback) must be considered.

Actuators with feedback

E.g. potentiometer solutions have certain technological characteristics due to the design that might cause quality issues if used outside the specification range.

The connection interface

The connection interface is not only the compatibility of the plug types used, e.g. male mini-fit to female mini-fit plug type.

It is also considering the contact transition, i.e. the cable as well as the cable connector, the connecting plug, the material surface of the plug PIN, the soldering of the PCB plug connector etc.

When however using a LINAK Actuator with feedback AND having a bad connection interface towards a Customized CB – LINAK only guarantees the feedback voltage to be within 500 mV (+/- 250 mV).

1. CA30/CA40 (MEDLINE® CARELINE®)



Designed in Denmark
DK - 6430 Nordborg

Type : CA3+09211N09000

Item : J11331



Date : 2016.10.31

U In : 100-240 V~, 50/60 Hz

I In : Max. 2.5 A

IPX6 Washable

Int. : 10%, max. 2 min. / 18 min.



W/O #1234567-0001 ASSEMBLED IN CHINA

U In : 100 V~, 50/60 Hz 200VA
U Out : 30V=4A
Int.: 4A, 80s / 2A, 40s / 0A, 18 min.
LINAK K.K.
UL-US



Designed in Denmark
DK - 6430 Nordborg

Type : CA4+09411N09000

Item : J11332



Date : 2016.10.31

U In : 100-240 V~, 50/60 Hz

I In : Max. 2.5 A

IPX6 Washable

Int. : 10%, max. 2 min. / 18 min.



W/O #1234567-0001 ASSEMBLED IN CHINA

U In : 100 V~, 50/60 Hz 200VA
U Out : 30V=4A
Int.: 4A, 80s / 2A, 40s / 0A, 18 min.
LINAK K.K.
UL-US

The control boxes CA30 and CA40 are developed as part of a new control box platform for the care and rehab industry.

The control boxes can be mounted separately on the application by means of unique slide-on brackets, but also on several actuator models using a specially designed actuator bracket.

Usage:

- Duty cycle: 10 % - 2/18 min. on/off continuous use.
Maximum power is 120 W for 80 seconds and 60 W for 40 seconds at 25 °C

LED indicator



CA30/CA40 is equipped with a three-colour LED for indication of mains or battery operation.

Connected to MAINS	
LED colour	Indication of operation
Green	On mains, <u>not</u> activated by hand or foot control. The system is working ok and is ready for normal operation
Yellow	On mains, <u>not</u> activated by hand or foot control. The system is defective and should not be operated.
Yellow	On mains, activated by hand or foot control. The system is working.


Not connected to mains but with BATTERY back-up	
LED colour	Indication of operation
Orange	On battery, activated by hand or foot control. The system is working
No LED	On battery, <u>not</u> activated by hand or foot control. or CA30/CA40 not connected to mains

Mounting instructions (Example CA30-CA40 with LA40)

When mounting the control box onto the actuator (1)

Simply slide on the bracket until you hear a clear click (2)

Slide on the control box until you hear a click and the box is mounted (3)

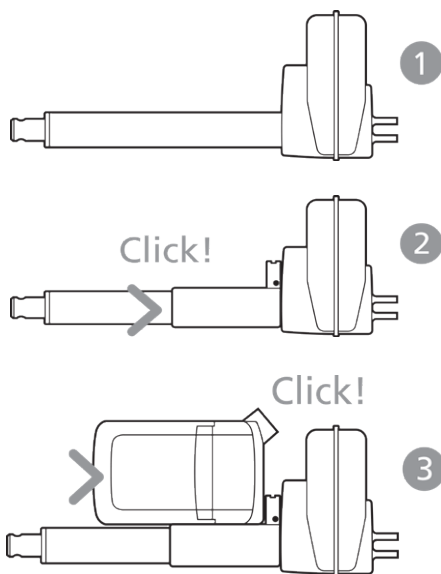

It is recommended that the CA30/CA40 is mounted in a position that allows water to escape.

Recommended torque: 0.6 Nm +/-0.1

The bracket can be mounted to the bed frame or any other application by means of one of the following mounting procedures:

- 1) M6 nut to be placed in bracket and fixed with M6 bolt from the rear side.
- 2) M5 machine screw with flat washer to be fixed through bracket with nut on the rear side.
- 3) Self-tapping screw to be placed through bracket and onto the frame.

Mounting of cables and cable lock:


The control boxes CA30/CA40 have a uniquely designed cable lid. The lid also works as an integrated cable lock when closed.

- 1) Mount cable plugs in control box
- 2) Close lid until lock snaps into place (see arrows)

To allow free access to the cables, the lid has a rest position when completely opened.

It is possible to remove the lid by lifting it a few degrees and pulling it away from the housing under tight mounting conditions.

See illustrations:

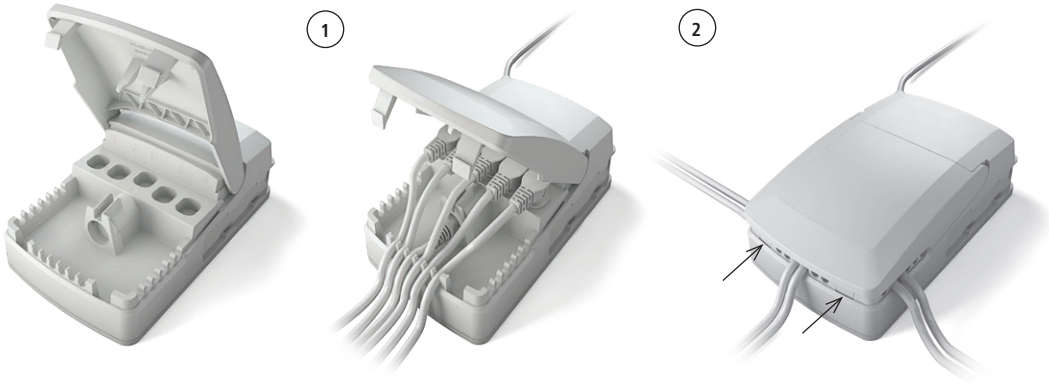

Cable management:

Battery Operation

CA30 and CA40 are only compatible with batteries with built-in charger, BA19 or BA21.

EOP- electronic overload protection

Remark - common/individual current measurement.

As default, the current cut-off is set to 8 A per channel. The total current cut-off default setting is 8 A. If more channels run at the same time, 8 A are distributed equally.



Recommendations

- Note that the common current limit on CA30-CA40 is 8 A and may cause overload on certain actuator types.
- Be aware that the channel configuration has been changed compared to existing analogue control boxes.
- To avoid unintended movement like trend or antitrend, LINAK recommends the application manufacturer to instruct the end user to avoid that multiple keys are pressed simultaneously.



 
Warnings

- Due to the half-bridge technology, pressing multiple keys simultaneously might cause an unintended trend or antitrend movement (application environment 4).



Designed in Denmark
DK - 6430 Nordborg

Item : CB6404+10019
Date : 2016.10.12
U In : 230 V~, 50/60Hz
I In : Max. 1A
IPX4
Int. : 10%, Max. 2 min. / 18 min.



NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ

W/O #1234567-0001 ASSEMBLED IN CHINA

The control box CB6 has been specially developed for use together with LA27/LA40 actuator in the care and rehab industry.

The control box is designed to be mounted on the actuator LA27/LA40 as with the CB9 and LA31 system.

The CB6 control box has a LED power ON indicator, detachable mains cable and strain relief for all cables.

The control box CB6 communicates with the LA27/LA40 actuator by means of the built-in end stop signal switches in the actuator. Due to the signal switches the power to the motor will be cut off in the control box and not in the actuator.

Usage:

- Duty cycle: 2/18; 2 minutes continuous use followed by 18 minutes not in use
- CB6 is approved according to EN60601-1 / UL60601-1
- The CB6 can only be combined with LA27/LA40 and HB30 / HB70 / HL70 / HB80 and HL80.



Recommendations


- Be aware of the hand control configuration (e.g. CH1, 2, 3 should be CH1, 3, 4).
- Same cables variants as for CB9 CARELINE and CB12.

Connecting the system:

- Do not connect the mains cable until all actuators have been connected to the control box.
- Start by connecting the hand control to the control box. The connection at the control box is marked with "HB".
- Connect the different actuators to the different channels on the control box. Each channel is marked with a number (e.g. "1", "2", "3"....).
- Check that all plugs are well connected and firm pushed into the connection plug.
Due to the fact that LINAK control boxes are designed for a high IP degree, a firm force can be required.
- CONNECT the mains and turn on the power!
- Finally, connect the battery (BA18) with special T-cable or normal battery cable depending on the specified system.
- The actuators can now be operated by pushing a button on the hand control. Use only one button at a time.

If the control box is equipped with special software, an initialising process might be necessary. This process is described in the software specification.

CB6 system diagram

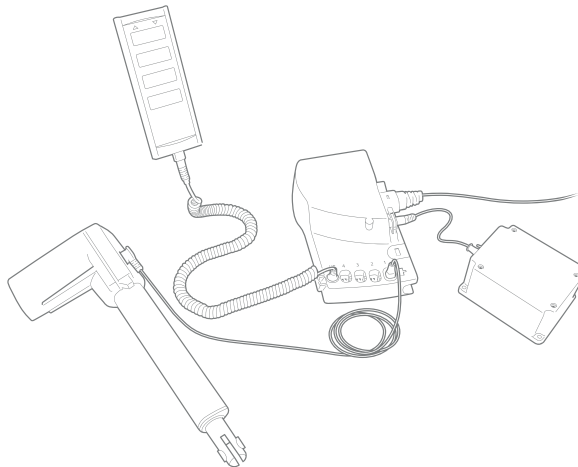

Attention should be paid to the following:

- Control boxes must only be connected to the mains voltage specified on the label.
- The control box must be connected in such a way that the cables are not trapped, exposed to tension or sharp objects, when the application is moved in different directions.



WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK

Item : CB6S654+U2009
Date : 2015.01.07 W/O #1234567-0001
U In : 230 V~, 50/60 Hz
I In : Max. 2 A

Int. : 10%, max. 2 min. / 18 min.
S.W. P/N.: Testsoftware Ver. 1.2 IPX6 OBMe
CONTACT LINAK FOR APPLICATION ADVICE BEFORE INSTALLING
CABLE LOCK MUST ALWAYS BE MOUNTED WHEN IN USE
NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS OUVRIER PAR DU PERSONNEL NON AUTORISE



ASSEMBLED IN CHINA



WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK

Item : CB6S674+H3409
Date : 2015.01.07 W/O #1234567-0001
U In : 100-240 V~, 50/60 Hz
I In : Max. 5 A

Int. : 10%, max. 2 min. / 18 min.
IPX6 OBMe SMPS
CONTACT LINAK FOR APPLICATION ADVICE BEFORE INSTALLING
CABLE LOCK MUST ALWAYS BE MOUNTED WHEN IN USE
NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS OUVRIER PAR DU PERSONNEL NON AUTORISE



ASSEMBLED IN CHINA

The CB6OBMe is part of the LINAK OpenBus™ product range - that provides more flexible solutions no matter which actuator concept is preferred.

Is a powerful control box with Switch Mode Power Supply or traditional transformer solution which is typically used for applications like hospital beds, couches/tables for treatment and examination and other medical applications. The universal Switch Mode Power Supply makes the control box adaptable to the worldwide market irrespective of the input voltage.

Features & Options:

Power supply: SMPS Universal: 270W, 100-240VAC 50/60Hz
Transformer toroidal: 270W, 230VAC 50/60Hz, 120VAC 60Hz

Usage:

Approvals: IEC 60601-1
ANSI/AAMI ES 60601-1 and CAN/CSA-C22.2 No. 60601-1
Duty cycle: 10 %, 2 min/18 min

Low Power consumption.

Low Power is CB6OBMe with a standby power equal to the standby power loss in the transformer, typically approx. 2.5W. Exclusive power consumption from accessories.

To reduce the power consumption, the microcontroller will shut down all circuits in standby.

If there is no activity for 2 minutes the CB6OBMe will shut down and thereby turn off the lights in all accessories.

If any accessories or other devices activate Power Request, the CB6OBMe will wake up again. See the state and transitions diagram of the CB6OBMe.

Mains connected:

Mains is connected and full operation is possible. If the CB6OBMe is charging the battery it will stay in this state. All indicators will turn off after 2 minutes, except the charging indicator.

Mains Low Power:


Mains is connected, but the CB6OBMe is shut down to save as much power as possible.

Battery Operating:

Mains is disconnected and the CB6OBMe operates on battery. Full operation is possible as long as the battery voltage is above approx. 22V.

Battery Low Power:

Mains is disconnected and the CB6OBMe is shut down to save as much battery power as possible. The diagram below shows the state and transitions of the CB6OBMe.

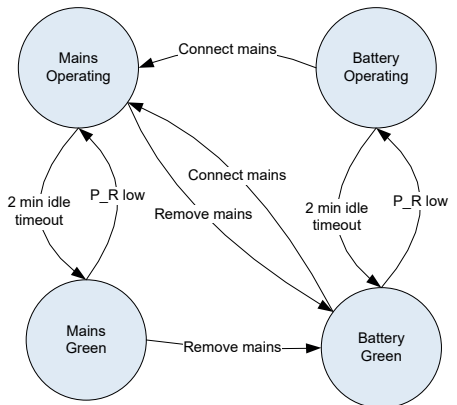

Possible combinations

CB6OBMe – with transformer has been approved for CLASS I operation incl. CLASS I cables (with pigtail for earth).

CB6OBMe – with SMPS is not approved for CLASS I operation, basically because of the design of the housing. However the PCB contains 2 x fuses (phase, neutral) as required for CLASS I operation.

Duty Cycle Guard:

CB6OBMe incl. SMPS comes as default with DCG (Duty Cycle Guard) to protect the system. It is default set to 1020As, equal to approx. 2 min continuous use at 8A.

Example:

If 10 % duty cycle @ max. current is exceeded the CB shuts down. If instead an application is rated for 10 % duty cycle @ 50 % of max. current – the duty cycle limit may be increased to 20 %.

If the CB shuts down it will recover for operation after 240 seconds (4 min.)!

Battery Operation:

BATTERY LEVELS:

BATTERY HIGH: > 20 V - normal

BATTERY MEDIUM: 17.5 - 20 V - alarm

BATTERY LOW: < 17.5 V - critical

- If the battery voltage is at 'medium level' a battery alarm beeps constantly when activating the HB/ACx. (Medium level means that battery charging is necessary to maintain the best possible lifetime. Medium level battery limit corresponds to approx. 17.5-20 V (+/- 5 %).
- If the battery voltage is at 'low level' (< 17.5 V), the battery alarm function shuts down all operation immediately.
(If trying to operate the system anyway, the battery could become deeply drained or the actuator system could be damaged.
When at critical battery level, there is a risk that the processor will incorrectly monitor end of stroke. Crashing the actuator could be a result.
Critical level limit corresponds to approx. < 17.5 V (+/- 5%).
- If battery back-up is applied it only commences battery charging when it is connected to the mains.
- A battery stored at 25 °C has to be recharged every 6 - 7 months.
- Prior to first use of LINAK batteries, please make sure that they are charged for 24 hours in order to reach proper function and prolong the lifetime of the batteries.
- The longest lifetime is obtained when the battery is fully charged.

If Backlight supported HB is used:

- When CB6OBMe is powered by mains voltage:
 - If an HB button is activated the backlight illuminates fully.
 - When the HB button is released the light is dimmed again after approx. 10 - 15 sec.
 - Backlight turns completely off after 2 min.
 - Exception: While charging the HB backlight will stay on dimmed until charging is finished.
- When CB6OBMe is powered by battery:
 - If a HB button is activated the backlight illuminates fully.
 - When the HB button is released the light is dimmed again after approx. 10 - 15 sec.
 - Backlight turns completely off after 2 min.

1st Failure safe monitoring - transformer version

Is made in two ways on the OBMe platform. It may be difficult to observe the LED status (hardware) if CB6 OBMe is placed under a bed, therefore it is now monitored by software as well.

- CB6 OBMe is equipped with a 1st Failure safe indication controlled by HW (power request).
At normal operation (no failure observed) the power LED turns yellow when a HB button is activated.

If the LED has turned yellow AND the HB has NOT been activated, it indicates that a failure has occurred (1st Failure).

NOTE: Even though the LED illuminates yellow before the HB is activated it is possible to operate the CB6, however the 1st. Failure is somehow still in the CB and must be removed to prevent a further failure causing a hazardous failure to happen.

- To meet the safety requirements the device must have a dual switch safety concept. Further information about OpenBus™ safety concepts, please contact your local LINAK.
- The safety function must be monitored and this monitoring is implemented in the SW. In case of a failure (fatal error) any further operation of any channels are prevented. At a fatal error the CB6 OBMe responds with the following information:
- Failure indication:
 - ▲ all ACO LED's are blinking
 - ▲ The CB6 OBMe buzzer beeps shortly if a handset is activated
 - ▲ The error can be reset by activating H0 and H1 OR H10 and H11 or H20 and H21 (standard SW only) on a handset.

LINAK®WE IMPROVE YOUR LIFE
DESIGNED IN DENMARKItem : CB6P694+H1009 P.O.2114579-0001
Date : 2014.06.20
U In : 100-240 V~, 50/60 Hz
I In : Max. 5 A

Int. : 10%, max. 2 min. / 18 min.

S.W. P.N.: 20171110 Ver. 1.0 IPX6

CONTACT LINAK FOR APPLICATION ADVICE BEFORE INSTALLING

CABLE LOCK MUST ALWAYS BE MOUNTED WHEN IN USE

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS A OUVRIIR PAR PERSONNEL NON-AUTORISE



LINAK A/S



MADE BY LINAK A/S DENMARK

The CB6P2 platform is introduced to obtain a powerful and optimised solution to customers looking for existing analogue input systems. It is based on OpenBus™ technology, but to meet existing analogue systems it has an analogue input similar to HB40 and therefore OpenBus™ accessories cannot be connected.

Combination Overview

CB6P2 is meant for use with:

LA27 std. motor with Hall (cable type 'A')

LA27 std. motor (cable type 'B'),

LA31 std. / fast motor with / without Hall,

LA34 std. / small / fast motor with / without Hall (fast motor not max. load),

LA40 std. motor with / without Hall

LA44 std. / fast motor with / without Hall (fast motor not max. load),

BL1 (only with 270W transformer type) with / without Hall, HB7x, HL7x, HB8x, ACL/ACM/ACP (HB40-like)



Recommendations

Battery Operation:

- If the battery voltage is at 'low level', a battery alarm beeps constantly when the HB/ACx is activated. (Low level means that battery charging is necessary to maintain the best possible life time. Low level battery limit corresponds to approx. 19 V (+/- 5 %).
- If the battery voltage is at 'critical level' the battery alarm function shuts down all operation immediately. Critical level limit corresponds to approx. 17.5 V (+/- 5 %).
- If battery back-up is applied it only commences battery charging when it is connected to the mains.
- A battery stored at 25 °C has to be recharged every 6 - 7 months.
- Prior to first use of LINAK batteries, please make sure that they are charged for 24 hours in order to reach proper function and prolong the lifetime of the batteries.
- The longest lifetime is obtained when the battery is fully charged.



Designed in Denmark
DK - 6430 Nordborg

Item : CB6S634+Z2009
Date : 2016.10.12 W/O #1234567-0001
U In : 230 V~, 50/60 Hz
I In : Max. 2 A

Int. : 10%, max. 2 min. / 18 min.
S.W. P/N.: 78212 Ver. 1.00 IPX6 OBF
"CONTACT LINAK FOR APPLICATION ADVICE BEFORE INSTALLING"
"CABLE LOCK MUST ALWAYS BE MOUNTED WHEN IN USE"

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISE






ASSEMBLED IN CHINA

CB6S is part of the LINAK OpenBus™ product range - that provides more flexible solutions no matter which actuator concept is preferred.

Mounting of CB6S – article no. 9271233

Apart from LA27 and LA40, it is not possible to mount CB6S onto LINAK actuators. In such case you need a CB6 mounting bracket which can be welded or likewise to the application.

This bracket is shown below:

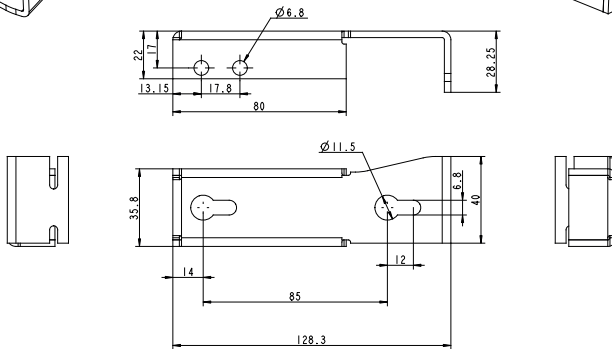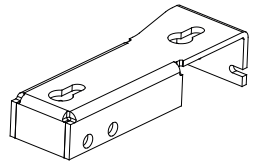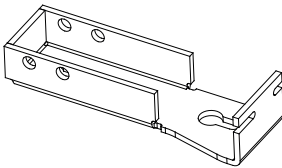

! Precautions:

Thermal protection:

OBF only

The CB is equipped with a thermal protection to avoid thermal overload of the FET transistors used to control the actuators.

When triggering the thermal protection all movement of the actuators will stop and the buzzer will sound for 5 seconds constantly. The 5 second alarm will be reinitiated each time the hand control / ACP or similar is activated until the CB is cooled down enough to allow a movement again

The thermal monitoring system monitors a temperature rise and not an absolute temperature. The monitoring system has been designed to operate up to an ambient temperature of 40 degrees. If the CB is exposed to a temperature higher than 40 degrees for several hours while powered it will adapt to this temperature. In this case there is a risk of damaging the FET transistors without triggering the thermal protection.

At first power up, after programming a new SW into the CB, the 'temperature reference value', used by the thermal monitoring system, will be automatically initialized. If this is done in a cold area the temperature reference value will be set accordingly and a too early temperature warning could occur (warning signal is temperature hoot = constant beep)

After the first power up, the temperature reference value will adapt over time to the surrounding temperature and the adaptation routine happens every 5 hours (provided the CB is unused and connected to mains). The 5 hour counter (used by the temperature adaptation routine) will be reinitiated every time a hand control / control panel is activated.

We therefore recommend that the CB is resting for min. 5 hours to adapt temperature wise to a 'normal operating' temperature, i.e. in the environment for intended use.



Recommendations

NOTE - HOT PLUGGING

Removing or adding any OpenBus™ cables is not allowed when the CB is powered by mains supply!
If needed anyway, follow the below procedure:

1. Remove mains and wait 5 sec.
2. Mount or dismount the required cables

If this procedure is NOT followed, it may result in a damaged OpenBus™ driver circuit.
The risk of a damaged circuit increases if the accessory has a high start current (in rush current).

OBF - hot-plugging protected from January 2016.



Precautions:

BATTERY OPERATION:

OBL and OBF:

- If the battery voltage is at '*low level*' a battery alarm beeps constantly (Low level means that battery charging is necessary to maintain the best possible lifetime. Low level battery limit corresponds to approx. 19 V (+/- 5 %).
- If the battery voltage is at '*critical level*' the battery alarm function shuts down all operation immediately.
(If trying to operate the system anyway, the battery could become deeply drained or the actuator system could be damaged. When at critical battery level there is a risk that the processor will incorrectly monitor end of stroke. Crashing the actuator could be a result. Critical level limit corresponds to approx. 17,5 V (+/- 5%).
- The CB6S with battery back-up only commences battery charging when it is connected to the mains.
- A battery stored at 25 °C has to be recharged every 6 - 7 months.
- Prior to first use of LINAK batteries, please make sure that they are charged 24 for hours in order to reach proper function and prolong the lifetime of the batteries.
- The longest lifetime is obtained when the battery is fully charged.

IF BACKLIGHT SUPPORTED HB IS USED:

- When CB6S is powered by mains voltage:
 - At no operation of the HB the backlight in the HB is dimmed.
 - If a HB button is activated the backlight illuminates fully.
When the HB button is released the light is dimmed again after approx. 10 - 15 sec.
- When CB6S is powered by battery:
 - At no operation of the HB there is no backlight in the HB.
 - If a HB button is activated the backlight illuminates fully.
When the HB button is released the backlight turns off.

OBF

- More information about "*OpenBus™ SW guidance*", please contact your local LINAK.

Mounting of LA27/LA40 on OBF:

- It is not recommended to mount LA27/LA40 on OBF because of the big toroidal transformer used.

6. CB7 (HOMELINE®)

LINAK®

WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK

Item : CB70081011-0000

Date : 2014.06.20 S.O.6145789

U in : 24 V~ ±10 %, 50-60 Hz

I in : Max. 5 A

Op. : Int. 10 %, Max. 2 min. / 18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS A OUVRIR PAR PERSONNEL NON-AUTORISE

CAUTION : NE PAS OUVRIR PAR DU PERSONNEL NON-AUTORISE

P.O.2114579-0001 MADE BY LINAK A/S DENMARK



Compared to other LINAK control boxes the CB7 is very small and compact in design.

The CB7 is designed to slide onto an LA31 actuator for easy fitting e.g. in a recliner application where "mounting" space is limited.

The control box function is divided in two parts. The actual control box CB7, which slides onto the LA31 actuator and a separate external power supply transformer box TR6 or TR7, which can be wall mounted or placed on the floor moulding next to the mains.

The control box is only fitted with low voltage electronic components and the connection between the CB7 and transformer is via a 24 V power cable.

7. CB8A (MEDLINE® CARELINE® TECHLINE®)

LINAK®

WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK

Item : CB8002A44-00

Date : 2016.01.09

W/O # 1234567-0001

MADE BY LINAK A/S DENMARK

Op. : 5% Max 3 min / 57 min

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

CAUTION : NE PAS OUVRIR PAR DU PERSONNEL NON-AUTORISE

120690



The CB8A is a battery powered control box operating up to 3 actuators individually. One of these channels can be used either as an external emergency stop device or for battery charging.

Simple design and high quality construction make the CB8A an ideal control box choice for mains-free operation of beds, chairs, tables and many other mobile applications.

Usage:

- Duty cycle: Max. 5% or 3 min. in use followed by 57 min. not in use
- Ambient temperatures: + 5°C to +40 °C
- Approvals: IEC60601-1:2005 3rd edition approved ANSI/AAMI, ES60601-1:2005 3rd edition approved.



Recommendations

- Note: max. accumulated power consumption is 10 Amp.
- The measurement is individual for each channel, but if the total current consumption reaches 10 Amp, the CB cuts off the current. The CB and the actuator are therefore protected via a common measurement.
- External Charger CH01 has to be ordered separately. By use of charger CH01 it is possible to activate the actuators when charging. However, this is not recommended as it can damage the control box or the charger CH01.
- Battery kit BA0801 has to be ordered separately for versions M, G, H, Q, R (2 channel) and version M (3 channel).
- When using the CB8A with emergency stop button, the stop button must be released before charging batteries.
- Acoustic alarm sounds when batteries are low and recharging should be started. The alarm level corresponds to approx. 17-18 VDC.
- If the CB800XXXN-X0 option is chosen, an external emergency stop device (NC) or short-circuiting connection must be mounted in channel 3, before connection to allow proper function and battery charging.

Important: Individual current cut-off:

The current to each actuator is monitored and when this reaches a specified value, the current to that actuator is cut-off.

As the actuators do not have the same current consumption the cut-off values must also be different. Therefore it must be specified which actuator is to be connected to which channel:

CURRENT CUT-OFF (A)
2 A (2.35 +/- 0.35 Amp)
3 A (3.00 +/- 0.35 Amp)
4 A (4.00 +/- 0.50 Amp)
5 A (5.35 +/- 0.50 Amp)
6 A (5.90 +/- 0.70 Amp)

Values in brackets show tolerances.

8. CB8-T (MEDLINE® CARELINE® TECHLINE®)

LINAK®
 WE IMPROVE YOUR LIFE
 DESIGNED IN DENMARK
 Item : CB8002T22-0017
 Date : 2016.01.09
 W/O # 1234567-0001
 MADE BY LINAK A/S DENMARK

U In : 230 V~ / 50 Hz
 I In : Max. 0.63A
 IPX5
 Op. : 5%, max. 1 min. / 19 min.



CAUTION : NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
 NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ

The CB8-T is developed for use with LINAK A/S' actuators and handsets. The control box can operate up to 2 actuators individually.

The simple compact design combined with high quality makes the control box ideal for use with beds, chairs, tables and many other applications.

Important: Individual current cut-off:

The current to each actuator is monitored and when this reaches a specified value, the current to that actuator is cut-off.

As the actuators do not have the same current consumption the cut-off values must also be different. Therefore it must be specified which actuator is to be connected to which channel:

CURRENT CUT-OFF (A)
2 A (2.35 +/- 0.35 Amp.)
3 A (3.00 +/- 0.35 Amp.)
4 A (4.00 +/- 0.50 Amp.)
5 A (5.35 +/- 0.50 Amp.)
6 A (5.90 +/- 0.70 Amp.)

Values in brackets show tolerances.

9. CB9 (HOMELINE®)

LINAK®

WE IMPROVE YOUR LIFE
 DESIGNED IN DENMARK
 Item : CB9000AK4+00000
 Date : 2016.01.09
 U In : 230V ~, 50/60 Hz
 I In : Max. 1.5A

Int. : 10%, Max. 2 min./18 min.



NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
 NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ

W/O #1234567-0001 MADE BY LINAK A/S DENMARK

The CB9 has been developed for Home use. The CB9 and the LA31 can be fully integrated, which saves mounting and wiring or be installed separately.

The HOMELINE CB9 series is available as either analogue (Ax) or μ -processor based (Px) types.

10. CB9 (MEDLINE® CARELINE®)

LINAK®

WE IMPROVE YOUR LIFE
 DESIGNED IN DENMARK
 Item : CB9140AK4+00010
 Date : 2016.01.09
 U In : 230V ~, 50/60Hz
 I In : Max. 1.5A

IPX4
 Int. : 10%, Max. 2 min./18 min.



NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
 NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ

W/O #1234567-0001 MADE BY LINAK A/S DENMARK

The CARELINE® CB9 has been developed for use together with LA31/LA31R, LA34/LA34R* in the Care & Rehab industry. CB9 and LA31 can be fully integrated which saves mounting and wiring or be installed separately.

Exchangeable mains cables, Electronic Overload Protection (EOP), EAS, earth connection (Class 1) and exchangeable mains fuse makes CB9 a good choice for the simple hospital and care beds.

Usage:

- Duty cycle: Max. 10 % or 2 min. continuous use followed by 18 min. not in use
- Ambient temperature: + 5 °C to + 40 °C
- Compatible with up to 4 actuators, type LA31/LA31R and LA34/LA34R, via 4-pole DIN sockets
- Compatible with BA18
- Medically approved according to EN 60601-1/UL 60601-1



Recommendations

LA34 fast motor is not compatible with any standard versions of CB9, due to high current consumption. For use of LA34 standard motor and small motor always use a CB9 with EAS.

Additionally, actuators with reed switch may not be connected to AC, AJ, AK, AF, AL or AM types because of a conflict between the CB-signal wires and the reed wires !

CB9 is equipped with a green LED for indication of mains power connected.

- When the CB9 is connected to mains, the LED is green.
- Connected only to battery, the LED is off.




The cables are locked in position with a locking mechanism.



The locking mechanism is shown here (not in position)

CB9 mounted on actuator, LA31.

CB9 for mounting on application.
Shows the two holes used for mounting

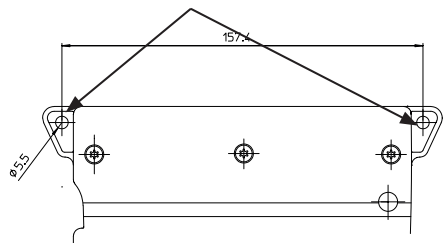

CB9 can be mounted and fixed together with LA31 with one screw.

11. CB9 CARELINE Basic (MEDLINE® CARELINE®)



WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK
Item : CB9000PM4-N0000
Date : 2014.06.20 S.O.6145789
U In : 230V ~, 50/60 Hz
I In : Max. 1.5A

Int. : 10%, Max. 2 min./18 min.



NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS OUVRIER PAR PERSONNEL NON-AUTORISÉ
P.O.2114579-0001 MADE BY LINAK A/S DENMARK

The CARELINE® Basic CB9 has been developed for use together with LA31 and LA34 in the Care & Rehab industry. CB9 and LA31 can be fully integrated thus saving mounting and wiring or they can be installed separately. Exchangeable mains cables, Electronic Overload Protection (EOP) and earth connection (Class 1) mains fuse makes CB9 a good choice for simple hospital and care beds. The CARELINE® Basic CB9 series is only available as an analogue (Ax) type.

Microprocessor:

With LINAK software packages the Px types are aimed at applications where parallel drive and/or memory functions are required. Please consult the ordering example for a detailed description of the article number.

Internal battery charger:

Compatible with BA18.

If anything other than a LINAK® charger is used, it must conform to the following specifications:

Charging voltage: 27.6 V DC \pm 2% Charging current: < 300 mA.

EOP:

AC and AF: Means common measurement on CH1, CH2, CH3 and CH4. If the total current exceeds 5A all channels will be cut off.

AJ and AL: Means a common current measurement on CH1+2. The current will be cut off when the total current on both channels reaches approx. 3.4A and 7A on CH3+4.

Note: CH1+2 = LA31 connection and CH3+4 = LA31/LA34 connection.

AK and AM: Means common measurement on CH1, CH2, CH3 and CH4. If the total current exceeds 7A all channels will be cut off.

AS: Means an individual current measurement on CH1, CH2, CH3 and CH4. The current will be cut off only when the current on one channel reaches approx. 4A.

Max. current available from the CB9 transformer is approx. 7A.

Px: Means Electronic Overload Protection via a pulse measurement.

Usage:

- Duty cycle: Max. 10% or 2 min. continuous use followed by 18 min. not in use
- Ambient temperature: + 5 °C to + 40 °C
- Compatible with up to 4 actuators, type LA31/LA31R and LA34/LA34R, via 4-pole DIN sockets
- Compatible with BA18
- Medically approved according to EN 60601-1/UL 60601-1 3rd edition



Recommendations

The LA34 fast motor is not compatible with any standard versions of the CB9, due to high current consumption. For use of the LA34 standard motor and small motor always use a CB9 with EAS.

Additionally, actuators with reed switch may not be connected to AC, AJ, AK, AF, AL or AM types because of a conflict between the CB-signal wires and the reed wires !

12. CB12 (MEDLINE® CARELINE®)



Designed in Denmark
DK - 6430 Nordborg

Item : CB12E0003A0032A
Date : 2017.10.09
U In : 230 V ~, 50/60 Hz
I In : Max. 1.4 A IPX6
Int. : 10 %, Max. 2 min./18 min.



NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS OUVRIER PAR DU PERSONNEL NON-AUTORISÉ
W/O #1234567-0001 MADE IN DENMARK

The CB12 product range features two standard versions, which are ideal for a vast number of medical and industrial applications.

In general the CB12 is a transformer operated control unit, which can control up to 4 actuators. The control box feature a range of built-in safety devices, increased current cut-off, EAS (Electronic Arc Suppression), and other options such as battery backup, earth outlet, wet alarm etc.

CB12 with battery backup

The CB12 with battery backup has an acoustic alarm, which sounds when the batteries are low, approx. 17 - 18V. To charge the batteries on a CB12 with internal batteries, just connect the CB12 to mains. With external batteries, connect the external batteries to an external charger.

External battery charger

If anything other than a LINAK® charger is used, it must conform to the following specifications:

Charging voltage: 27.6 V DC \pm 2%

Charging current: < 300 mA.



Warning

In order to avoid injury, a system with control(s) or accessories, a CB12 with battery backup and actuators assembled, must always be disassembled in transport and service situations.

13. CB14 (MEDLINE® CARELINE® TECHLINE®)



WE IMPROVE YOUR LIFE

DESIGNED IN DENMARK

Item : CB14M0364AA140F 075044

Date : 2014.06.20 S.O.6145789

U In : 120 V~, 60 Hz

I In : Max. 3.5 A

IPX1

Int. : Int. 10 %, Max. 2 min. / 18 min.

S.W. P/N.: 0076362 Ver. 2.00



NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS À OUVRIR PAR PERSONNEL NON-AUTORISÉ



P.O.2114579-0001 MADE BY LINAK A/S DENMARK

The CB14 with microprocessor is developed for systems with a need to run up to five actuators or two actuators / lifting columns in parallel and / or with memory function.

The effective toroidal transformer and the many features such as battery backup, earth outlet, wet alarm makes the control box suitable for a variety of applications.

CB14 with battery backup

The CB14 with battery backup has an acoustic alarm, which sounds when the batteries are low, approx. 17 - 18 V. To charge the batteries on a CB14 with internal batteries, just connect the CB14 to mains. With external batteries, connect the external batteries to an external charger.

Memory position on CB14

When storing the memory position on CB14 the actuators must be run to the wanted position and the "store" button (S) must be pushed. Hereafter, the selected memory button (1, 2, or 3) must be activated within 2 seconds.

Microprocessor

All control boxes with a microprocessor must be initialized before start-up. A description of the initialisation procedure can be obtained from your LINAK dealer. If an actuator is replaced, the microprocessor always has to be initialised before use (actuators with reed/hall).

If re-programmed, please ensure that the correct software is used.

External battery charger

If anything other than a LINAK® charger is used, it must conform to the following specifications: Charging voltage: 27.6 V DC ± 2%
Charging current: < 300 mA.



Warning

In order to avoid injury, a system with control(s) or accessories, a CB14 with battery backup and actuators assembled, must always be disassembled in transport and service situations.

14. CB16 (MEDLINE® CARELINE®)



WE IMPROVE YOUR LIFE

DESIGNED IN DENMARK

Item : CB16605+000020J

Date : 2016.01.09

W/O # 1234567 - 0001

MADE BY LINAK A/S DENMARK

U In : 230V~ 50/60 Hz / I In: Max. 2 A

Int. : 10% Max. 2 min. / 18 min.

S.W.0078300 Ver.1.2 IPX6



CAUTION: NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS À OUVRIR PAR DU PERSONNEL NON-AUTORISÉ



CB16 is part of the LINAK® OpenBus™ product range. It is a powerful control box with either traditional transformer solution or Switch Mode Power Supply. The universal Switch Mode Power Supply makes the control box adaptable to the worldwide market irrespective of the input voltage.

Usage:

- Approvals: CB160BF/OBL is approved according to IEC60601-1:2005 3rd ed., ANSI / AAMI ES60601-1:2005, 3rd edition, CAN / CSA-22.2 No 60601-1:2008.
- Compatibility: LA27 (no feedback/encoded feedback), LA31, LA34, LA43, LA44, BL1, and BL4
- Duty cycle: 10%, 2 minutes continuous use followed by 18 minutes not in use
- Usage temperature: 5 °C to 40 °C
- Storage temperature: - 10 °C to 50 °C



Recommendations

NOTE - HOT PLUGGING

Removing or adding any OpenBus™ cables are not allowed when the CB is powered by mains supply!

If needed anyway follow the below procedure:

1. Remove mains and wait 5 sec.
2. Mount or dismount the required cables

If this procedure is NOT followed it may result in a damaged OpenBus™ driver circuit.

The risk of a damaged circuit increases if the accessory has a high start current (in rush current).

NOTE - Use of internal mains signal in software or on OpenBus™

Please note when using the internal mains signal on control boxes with SMPS that the mains signal may take up to 6 seconds before disappearing after mains has been removed.

Battery operation:

BATTERY LEVELS

Battery High: > 20 V - normal


Battery Medium: 18 - 20 V - alarm

Battery Low: < 18 V - critical

- If the battery voltage is at *'Medium level'* a battery alarm beeps as long as a key is activated. (Medium level means that battery charging is necessary to maintain the best possible lifetime).
- If the battery voltage is at *'Low level'*, the battery alarm function shuts down all movement immediately. The OpenBus™ is still active for approx. 15 seconds. (If trying to operate the system anyway, the battery could get deep drained or the actuator system could get damaged. When at low battery level (which is critical), there is a risk that the processor will incorrectly monitor the end of stroke. Crashing the actuator could be a result).
- The CB16 with battery back-up only commences battery charging when it is connected to the mains.
- For more information about the batteries, please contact LINAK.

Before startup of CB16OBF

Due to the microprocessor in CB16OBF the control box has to be initialised before startup. Initialisation will in most cases be possible pressing H0 and H1 or H10 and H11 on a hand control.

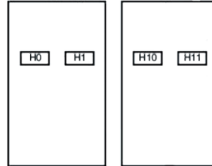

Initialisation depends upon the software description so please obtain a description of the initialisation procedure from your local LINAK dealer.

- If an actuator is replaced, the microprocessor always has to be initialised before use (actuators with reed / hall).
- If re-programmed please ensure that the correct software is used.



Precautions

If backlight supported HB is used:

- When CB16 OBL or OBF is powered by mains voltage:
 - At no operation of the HB the backlight in the HB is dimmed.
 - If an HB button is activated the backlight illuminates fully.
 - When the HB button is released the light is dimmed again after approx. 10 - 15 sec.
- When CB16 OBL or OBF is powered by battery:
 - At no operation of the HB there is no backlight in the HB.
 - If an HB button is activated the backlight illuminates fully.
 - When the HB button is released the backlight turns off.

1st failure safe monitoring:

- Failure indication:
 - all ACO LED's are blinking
 - The CB16 buzzer is shortly beeping if a hand control is activated
 - The error can be reset by activating H0 and H1 OR H10 and H11 on a hand control.

Compatibility – CB16 OBL:

- Using actuators with feedback on CB16 OBL are not supported. If used anyway it will not work properly. The reason is that feedback signals (e.g. Hall signals) is positioned at the same PINS as analogue stop signals - when using no feedback.

CB16OBF SMPS - Actuator combinations and/or customized software

- Due to the high power from the CB16OBF SMPS, it is highly recommended to validate the system to guarantee the lifetime of connected actuators. Especially when using customized software and/or actuator combinations which do not comply with the LINAK compatibility list - for further questions please contact your local LINAK contact.

15. CB20 (MEDLINE® CARELINE®)



WE IMPROVE YOUR LIFE

DESIGNED IN DENMARK

Item : CP2000000A01009


Date : 2016.01.14

U In : 230 V~, 50/60 Hz

I In : 3 A

IPX4

 Int. : Int. 10% Max. 2 min./18min.



NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ

W/O #1234567-0001 MADE BY LINAK A/S DENMARK

CB20 is a platform which offers a unique safety concept, logging off service data and it is possible to connect a variety of accessories to the control box.

The CB20 consists of 3 modules :

CP20 = Control Power CU20 = Control Unit BA20 = Battery.



Item : BA2016-0200-000

Date : 2016.01.14 IPX6

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ

MADE BY LINAK A/S DENMARK

W/O #1234567-0001



For recommendations on maintenance and storage of the BA20 battery packs, please refer to chapter 5.



Item : CU2001000811004

Date : 2015.11.02 IPX4

W/O #1234567-0001

MADE BY LINAK A/S DENMARK

U In : ONLY LINAK CP20

Op. : 10%, max. 2 min / 18 min.

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS A OUVRIR PAR DU PERSONNEL NON-AUTORISÉ



Usage:

- Compatible with specific versions of LA23, LA31, LA34, LA40, LA43, LA44 and BL1
- Duty cycle: 10 % - max. 2 min. continuous use followed by 18 min. not in use
- Ambient temperature: + 5 °C to + 40 °C
- Approvals: IEC60601-1:2005 3rd ed., ANSI / AAMI E560601-1:2005, 3rd edition, CAN/CSA-22.2 No 60601-1:2008 approved

Please be aware:

CB20 is delivered in 3 separate units - CU20 + CP20 + BA20. The units are not assembled at LINAK A/S.

Microprocessor

All control boxes with a microprocessor must be initialized before start-up. A description of the initialization procedure can be obtained from your LINAK dealer. If an actuator is replaced, the microprocessor always has to be initialized before use (actuators with reed/hall). If re-programmed, please ensure that the correct software is used.

External battery charger

If anything other than a LINAK® charger is used, it must conform to the following specifications: Charging voltage: 28.0 VDC ± 2 %
Charging current: < 300 mA.



Recommendations

- Please note mains cable must be ordered separately

HOT PLUGGING

Removing or adding any OpenBus™ cables are not allowed when the CB is powered by mains supply! If necessary anyway follow the below procedure:

1. Remove mains and wait 5 sec.
2. Mount or dismount the required cables

If this procedure is NOT followed it may result in a damaged OpenBus™ driver circuit. The risk of a damaged circuit increases if the accessory has a high start current (in rush current).

- Please note mains cable must be ordered separately.

Battery running:

- If battery capacity is under 50% a "bip" sound is given for 2 seconds, when a hand control key is pressed.
- If the system is activated and the mains plug is pulled out, the system will stop. In the opposite case, if the system is running using battery power and the mains plug is then plugged in, the system will continue running.
- The charging indicator can blink if the system operates with a high load causing the voltage to drop and because of this the batteries will start to charge.
- The CB20 with battery back-up only commences battery charging when it is connected to the mains.
- A running battery must be charged for at least 12 hours before use.
- For recommendations on charging cycles and first use of the BA20 battery pack, please refer to chapter 5.

16. CBR1 (MEDLINE® CARELINE® HOMELINE®)



WE IMPROVE YOUR LIFE

Item : CBR1000200-0909

U In : 24 V~ ±10%, 50/60 Hz

U Out: 24 V ~, max. 100 VA

Date : 2009.03.19 IPX0 S.O.7654321

Duty : 10% Max. 2 min. / 18 min.

MADE BY LINAK A/S DENMARK

P.O.123456-0001

The CBR1 has been developed for use together with the RA40 Rotary actuator. The CBR1 can be installed in the same profile as the RA40 Rotary actuator thus saving mounting and wiring.

LINAK®

Designed in Denmark
 DK - 6430 Nordborg
 Type : CO4+09411X09200
 Item : CO41000-00



Date : 2018.11.28
 U In : 100-240 V~, 50/60 Hz
 I In : Max. 2.5 A

IPX6 Washable
 Int. : 10%, max. 2 min. / 18 min.
 S.W. P/N.: 12345678 Ver. 9.0



W/O #1234567-0008 MADE IN CHINA

The LINAK control box CO41 offers a consolidated range of unprecedented features – all utilising standardised technology, interfaces and compatibility.

The CO41 for LINAK actuators is intended for the control of, for example, hospital bed movement. Equipped with 120W SMPS, excellent and well thought-out cable management as well as multiple easy mounting options, this control box opens up a wide range of application possibilities for the provident hospital and care products manufacturer.

Features:

- Duty cycle: 10 % - 2/18 min. on/off continuous use.
 Maximum power is 120 W for 80 seconds and 60 W for 40 seconds at 25 °C.

LED indicator

CO41 is equipped with a green LED for indication of mains power connected.

When the CO41 is connected to mains, the LED is green. Connected only to battery, the LED is off.

Connected to MAINS	
LED colour	Indication of operation
Green	On mains, <u>not</u> activated by hand or foot control. The system is working ok and is ready for normal operation.
Yellow	On mains, <u>not</u> activated by hand or foot control. The system is defective and should not be operated.
Yellow	On mains, <u>activated</u> by hand or foot control. The system is working.


Not connected to mains but with BATTERY back-up	
LED colour	Indication of operation
Orange	On battery, <u>activated</u> by hand or foot control. The system is working.
No LED	On battery, <u>not</u> activated by hand or foot control. or CO41 not connected to mains.

Acoustic signal functionality:

The buzzer will make a warning, when a button on the hand control is pressed, and the battery capacity is low.


The buzzer can also be activated by the control box to signal other conditions. This must be specified in the control box software.

Mounting bracket (frame flat)
 - article No. 1015W1001:

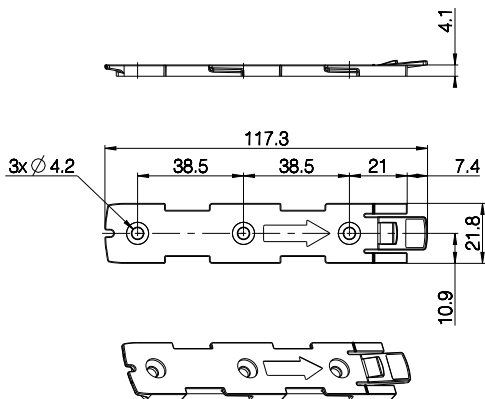


Drawing No.: 1015W4001

Mounting bracket (frame flat) w/M4 nuts
 - article No. 1015W9009:

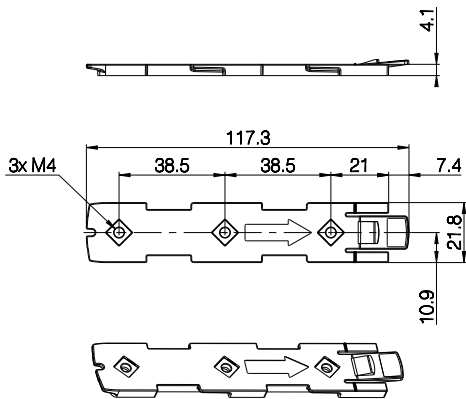


Drawing No.: 1015W4009

CO41 - mounted on frame:

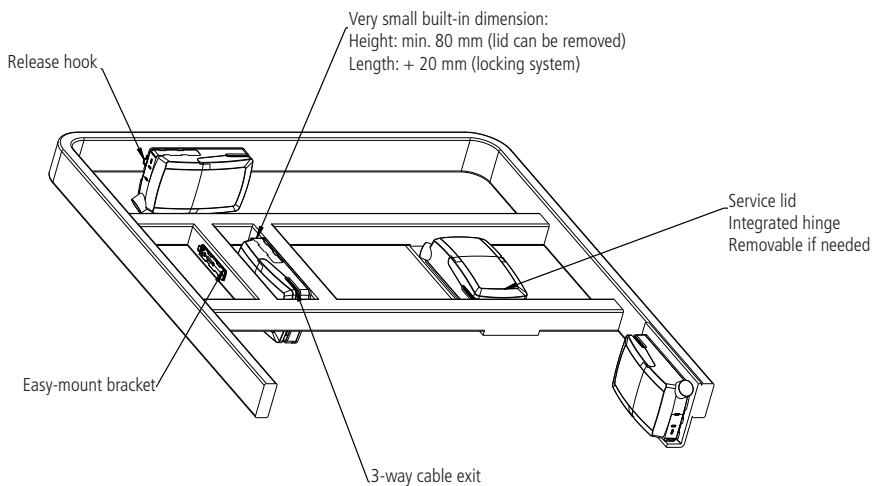


Mounting instructions (Example CO41 with LA40)


When mounting the control box onto the actuator (1)

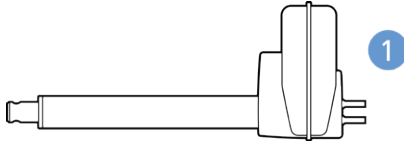

Simply slide on the bracket until you hear a clear click (2)

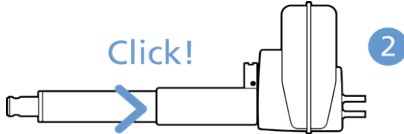

Slide on the control box until you hear a click and the box is mounted (3)

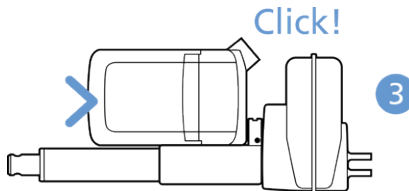

It is recommended that the CO41 is mounted in a position that allows water to escape.

Recommended torque: 0.6 Nm +/-0.1

The bracket can be mounted to the bed frame or any other application by following one of the following mounting procedures:

- 1) M6 nut to be placed in bracket and fixed with M6 bolt from the rear side.
- 2) M5 machine screw with flat washer to be fixed through bracket with nut on the rear side.
- 3) Self-tapping screw to be placed through bracket and onto the frame.

Mounting of cables and cable lock:

CO41 has a uniquely designed cable lid. The lid also works as an integrated cable lock when closed.


- 1) Mount cable plugs in control box
- 2) Close lid until lock snaps into place (see arrows)

To allow free access to the cables, the lid has a rest position when completely opened. It is possible to remove the lid by lifting it a few degrees and pulling it away from the housing under tight mounting conditions.

See illustrations:





1

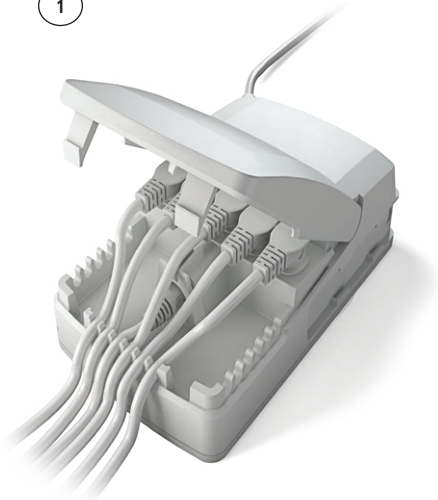

Cable management:

2

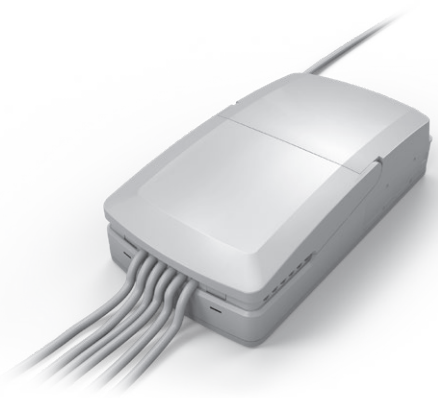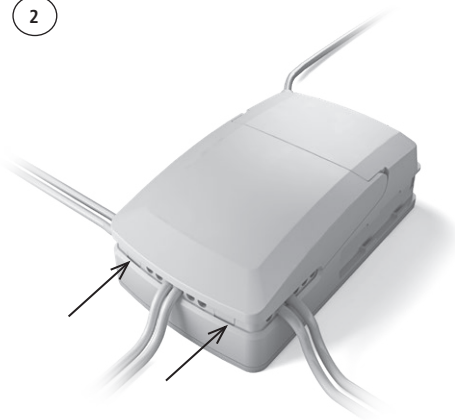



Recommendations

- To avoid unintended activation of actuators if hand control cables short-circuit, LINAK recommends to use an OpenBus™ system (CO41).
- If there is a risk that the system is overloaded and therefore shuts down thermally, LINAK recommends to use quick release actuators. These will allow functions to be lowered manually in case of a CO41 malfunction due to misuse/abuse.
- If the customer has other essential performance than “no unintended movement”, he must consider this in his own risk analysis. LINAK disclaims any liability.
- If the actuator or the control cable is removed from the control box, the cable lock must be applied. To ensure movement in this case, LINAK recommends to use quick release actuators in the application.
- To avoid cables from being damaged by pulling, LINAK recommends to make safe cabling. If movement is an essential performance, LINAK recommends to apply quick release actuators, for example, to ensure movement.
- To avoid thermal protection from being activated, do not exceed load specifications. If movement is an essential performance, LINAK recommends to apply quick release actuators, for example, to ensure movement.
- Sales must request a review of the products according to current cut-off limits.

Motor cable

Always use 6-wire cables.

Please note that angled motor cable plugs are required for connection to the control box.

Because of the half-bridge technology used in CO41 there is an interdependence between each half-bridge, CH1 + 2 and CH3 + 4. Half-bridge connected channels cannot run simultaneously in opposite directions. E.g. running a trend function using CH3 and CH4 will not be possible.



Warnings

- Use EPR or ensure that the user takes care not to squeeze the mains cable.
- Always check correct assembly after mounting and service to ensure that the cable lock is mounted. (Connectors are usually removed during cleaning)
- Always use approved chemicals with the housing as the plastic may show corrosion caused by some chemicals. As a result water may accumulate/gather in housing.
- Take special precautions concerning 3rd party interfacing. Please contact LINAK for further information.
- Make a review of all product specifications before system set-up if the current cut-off limit is higher than the maximum allowed current cut-off for the actuator.
- To avoid cable interruption and actuator defects make a proper cable installation and inspect regularly for wear and damage. Defective parts must be replaced.
- After service inspection, the application must be tested for correct functionality before it is put into operation to avoid actuator plugs being mixed during service. Operators must not be inside entrapment area.
- To avoid electrical failure or system disturbance inspect regularly for wear and damage. Defective parts must be replaced.
- Make a proper cable installation to avoid short-circuit cables for hand control/controls. Regular inspection must be made for wear and damage. Defective parts must be replaced.

LINAK®

Designed in Denmark
 DK - 6430 Nordborg
 Type : CO6+09421X09200
 Item : CO610000-00



Date : 2018.11.28
 U In : 100-240V~, 50/60 Hz
 I In : Max. 3.9 A

IPX6 Washable
 Int. : 10%, max. 2 min. / 18 min.
 S.W. P/N.: 12345678 Ver. 9.0



W/O #1234567-0008 MADE IN CHINA

The LINAK control box CO61 offers a consolidated range of unprecedented features – all utilising standardised technology, interfaces and compatibility.

The CO61 for LINAK actuators is intended for the control of, for example, hospital bed movement. Equipped with 200W SMPS, excellent and well thought-out cable management as well as multiple easy mounting options, this control box opens up a wide range of application possibilities for the provident hospital and care products manufacturer.

Features:

- Duty cycle: 10 % - 2/18 min. on/off continuous use.
 Maximum power is 200 W for 80 seconds and 100 W for 40 seconds at 25 °C.

LED indicator

CO61 is equipped with a green LED for indication of mains power connected.

When the CO61 is connected to mains, the LED is green. Connected only to battery, the LED is off.

Connected to MAINS

LED colour	Indication of operation
Green	On mains, <u>not</u> activated by hand or foot control. The system is working ok and is ready for normal operation.
Yellow	On mains, <u>not</u> activated by hand or foot control. The system is defective and should not be operated.
Yellow	On mains, activated by hand or foot control. The system is working.

Not connected to mains but with BATTERY back-up

LED colour	Indication of operation
Orange	On battery, activated by hand or foot control. The system is working.
No LED	On battery, <u>not</u> activated by hand or foot control. or CO61 not connected to mains.


Acoustic signal functionality:

The buzzer will make a warning, when a button on the hand control is pressed, and the battery capacity is low.


The buzzer can also be activated by the control box to signal other conditions. This must be specified in the control box software.

Mounting bracket (frame flat) - article No. 1015W1001:

Mounting bracket (frame flat) w/M4 nuts - article No. 1015W9009:

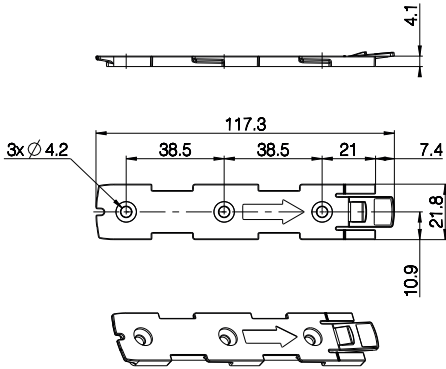


Drawing No.: 1015W4001

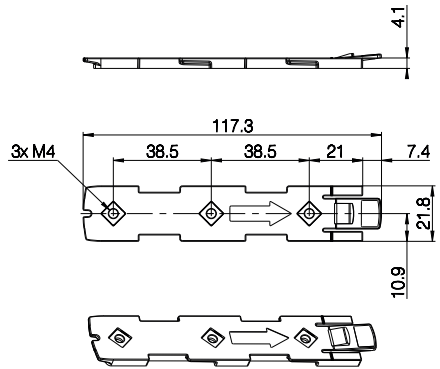


Drawing No.: 1015W4009

C061 - mounted on frame:

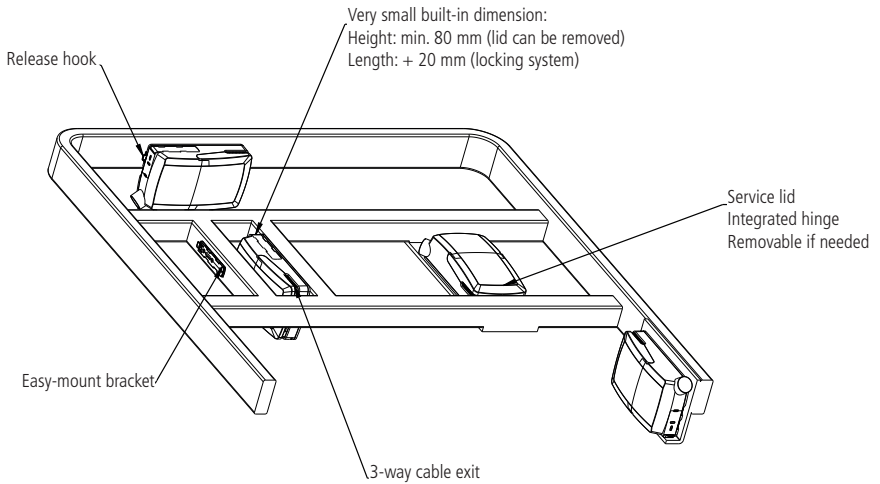

Mounting instructions (Example CO61 with LA40)


When mounting the control box onto the actuator (1)

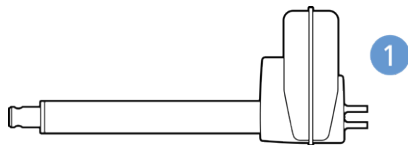

Simply slide on the bracket until you hear a clear click (2)



Slide on the control box until you hear a click and the box is mounted (3)

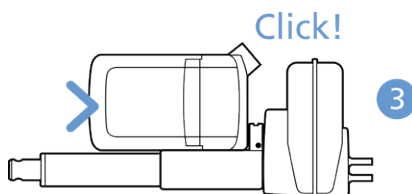

It is recommended that the CO61 is mounted in a position that allows water to escape.

Recommended torque: 0.6 Nm +/-0.1

The bracket can be mounted to the bed frame or any other application by following one of the following mounting procedures:

- 1) M6 nut to be placed in bracket and fixed with M6 bolt from the rear side.
- 2) M5 machine screw with flat washer to be fixed through bracket with nut on the rear side.
- 3) Self-tapping screw to be placed through bracket and onto the frame.

Mounting of cables and cable lock:


C061 has a uniquely designed cable lid. The lid also works as an integrated cable lock when closed.

- 1) Mount cable plugs in control box
- 2) Close lid until lock snaps into place (see arrows)


To allow free access to the cables, the lid has a rest position when completely opened.

It is possible to remove the lid by lifting it a few degrees and pulling it away from the housing under tight mounting conditions.

See illustrations:


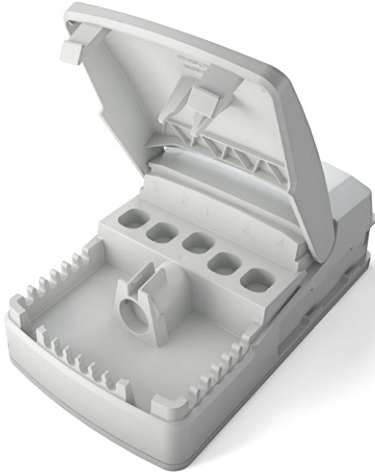


1

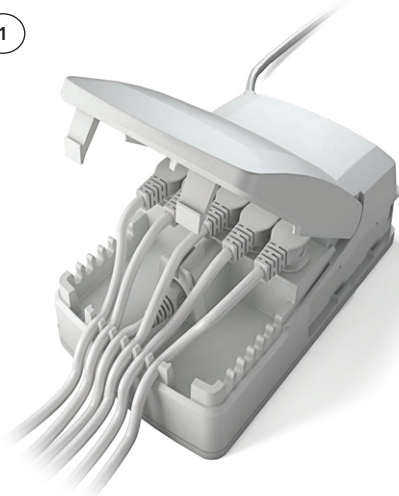

Cable management:

2

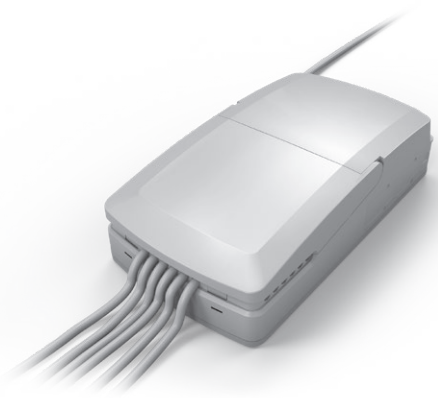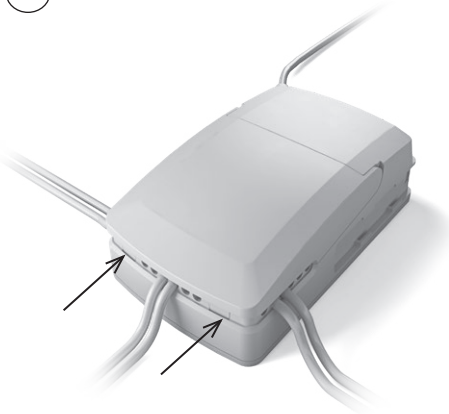



Recommendations

- To avoid unintended activation of actuators if hand control cables short-circuit, LINAK recommends to use an OpenBus™ system (CO61).
- If there is a risk that the system is overloaded and therefore shuts down thermally, LINAK recommends to use quick release actuators. These will allow functions to be lowered manually in case of a CO61 malfunction due to misuse/abuse.
- If the customer has other essential performance than “*no unintended movement*”, he must consider this in his own risk analysis. LINAK disclaims any liability.
- If the actuator or the control cable is removed from the control box, the cable lock must be applied. To ensure movement in this case, LINAK recommends to use quick release actuators in the application.
- To avoid cables from being damaged by pulling, LINAK recommends to make safe cabling. If movement is an essential performance, LINAK recommends to apply quick release actuators, for example, to ensure movement.
- To avoid thermal protection from being activated, do not exceed load specifications. If movement is an essential performance, LINAK recommends to apply quick release actuators, for example, to ensure movement.
- Sales must request a review of the products according to current cut-off limits.

Motor cable

Always use 6-wire cables.

Please note that angled motor cable plugs are required for connection to the control box.



Warnings

- Use EPR or ensure that the user takes care not to squeeze the mains cable.
- Always check correct assembly after mounting and service to ensure that the cable lock is mounted. (Connectors are usually removed during cleaning)
- Always use approved chemicals with the housing as the plastic may show corrosion caused by some chemicals.
As a result water may accumulate/gather in housing.
- Take special precautions concerning 3rd party interfacing. Please contact LINAK for further information.
- Make a review of all product specifications before system set-up if the current cut-off limit is higher than the maximum allowed current cut-off for the actuator.
- To avoid cable interruption and actuator defects make a proper cable installation and inspect regularly for wear and damage. Defective parts must be replaced.
- After service inspection, the application must be tested for correct functionality before it is put into operation to avoid actuator plugs being mixed during service. Operators must not be inside entrapment area.
- To avoid electrical failure or system disturbance inspect regularly for wear and damage. Defective parts must be replaced.
- Make a proper cable installation to avoid short-circuit cables for hand control/controls. Regular inspection must be made for wear and damage. Defective parts must be replaced.
- Do not mount the actuator with the spindle facing downwards to avoid that the actuator slips off the bracket with mounted control box. The bracket can come loose when exposed to shock or hard vibration, for instance when passing doorsteps. Regular inspection must be made to ensure proper fixation of control box and bracket on actuator.



Designed in Denmark
 DK - 6430 Nordborg
 Type : CO6+09451T09200
 Item : CO65



Date : 2019.05.03
 U In : 100-240 V~, 50/60 Hz
 I In : Max. 4.5 A

IPX6 Washable
 Int. : 10%, max. 2 min. / 18 min.
 S.W. P/N.: 9876543 Ver. 2.1



W/O #1234567-0008 Made in China 01

The LINAK control box CO65 offers a consolidated range of unprecedented features – all utilising standardised technology, interfaces and compatibility.

Usage:

- Operation temperature: +5 °C to +40 °C
- Storage temperature: -10 °C to +50 °C
- Relative humidity: 20% - 90% at 30 °C - not condensing
- Atmospheric pressure: 700 to 1060 hPa
- Meters above sea level: Max. 2000 meters
- Approvals: IEC60601-1 edition 3.1
 ANSI/AAMI ES60601-1:2005/(R) 2012
 CSA CAN/CSA-C22.2 NO. 60601-1:14

LED indicator



CO65 is equipped with a green LED for indication of mains power connected. When the CO65 is connected to mains, the LED is green. Connected only to battery, the LED is off.

Connected to MAINS	
LED colour	Indication of operation
Green	On mains, <u>not</u> activated by hand or foot control. The system is working ok and is ready for normal operation.
Yellow	On mains, <u>not</u> activated by hand or foot control. The system is defective and should not be operated.
Yellow	On mains, activated by hand or foot control. The system is working.


Not connected to mains but with BATTERY back-up	
LED colour	Indication of operation
Orange	On battery, activated by hand or foot control. The system is working.
No LED	On battery, <u>not</u> activated by hand or foot control. or CO61 not connected to mains.

Acoustic signal functionality:


The buzzer will make a warning, when a button on the hand control is pressed, and the battery capacity is low. The buzzer can also be activated by the control box to signal other conditions. This must be specified in the control box software.

Mounting bracket (frame flat) - article No. 1015W1001:

Mounting bracket (frame flat) w/M4 nuts - article No. 1015W9009:

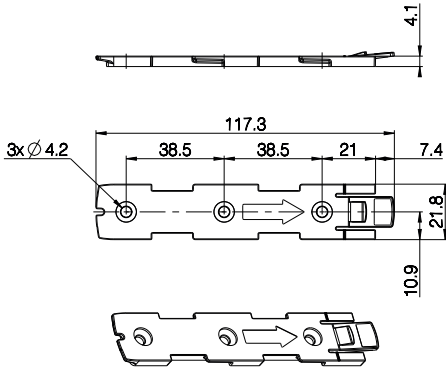


Drawing No.: 1015W4001

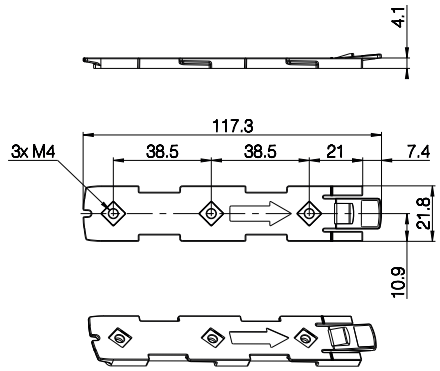


Drawing No.: 1015W4009

C065 - mounted on frame:

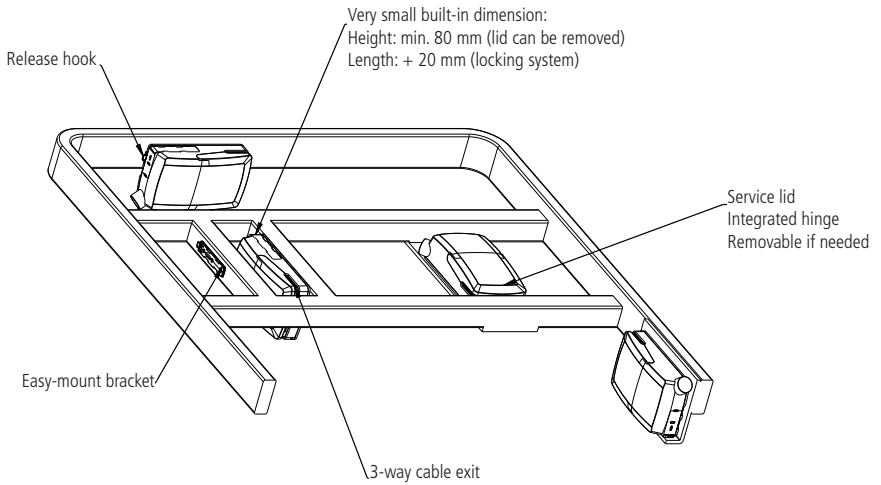

Mounting instructions (Example CO65 with LA40)


When mounting the control box onto the actuator (1)

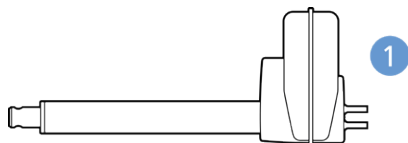

Simply slide on the bracket until you hear a clear click (2)



Slide on the control box until you hear a click and the box is mounted (3)

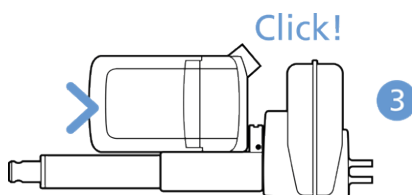

It is recommended that the CO65 is mounted in a position that allows water to escape.

Recommended torque: 0.6 Nm +/-0.1

The bracket can be mounted to the bed frame or any other application by following one of the following mounting procedures:

- 1) M6 nut to be placed in bracket and fixed with M6 bolt from the rear side.
- 2) M5 machine screw with flat washer to be fixed through bracket with nut on the rear side.
- 3) Self-tapping screw to be placed through bracket and onto the frame.

Mounting of cables and cable lock:

C065 has a uniquely designed cable lid. The lid also works as an integrated cable lock when closed.

- 1) Mount cable plugs in control box
- 2) Close lid until lock snaps into place (see arrows)


To allow free access to the cables, the lid has a rest position when completely opened.

It is possible to remove the lid by lifting it a few degrees and pulling it away from the housing under tight mounting conditions.

See illustrations:





1

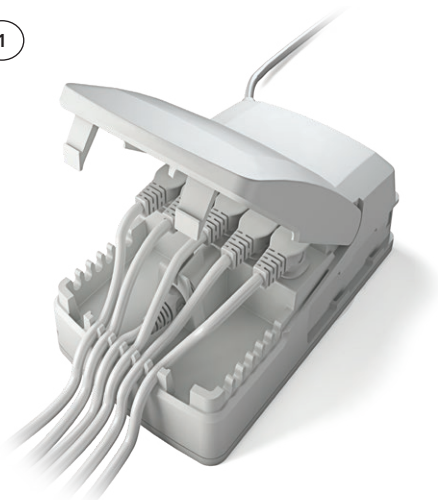

Cable management:

2

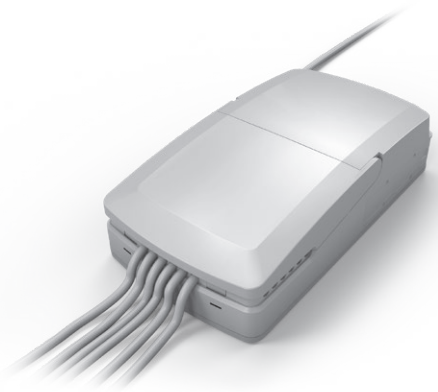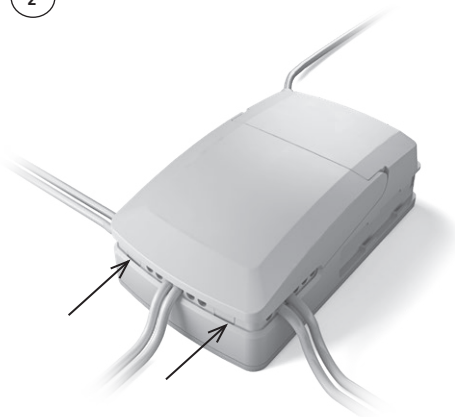



Recommendations

- To avoid unintended activation of actuators if hand control cables short-circuit, LINAK recommends to use an OpenBus system (CO65).
- If there is a risk that the system is overloaded and therefore shuts down thermally, LINAK recommends to use quick release actuators. These will allow functions to be lowered manually in case of a CO65 malfunction due to misuse/abuse.
- If the customer has other essential performance than "no unintended movement", he must consider this in his own risk analysis. LINAK disclaims any liability.
- If the actuator or the control cable is removed from the control box, the cable lock must be applied. To ensure movement in this case, LINAK recommends to use quick release actuators in the application.
- To avoid cables from being damaged by pulling, LINAK recommends to make safe cabling. If movement is an essential performance, LINAK recommends to apply quick release actuators, for example, to ensure movement.
- To avoid thermal protection from being activated, do not exceed load specifications. If movement is an essential performance, LINAK recommends to apply quick release actuators, for example, to ensure movement.
- Sales must request a review of the products according to current cut-off limits.

Motor cable

Always use 6-wire cables.

Please note that angled motor cable plugs are required for connection to the control box.



Warnings

- Use EPR or ensure that the user takes care not to squeeze the mains cable.
- Always check correct assembly after mounting and service to ensure that the cable lock is mounted. (Connectors are usually removed during cleaning)
- Always use approved chemicals with the housing as the plastic may show corrosion caused by some chemicals. As a result water may accumulate/gather in housing.
- Take special precautions concerning 3rd party interfacing. Please contact LINAK for further information.
- Make a review of all product specifications before system set-up if the current cut-off limit is higher than the maximum allowed current cut-off for the actuator.
- To avoid cable interruption and actuator defects make a proper cable installation and inspect regularly for wear and damage. Defective parts must be replaced.
- After service inspection, the application must be tested for correct functionality before it is put into operation to avoid actuator plugs being mixed during service.
Operators must not be inside entrapment area.
- To avoid electrical failure or system disturbance inspect regularly for wear and damage. Defective parts must be replaced.
- Make a proper cable installation to avoid short-circuit cables for handset/controls.
Regular inspection must be made for wear and damage. Defective parts must be replaced.
- Do not mount the actuator with the spindle facing downwards to avoid that the actuator slips off the bracket with mounted control box. The bracket can come loose when exposed to shock or hard vibratio, for instance when passing doorsteps. Regular inspection must be made to ensure proper fixation of control box and bracket on actuator.

LINAK 

Designed in Denmark
DK - 6430 Nordborg

Type : CO7+19431X29200
Item : CO710000-00



MAC : FF:FF:FF:FF:FF:FF

Date : 2018.11.28

U In : 100-240 V~, 50/60 Hz

I In : Max. 4.5 A

IPX6 Washable

Int. : 10%, max. 2 min. / 18 min.

S.W. P/N.: 12345678 Ver. 9.0



W/O #1234567-0008 MADE IN CHINA



The LINAK control box CO71 offers a consolidated range of unprecedented features – all utilising standardised technology, interfaces and compatibility.

The CO71 for LINAK actuators is intended for the control of, for example, hospital bed movement.

Equipped with 350W SMPS, excellent and well thought-out cable management as well as multiple easy mounting options, this control box opens up a wide range of application possibilities for the provident hospital and care products manufacturer.

Features and Options:

- Duty cycle: 10 % - 2/18 min. on/off continuous use.
Maximum power is 350 W for 80 seconds and 175 W for 40 seconds at 25 °C.

LED indicator



CO71 is equipped with a green LED for indication of mains power connected.

When the CO71 is connected to mains, the LED is green. Connected only to battery, the LED is off.

Connected to MAINS	
LED colour	Indication of operation
Green	On mains, <u>not</u> activated by hand or foot control. The system is working ok and is ready for normal operation.
Yellow	On mains, <u>not</u> activated by hand or foot control. The system is defective and should not be operated.
Yellow	On mains, <u>activated</u> by hand or foot control. The system is working.

Not connected to mains but with BATTERY back-up	
LED colour	Indication of operation
Orange	On battery, <u>activated</u> by hand or foot control. The system is working.
No LED	On battery, <u>not</u> activated by hand or foot control. or CO71 not connected to mains.


Acoustic signal functionality:

The buzzer will make a warning, when a button on the hand control is pressed, and the battery capacity is low.


The buzzer can also be activated by the control box to signal other conditions. This must be specified in the control box software.

Mounting bracket (frame flat) - article No. 1015W1001:

Mounting bracket (frame flat) w/M4 nuts - article No. 1015W9009:

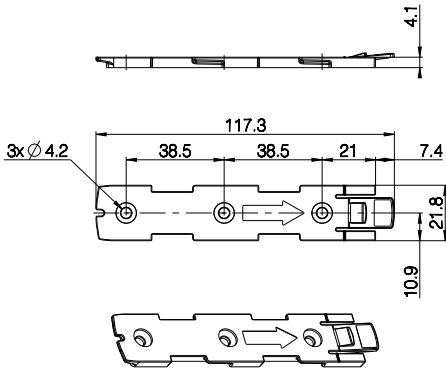


Drawing No.: 1015W4001

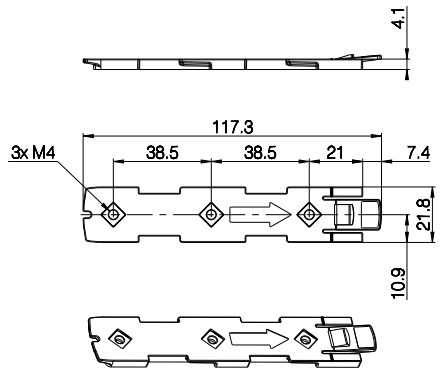


Drawing No.: 1015W4009

C071 - mounted on frame:

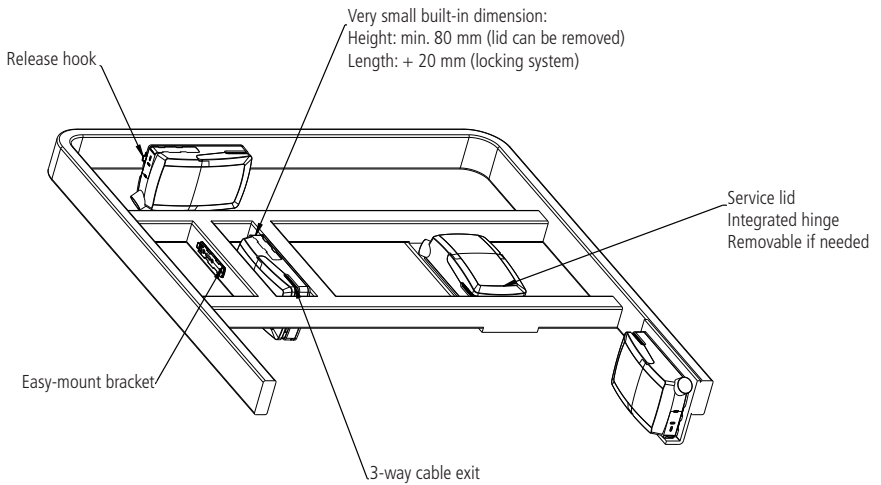

Mounting instructions (Example CO71 with LA40)


When mounting the control box onto the actuator (1)

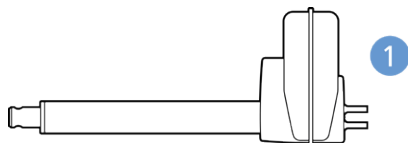

Simply slide on the bracket until you hear a clear click (2)



Slide on the control box until you hear a click and the box is mounted (3)

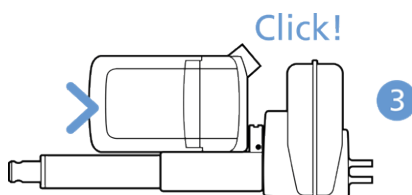

It is recommended that the CO71 is mounted in a position that allows water to escape.

Recommended torque: 0.6 Nm +/-0.1

The bracket can be mounted to the bed frame or any other application by following one of the following mounting procedures:

- 1) M6 nut to be placed in bracket and fixed with M6 bolt from the rear side.
- 2) M5 machine screw with flat washer to be fixed through bracket with nut on the rear side.
- 3) Self-tapping screw to be placed through bracket and onto the frame.


Mounting of cables and cable lock:

C071 has a uniquely designed cable lid. The lid also works as an integrated cable lock when closed.


- 1) Mount cable plugs in control box
- 2) Close lid until lock snaps into place (see arrows)

To allow free access to the cables, the lid has a rest position when completely opened.
It is possible to remove the lid by lifting it a few degrees and pulling it away from the housing under tight mounting conditions.

See illustrations:

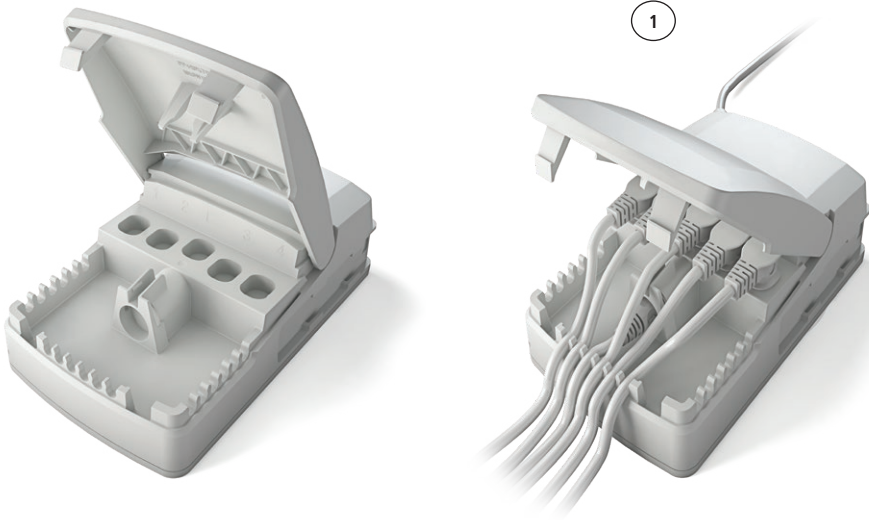

Cable management:

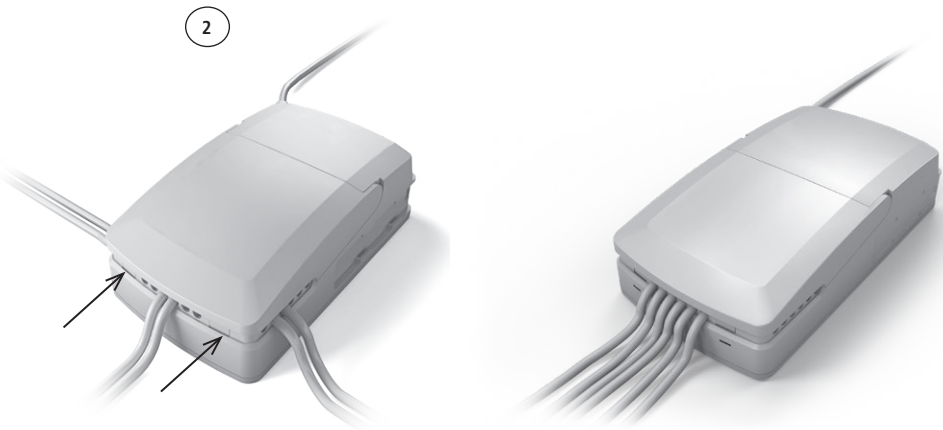



Recommendations

- To avoid unintended activation of actuators if hand control cables short-circuit, LINAK recommends to use an OpenBus™ system (CO71).
- If there is a risk that the system is overloaded and therefore shuts down thermally, LINAK recommends to use quick release actuators. These will allow functions to be lowered manually in case of a CO71 malfunction due to misuse/abuse.
- If the customer has other essential performance than “no unintended movement”, he must consider this in his own risk analysis. LINAK disclaims any liability.
- If the actuator or the control cable is removed from the control box, the cable lock must be applied. To ensure movement in this case, LINAK recommends to use quick release actuators in the application.
- To avoid cables from being damaged by pulling, LINAK recommends to make safe cabling. If movement is an essential performance, LINAK recommends to apply quick release actuators, for example, to ensure movement.
- To avoid thermal protection from being activated, do not exceed load specifications. If movement is an essential performance, LINAK recommends to apply quick release actuators, for example, to ensure movement.
- Sales must request a review of the products according to current cut-off limits.

Motor cable

Always use 6-wire cables.

Please note that angled motor cable plugs are required for connection to the control box.



Warnings

- Use EPR or ensure that the user takes care not to squeeze the mains cable.
- Always check correct assembly after mounting and service to ensure that the cable lock is mounted. (Connectors are usually removed during cleaning)
- Always use approved chemicals with the housing as the plastic may show corrosion caused by some chemicals. As a result water may accumulate/gather in housing.
- Take special precautions concerning 3rd party interfacing. Please contact LINAK for further information.
- Make a review of all product specifications before system set-up if the current cut-off limit is higher than the maximum allowed current cut-off for the actuator.
- To avoid cable interruption and actuator defects make a proper cable installation and inspect regularly for wear and damage. Defective parts must be replaced.
- After service inspection, the application must be tested for correct functionality before it is put into operation to avoid actuator plugs being mixed during service. Operators must not be inside entrapment area.
- To avoid electrical failure or system disturbance inspect regularly for wear and damage. Defective parts must be replaced.
- Make a proper cable installation to avoid short-circuit cables for hand control/controls. Regular inspection must be made for wear and damage. Defective parts must be replaced.
- Loss of mains: If the power supply is switched off for a short time (between 1 and approx. 1.5 seconds), the control box will only start up again if a key is pressed. This is only relevant for OpenBus™ systems that run continually
- Do not mount the actuator with the spindle facing downwards to avoid that the actuator slips off the bracket with mounted control box. The bracket can come loose when exposed to shock or hard vibration, for instance when passing doorsteps. Regular inspection must be made to ensure proper fixation of control box and bracket on actuator.



Designed in Denmark
 DK - 6430 Nordborg
 Item : PJ2+19200S00000
 S.W. P/N.: 830001 Ver. 37749
 Date : 2018.10.02
 IPX6 Washable
 Int. : 10%, max. 2 min. / 18 min.
 S.W. P/N.: 830001 Ver. 37749
 W/O #1234567-0001 MADE IN DENMARK



The LINAK Power Junction Box PJ2 offers two extra outputs for the COXX control box series. Standardised technology, interfaces and compatibility like the new COXX control boxes.

The PJ2 for LINAK actuators is intended for the control of, for instance, hospital bed and surgery tables movement.


Usage

- Operating temperature: +5 °C to +40 °C
- Storage temperature: -10 °C to +50 °C
- Relative humidity: 20 % - 90 % at 30 °C – not condensing
- Atmospheric pressure: 700 to 1060 hPa
- Meters above sea level: Max 2000 meters
- Approvals (pending): IEC60601-1, ANSI/AAMI ES60601-1, CSA CAN/CSA-C22.2 NO. 60601-1


Mounting brackets

For mounting with LA40 (Article No.: 1015W1002)

For mounting with LA31 (Article No.: 1015W1004):

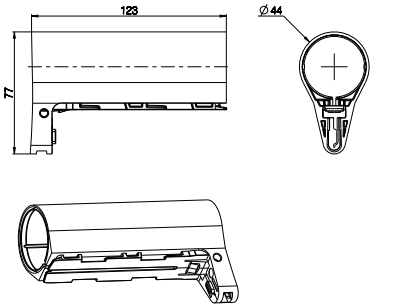


Drawing No.: 1015W4002

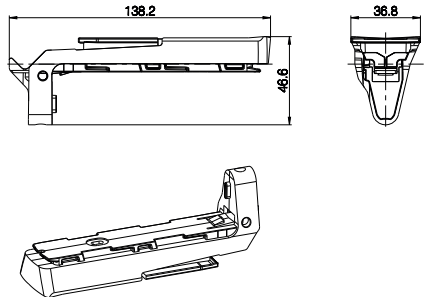

Drawing No.: 1015W1004

For mounting with LA27 (Article No.: 1015W9003):

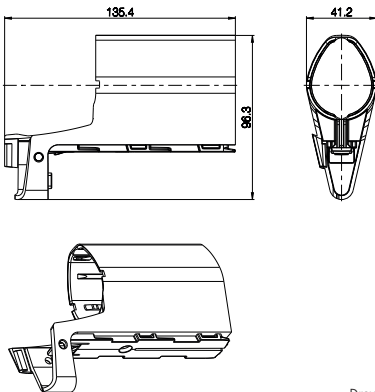


Drawing No: 1015W4003

The adapter 1015W9003 includes a screw that is halfway mounted, thus everything as one part.


Screw head torx size: T15
 Screw torque: 1.2 ± 0.2 Nm

Mounting bracket (frame flat) - article No. 1015W1001:

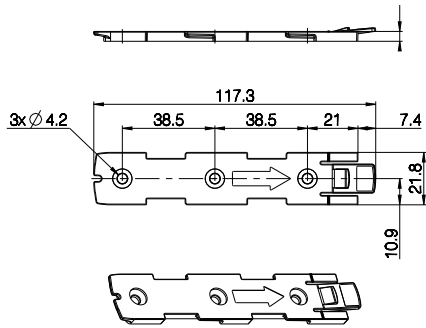

Drawing No.: 1015W4001

Mounting bracket (frame flat) w/M4 nuts - article No. 1015W9009:

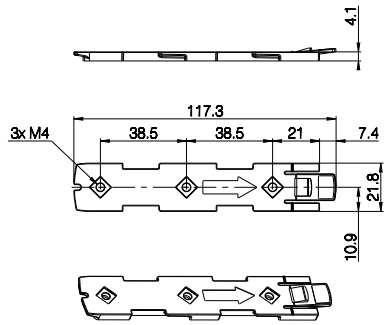

Drawing No.: 1015W1009


It is recommended that the PJ2 is mounted in a position that allows water to escape.

Recommended torque: 0.6 Nm +/- 0.1

The bracket can be mounted to the bed frame or any other application by following one of the following mounting procedures:

- M5 machine screw with flat washer to be fixed through bracket with nut on the rear side
- Self-tapping screw to be placed through bracket and onto the frame

Mounted on frame

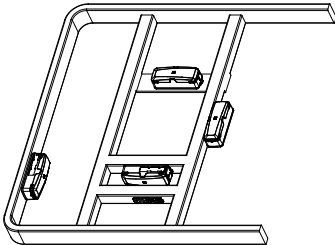

Drawing No.: 1038W4003

Mounting instructions (Example PJ2 with LA40)


When mounting the control box onto the actuator (1)



Simply slide on the bracket until you hear a clear click (2)



Slide on the control box until you hear a click and the box is mounted (3)

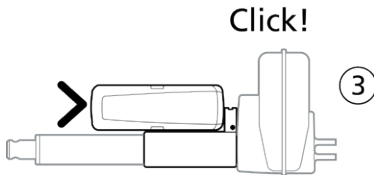

Cables

PJ2 has a uniquely designed cable lid. The lid also works as an integrated cable lock when closed.

- 1) Mount cable plugs in control box
- 2) Close lid until lock snaps into place (see arrows)

To allow free access to the cables, the lid has to be removed. It is possible to remove the lid by means of a screwdriver or similar, lifting the lid in each side and pulling it away from the housing.



Recommendations

- Always use 6-wire cables for actuators
- Always use 4-wire cables for PCP accessories
- Please note that angled cable plugs are required for connection to the PJ2



Recommendations

- When the system is overloaded, LINAK recommends to use quick release actuators in the application. These will allow functions to be lowered manually in case of a PJ2 malfunction due to misuse/abuse.
- If the customer has other basic safeties than "*no unintended movement*", he must consider this in his own risk analysis. LINAK disclaims any liability.
- If the actuator or the control cable is removed from the control box, the cable lock must be applied. To ensure movement in this case, LINAK recommends to use quick release actuators in the application.
- If the cable is damaged by pulling, LINAK recommends to make a safe cabling. If movement is an essential performance, LINAK recommends to apply quick release actuators, for example, to ensure movement.
- If the thermal protection is activated due to current overload when operating multiple actuators and/or excessive duty cycle, the operation must be kept within the specification. If movement is an essential performance, LINAK recommends to apply quick release actuators, for example, to ensure movement.
- Sales must request a review of the products according to current cut-off limits.



Warnings:

- Use EPR or ensure that the user takes care not to squeeze the mains cable.
- Always check correct assembly after mounting and service to ensure that the cable lock is mounted.
(Connectors are usually removed during cleaning)
- Always use approved chemicals with the housing as the plastic may show corrosion caused by some chemicals. As a result water may accumulate/gather in housing.
- Take special precautions concerning 3rd party interfacing. Please contact LINAK for further information.
- Make a review of all product specifications before system set-up if the current cut-off limit is higher than the maximum allowed current cut-off for the actuator.
- To avoid cable interruption and actuator defects make a proper cable installation and inspect regularly for wear and damage. Defective parts must be replaced.
- After service inspection, the application must be tested for correct functionality before it is put into operation to avoid actuator plugs being mixed during service.
Operators must not be inside entrapment area.
- To avoid electrical failure or system disturbance inspect regularly for wear and damage. Defective parts must be replaced.
- Make a proper cable installation to avoid short-circuit cables for handset/controls.
Regular inspection must be made for wear and damage. Defective parts must be replaced.
- Do not mount the actuator with the spindle facing downwards to avoid that the actuator slips off the bracket with the mounted PJ2. The bracket can come loose when exposed to shock or hard vibration, for instance when passing doorsteps.
Regular inspection must be made to ensure proper fixation of control box and bracket on actuator.
- PJ2 is ONLY to be used with PCP 2.0 control boxes.

6. Information on specific controls

1. ACC (MEDLINE® CARELINE®)



The ACC (Attendant Control Compact) is fitted to advanced hospital and patient care beds for use where patient positioning must be carefully controlled by medical staff.

2. ACK (MEDLINE® CARELINE®)

With the OpenBus™ system it is possible to use keypads as attendant control or hand controls integrated in the bed side rails.

There are two different variants of ACK: ACK1 and ACK3.

ACK1 is with a single keypad, whereas ACK3 is able to work with two keypads at the same time (typically an inside side rail and an outside side rail).

Features and Options:

- Straight cables: 1250 mm, 1800 mm or 2500 mm
- The standard ACK colour is grey (RAL 7035)

Usage:

- Operation temperature: +5 °C to +40 °C
- Storage temperature: -10 °C to +50 °C
- Compatibility: LINAK OpenBus™ control boxes
- Relative humidity: 20 % to 80 % – not condensing
- Atmospheric pressure: 700 to 1060 hPa
- Meters above sea level: Max. 2000 meters
- Approvals: IEC60601-1
ANSI/AAMI ES60601-1
CAN/CSA-22.2 No 60601-1

General information

For LINAK standard ACK's, the following is applicable:

- Adhesive for the standard ACK is 3M 468MP
- For information re. suitable and unsuitable surfaces, please see 3M's webpage
- Standard recommendation for curing time is 72 hours
- The customer is responsible for correct mounting on suitable surfaces



Recommendations

- The customer responsibility includes making a proper design of the cable strain relief inside the side rail panel.
- The customer should consider and ensure to use the correct flammability classification when defining and specifying the housing. According to IEC 60601-1. Minimum HB plastic.
- The customer should consider the existence of vibrations when defining and specifying the housing, i.e. we recommend the customer to carry out a vibration test on the final product.
- The customer must ensure a proper IP rating/test
- The customer must ensure proper drop testing according to IEC60601-2-52 §201.15.3.4.1. In this clause there is an additional reference to IEC60601-2-31.
- The customer is responsible for correct mounting of the PCBA. Among other things, it means
 - ensuring proper and safe mounting of the PCBA into e.g. the side rail
 - ensuring proper and correct mounting between key pad connection tails and the ACK PCBA
 - ensuring proper and correct mounting of the key pad
 - the customer should consider proper precautions against ESD (Electrostatic discharge).
- When handling ESDS (Electrostatic Discharge Sensitive) devices – e.g. during transport, storage, handling, production or mounting in an application - exposure to harmful ESD must be avoided.
- Consider proper creepage and clearance measures to fulfil IEC 60601. With One MOPP (One Means Of Patient Protection / Secondary side of the actuator system)
- It is not recommended to dismount the keypad after mounting as this may cause damage.

3. ACL (MEDLINE® CARELINE®)




The ACL (Attendant Control Lock) box is a one turn button box for various applications where the patient positioning must be carefully controlled by the medical staff.

The ACL disconnects all functions on hand control either by means of turn button or turn key.

The aim is to minimise the risk of unintended activation of an actuator and hereby minimising the risk of "squeezing". Due to ESF (Electronic Safety Function), the ACL / FS has to be operated using a certain technique in order to activate the switch. It is necessary to "double click" to start the system :

- Foot pressure must be applied for a short period of time, from 30 ms to 250 ms.
- Then briefly lift the foot from (max. 40 ms to max. 550 ms pause), followed by a normal activation.
- After an activation attempt without success, a pause of min. 1. sec. is required before a new attempt.

4. ACM (MEDLINE® CARELINE®)

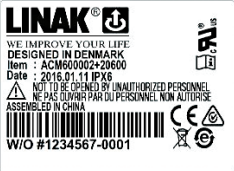

The ACM (Mini Attendant Control) box is fitted to hospital and care beds for use where patient positioning must be carefully controlled by the medical staff.

The compact design and simple operation makes it easy for the nursing staff to retain direct control over critical positioning functions whilst giving the patient a limited degree of adjustment.

The ACM must be mounted correctly on a flat surface to ensure IP degree. A short circuit in the cable can cause movement. To possibly avoid this risk, choose a OpenBus™ system.

5. ACO (MEDLINE® CARELINE®)



The ACO (Attendant Control OpenBus™) is a cost optimised and compact unit with up to 15 buttons that can be used as hand control keys or lock-outs. The lock-out function can be made visible by using yellow LED's. The ACO is compatible with control boxes that use an OpenBus™ interface i.e. CB65, CB16 and CB20.

Usage:

- Compatible with OpenBus™ e.g. CB20, CB65 and CB16.
- Ambient temperature: +5 °C to +40 °C
- Approvals: IEC 60601-1 Edition 3.1 (2012), IEC 60601-1-6:2010 + A1:2013, ANSI/AAMI ES60601-1: A1:2012, C1:2009/(R) 2012 and A2:2010/(R)2012, CAN/CSA-C22.2 NO. 60601-1:14
- Current consumption: 15 mA (Standard versions with 5 no. LEDs (5 LEDs x 2 mA = 10 mA) + microprocessor 5 mA, total = 15 mA)

In order to comply with the norm, the ACO must hang vertically from its hook during the washing process.



Recommendations

- Always use Locking ring and cables with O-rings.
- Locking ring and cables with O-rings must be fitted to ensure IP degree.
- If other front covers than standards are requested, the customer must design them.

N.B.

- Cables are inclusive an O-ring.

6. ACOM (MEDLINE® CARELINE®)

Item:ACOMV0612001+110500

Date:2017.12.04 IPX6

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ



W/O#P-00061837-0001

MADE IN CHINA



ACOM is the obvious control for hospital and nursing home beds where patient positioning needs careful control by medical staff. ACOM is an OpenBus™ control.

Usage:

- Operation temperature: +5 °C to + 40 °C
- Storage temperature: -10 °C to + 50 °C
- Relative humidity: 20 % to 80 % at +30° C, non-condensing
- Atmospheric pressure: 700 to 1060 hPa
- Approvals: IEC 60601-1 Edition 3.1 (2012), IEC 60601-1-6:2010 + A1:2013
- Compatibility: Compatible with LINAK OpenBus™ control boxes, CO-generation



Recommendations

- Clean the hand control regularly to ensure good hygiene standards.
- When a defective ACOM is replaced, check that the new ACOM has exactly the same specification and functionality.
- Do not submerge the hand control in water.
- Unless otherwise specified or agreed with LINAK, the hand control is only intended to be used for LINAK systems.
- When changing hand controls for OpenBus™ systems, the power must be switched off.
- It is recommended to check the hand control and cable for damage and holes caused by violent handling before washing the application or at least once a year.
- It is recommended to have a parking place for the hand control on the application where the customer ensures that the hand control does not fall off.



Warnings:

- Do not sit or lie on the hand control as this can cause unintended movement of the application.

7. ACP (MEDLINE® CARELINE®)

LINAK

WE IMPROVE YOUR LIFE

DESIGNED IN DENMARK

Item no.: ACP606006+20600

Date : 2016.01.09 IPX6

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ

W/O#P-1234567-0001


MADE BY LINAK A/S DENMARK

100600



The ACP (Attendant Control Panel) controller is fitted to advanced hospital and patient care beds for use where patient positioning must be carefully controlled by medical staff.

The ACP allows nursing staff to retain direct control over critical positioning functions while giving the patient a limited degree of adjustment.

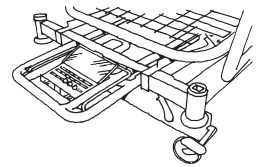

It is recommended to clean all surfaces, also surfaces covered by lids and the inside of the lids.

(In the event that the ACP is cleaned in wash tunnels; be aware that surfaces covered by lids and the inside of lids will not be cleaned)

8. ACT (MEDLINE® CARELINE®)

The Attendant Control Touch (ACT) for the hospital and care segment is a control panel with an intuitive, graphical three-level user interface:

1. Care mode for caregivers and relatives (bed operation)
2. Extended care mode for caregivers (extended bed operation, features, settings)
3. Service mode for technicians (advanced settings)

The ACT combines several operations and functionalities in one unit, thereby eliminating the need for several hand controls on the individual bed. In addition, the ACT is equipped with a large screen, giving the user a great overview of all the functions.

Software, graphics and front covers can be customised according to customer requirements.

The ACT supports the LINAK OpenBus™ system offering a high level of customisation.

Usage:

- Operation temperature: +5 °C to + 40 °C
- Storage temperature: -10 °C to + 50 °C
- Relative humidity: 20 % to 80 %
- Atmospheric pressure: 700 to 1060 hPa
- Approvals: IEC60601-1
ANSI/AAMI ES60601-1
CAN/CSA-22.2 No 60601-1
- Compatibility: All OpenBus™ control boxes



Technical recommendations:

- Always use the cable locking mechanism and an O ring.
- Prepare a system/bit overview as the unit may conflict with other OpenBus™ accessories such as HB, ACP etc.
- Avoid large metal parts in the vicinity of the RFID reader (approx. 50 mm).
- When designing the application, be aware of the ACT position in the application to avoid impact to the front glass.
- Use a LINAK magnet or a magnet with a minimum strength of 15 mT measured at a distance of 10 mm.
- Do not bend the cable more than the minimum bending radius of 10 mm when mounting the ACT in side rails or similar where the cable is repeatedly bent.
- Before first start-up, be aware not to place any magnetic devices or RFID tags in front of the company logo until the ACT goes into sleep mode to avoid calibration disturbance.
- Be aware that magnetic jewellery or magnets in general can activate care mode and lead to unintended use. LINAK recommends to use RFID tags.




Warnings:

- The application manufacturer must write an end-user manual based on the LINAK user manual which also includes relevant warnings, information on how to carry out regular inspection and a functionality description. End-users must be trained in all functions.
- Regular system inspections for wear or damage must be made.
- Mains and battery power must be disconnected before servicing.
- Using the magnet key cannot wake up a green system or a system running on battery. The system will wake up when activating a key and the magnet key can then unlock the system.

Mounting instructions:



The ACT must be mounted on the bed, for example on the footboard - illustration of the fitting is shown below.


The ACT must be supported on the back of the housing when fastening it to the mounting plate and not only supported on the edge of the housing front side.

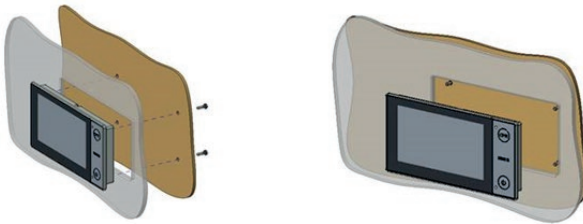

When mounting:

  
- LINAK recommends to use a self-tapping screw, BN84229, 50x12.
- Please observe that the 1.5 [Nm] screw torque limit is not exceeded.
- Please be aware that the screw holes in the ACT are only 11 mm deep. Use appropriate screws.
- Please ensure that the mounting leaves space (2 mm) between the ACT and the back of the housing. This to avoid that water is trapped. The space is only necessary where the membrane is placed on the ACT.
- If upward cable exit is used, mount a ferrite core to the cable (see section "Ferrite core").

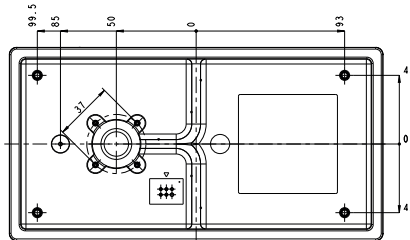



The recommended screw type is self-tapping BN84229 50 x 12.

A grounding cable (article no.: 1009W7004) will be supplied together with the ACT and must be connected to the OpenBus™ system and the other end to the bed frame to decouple electrical fields.

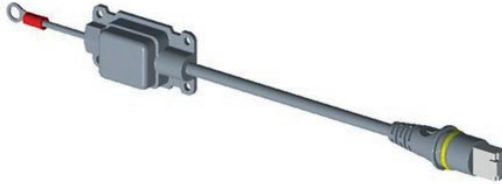

Ferrite core :


If upward cable exit is used, a ferrite core needs to be added as close as possible to the ACT.

Ferrite core specification:

At the mentioned frequencies, the impedance must be as stated in the table:

Frequency (MHz)	10	25	100	250
Impedance (Ω)	95	156	260	270

Ferrite core graphic characteristics:

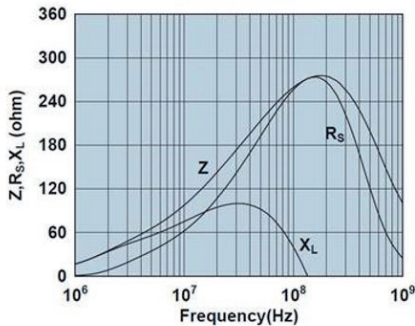

Impedance, reactance, resistance vs. frequency

9. DPH Medical (MEDLINE® CARELINE®)

The DPH is a small two button panel for adjustment of different functions. The DPH fits into a MJB with a modular plug and thereby compatible with OpenBus™.

Usage:

- Ambient temperature: +5 °C to +40 °C
- DPH is compatible with the OpenBox control boxes via Modular Junction Boxes MJB5061101-00 as follows:
Control Boxes: CB6S OBL, CB6S OBM, CB6S OBF, CB16 OBL, CB16 OBF, CB20
Modular Junction Box: MJB5061101-00
- DPH1K10-210007 combined with MJB5061101-00 creates the OpenBus™ code:
Up Arrow: H0
Down Arrow: H1
- Wrong mounting is not an issue with the MJB5061101-00 and the modular jack plug of the DPH cable.
The plug will only fit into the correct ports of the MJB.

10. FPP (MEDLINE® CARELINE®)



The FPP is for use with a variety of different bed types and is therefore compatible with control boxes that use an OpenBus™ interface i.e. CB6S, CB16 and CB20.

Usage:

- Ambient temperature: +5 °C to +40 °C
- Approvals: LINAK and UL International DEMKO A/S are currently in the process of certifying FPP re. UL60601 and EN60601-1.
- Current consumption: 15 mA (Standard versions with 5 no. LED's (5 LED's x 2 mA = 10 mA) + microprocessor 5 mA, total = 15 mA)



Recommendations

- The application manufacturer must insure a proper installation of the FPP in the application. The installation must be convenient for the end-user.
- To ensure proper activation, the lock above the housing must be properly locked by turning it clockwise.
- The application manufacturer must ensure the correct torque to the slotted set screw at the bracket, to ensure a stable positioning of the FPP.
- The application manufacturer must consider the bracket location for the FPP: If the FPP is mounted at a moveable part, it will move and might touch the patient or parts of the application. If mounted at a fixed part, the patient might move out of range to reach the FPP or he might even be hit by the FPP.
- The end-user must not apply a torque to the FPP housing exceeding 8 Nm between the flexible arm and the panel.
- The end-user must not bend the FPP arm to a radius smaller than 105 mm.
- The FPP must not be used as a handle at any time when moving the application.
- The end-user must be informed that the FPP must not be used for other purposes (e.g. table, handle) than intended, i.e. as a Flexible Patient Panel (FPP).
- The end-user must ensure the FPP does not hit items or persons when the application is moved.


Mounting instructions:

The FPP is intended for mounting at the head end of a bed so the patient is able to see and operate it with an easy push of a button. After use it can be moved a short distance away with an easy movement.


The FPP comes with a cable attached. The bottom part of the arm is prepared for mounting inside a bracket - fitting the diameter of the arm.

The bracket is not supplied by LINAK but must be designed and made by the customer. It must fit the dimensions shown. A suggestion to a design is illustrated on below pictures as well as the dimensions of the parts for fixation.

Dimensions Illustration:

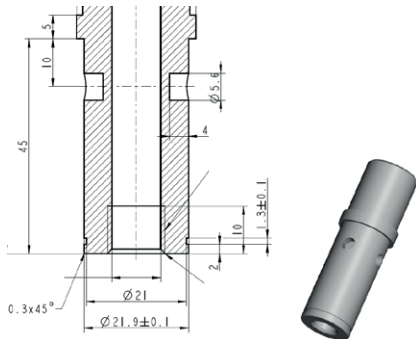

Possible bracket design.

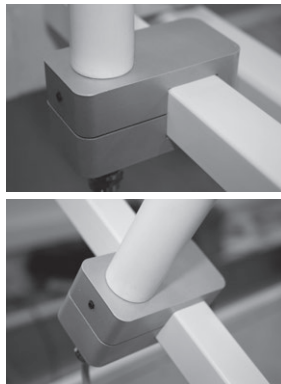

The FPP must be mounted in such a manner that it is secured against rotation. For this purpose the bracket end of the arm has 4 x drilled holes - one of the 4 holes must be secured via the bracket with a slotted set screw with cone point (pointed screw).

Otherwise it may slide away from the user when operated.

As illustrated from the pictures below the panel itself can be moved and angled in a number of positions. The arm can also be bent to move it closer to or move it further away from the user.



The lock function

Between the arm and the panel there is a lock/unlock function, (a hose type connection). It enables the user to turn the panel into a preferred position.

Locking of the Panel:

Turn the panel to a preferred position. With one hand on the panel turn the hose clockwise with the other hand. The Panel is fully locked when the panel cannot be turned.

Unlocking of the Panel:

With one hand on the panel turn the hose counter clockwise with the other hand until the panel can be moved freely.



11. FS (MEDLINE® CARELINE® TECHLINE®)



The Foot Switch is a modular system, developed for use together with some of LINAK control boxes. The LINAK Foot Switch is designed for control of physiotherapeutic beds, hospital beds, dentist chairs, gynaecologist chairs, computer workstations, and working desks etc. It can also be used as a "stand alone" item for industrial applications.

Footswitch

Consist of: FS (a pedal unit) and FSE (electronics unit), which can activate one or more actuators. The module system can max. consist of two pedal units, a FSR (right pedal), a FSL (left pedal), and one electronics box.

12. FS2 (MEDLINE® CARELINE®)



The FS2 Foot Switch is developed for use together with some of LINAK control boxes and especially designed for mounting on a support plate.

The Foot Switch is available in a single and a double version.

The double version can be used on a bed where one Foot Switch will be mounted on each side of the bed frame, thus enabling operation from both sides.

13. FS3 (MEDLINE® CARELINE®)

Floor adaptor



Bed adaptor



The Foot Switch FS3 is an ergonomically designed modular system, developed for use together with LINAK control boxes and IC actuators with Intelligent Control. The LINAK® Foot Switch is designed for easy and improved control of e.g. hospital beds and couches and has been developed in cooperation with end users. The Foot Switch is therefore very user- and cleaning-friendly and has an aesthetic design.

The FS3 is a robust foot control which is available both as a single and double version as well as a floor and bed model. When mounting the double version on a bed, the Foot Switch will be placed on each side of the bed frame to enable easy operation from both sides. It is also possible to have the double floor version for medical applications, e.g. couches, in order to achieve the opportunity to control different motions of the application. The FS3 is furthermore available in an analogue version and a digital OpenBus™ version.



Usage:

- Usage temperature: + 5 °C to + 40 °C
- Storage temperature: -10 °C to + 50 °C
- Relative humidity: 20 % to 80 % at +30 °C
- Atmospheric pressure: 700 to 1060 hPa
- Compatibility: LA27CS, LA43 IC, LA44 IC, analogue control boxes and OpenBus™ control boxes
- Approvals: IEC60601-1:2005 3rd edition, ANSI / AAMI ES60601-1:2005 3rd edition and CAN / CSA-22.2 No 60601-1:2008

Mounting of the FS3 bed model:

To mount the FS3 bed model, you have to use the bolt and the nut which have already been fitted to the FS3 bed model (see picture below).


Bolt and nut for mounting

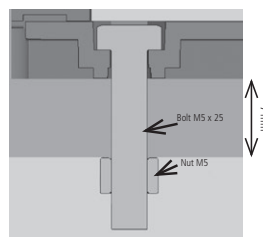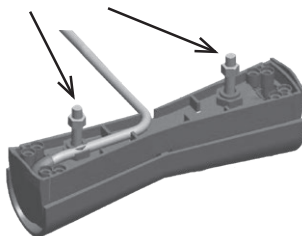

You have to remove the nut before mounting the FS3 on the bed and after mounting the FS3 to the bed, the nut is fastened to secure that the FS3 is fixed to the bed frame.

Please note that the max. torque on the nut should be 2.0 Nm (20 kg f. cm).

When mounting the FS3 bed model, it is important to run the cable through the hole of the FS3 in order to lead the cable through (see picture below).

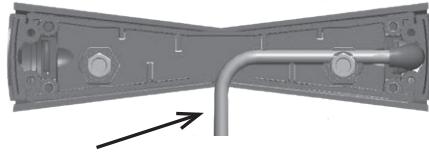

Location of the notch for the cable of the FS3 bed model.



Recommendations

- Do not pull the cable or drop the FS3 on the floor.
- Do not play with the FS3.

14. HB20 (MEDLINE® CARELINE® HOMELINE®)



The HB20 series combines ergonomic design with a wide range of functionalities such as memory and infrared communication. The hand control series is compatible, via the IRO, with the OpenBus™ product assortment.



Warning

- Inform the customer not to exceed the IP degree and to make regular inspection for correct functionality. Defective and worn out parts must be replaced.
- Inform the customer that due to the soft material of the soft touch buttons, they can remain activated when released after a forced, any activation.
- Inform the customer that there is no indication for low battery. At low battery, the IR range is reduced and it is recommended to replace the batteries. After replacing the batteries, the functionality and IR range must be tested.
- Inform the customer that all IROs that receive the HB2x signal will operate. There is no pairing between a unique HB2x and an IRO.

Type: HB320000B006-2002A0F000
Item: J90018
Date: 2013.02.28 IP X6  

P.O: W-017653-0001 MADE IN CHINA

The HB30 hand control is designed for better user experience and ergonomic fit for the hands of caregivers. The compact size ensures one hand operation. The HB30 is especially suitable for patient lifts and other MEDLINE® and CARELINE® applications like couches, tables and chairs for treatment and examination. The HB30 is available in an analogue version and an OpenBus™ version.

Usage:


- Usage temperature: 5 °C to 40 °C
- Storage temperature: -10 °C to +50 °C
- Compatibility: Analogue JUMBO Systems
Analogue JUMBO systems with diode and OpenBus™
JUMBO versions
All OpenBus™ control boxes
- Approvals: IEC60601-1:2005 3rd edition approved,
ANSI / AAMI ES60601-1:2005 3rd edition and CAN/CSA-22.2 No 60601-1:2008
The HB30 is biocompatibility tested and approved according to DS/EN ISO 10993-5:2009, biological evaluation of medical devices - part 5: Tests for in vitro cytotoxicity. It is a demand for hand-held devices for patient lifts.
The HB30 has a compact design and therefore it cannot be approved according to EN IEC60601-2-52 (Application Environment 4 for care beds used in Domestic areas (or EN1970)).

How to identify the cables:


Each cable has a label for easy identification of item number and for which control box it is intended.



How to mount a cable:

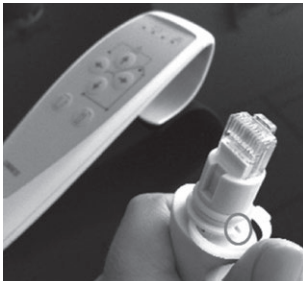

Step 1:
Mount the cable lock and fix it to the slot marked in the picture.

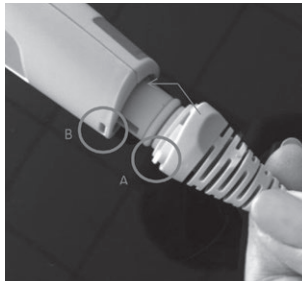


Step 2:
Fix the cable tab on the hand control's front side first. Push in and twist a bit to fix the tab (see picture fit A into B).



Step 3:
Fix the tab on the back as well by pushing.

How to remove a cable:

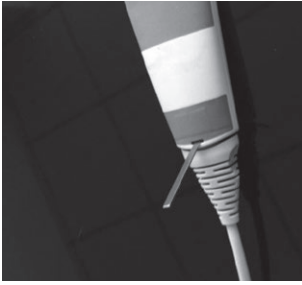






Step 1:
Release the cable by pushing e.g. a screwdriver into the hole on the back of the hand control. Twist and release.



Recommendations

- Please ensure that you use the right cable type to ensure the wished functionality. In case of lack of functionality of your hand control, check that the hand control cable is the right one for the intended control box or contact your local LINAK representative.
- Please note that HB3X0L0 version (analogue with diode) is not supported by the CBJC. The diode will light up at all times if used with the CBJC.
- Do not submerge the hand control under water.
- Unless otherwise specified or agreed with LINAK, the hand control is only intended to be used on LINAK systems.
- Do not sit or lie down on the hand control. It can cause unintended movement of the application.
- When changing hand controls for OpenBus™ systems, the power must be switched off.
- The force of the magnet depends on the thickness and the type of the lacquering, stickers, steel thickness etc. It is the responsibility of the customer to verify that the holding force on the application is acceptable.
- For hand controls with magnets it is the responsibility of the user/operator to evaluate any possible risk caused by use of permanent magnets.
- For hand controls with magnets it is recommended to have a parking place for the hand control on the application, where the customer ensures that the hand control does not fall off.

16. HB40 (MEDLINE® CARELINE® TECHLINE®)

Item : HB41000-108142	
Date : 2016.01.04 IPX4	
NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ	
 W/O #1234567-0001 MADE BY LINAK A/S DENMARK	
  	

The HB40 series hand controls are designed for use with LINAK control boxes.

These sturdy compact units are ergonomically designed and ideal for a vast range of applications from patient care beds and office furniture to industrial and agricultural duties.

Usage:

- Ambient temperature: +5 °C to +40 °C
- HB40 is compatible with CB8-T, CB9..AX(not CH.4) and CB12 (not CH.4)
- HB40A is compatible with CB8-A battery version. Fitted with plug for battery charger CH01.
- HB40E is compatible with CB9Px (except CB9..PM/PN) and CB14
- HB44H is only compatible with CB9..Ax and CB12 (if CH.4) 4 channels
- HB40T is only compatible with CB7 (max. 2 channels)

Compatibility:

	CB7	CB8	CB8A	CB9..Ax	CB9..Px (not CB9..PM/PN)	CB12	CB14
HB4xO		x		x*		x	
HB4xA			x				
HB4xE					x		x
HB4xH				x (4ch.)		x (4ch.)	
HB4xT	x						

* only for channels 1, 2 and 3

17. HB50 (MEDLINE® CARELINE®)

Item : HB52B00-00111

Date : 2016.01.04 IPX5

CE 120690

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS OUVRIER PAR DU PERSONNEL NON AUTORISE



W/O #1234567-0001 MADE BY LINAK A/S DENMARK



The HB50 is primarily designed for the LINAK JUMBO system and LINAK control boxes with memory functions.

The HB50 gives the user access to a range of memory functions, allowing present positions to be stored.

For use in a wide variety of hospital and patient care.

Usage:

- Ambient temperature: +5 °C to +40 °C
- HB50B is compatible with CBJ2
- HB50E is compatible with CB09P..Px types (except ..PM / PN) and CB14 with memory
- HB50J is compatible with CBJ1
- HB50Y is for Jumbo Home (CBJH)

18. HB60 (HOMELINE®)

Item : HB61T00-00009

Date : 2016.01.04

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS OUVRIER PAR DU PERSONNEL NON AUTORISE



W/O #1234567-0001 MADE BY LINAK A/S DENMARK



The HB60 series is exclusively designed to be used together with the LINAK HOMELINE® system: LA31/LA29 and CB9 with or without memory.

19. HB70 (MEDLINE® CARELINE®)

Item : HB756E000-10600

Date : 2016.01.07 IPX6

CE 120690

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS OUVRIER PAR DU PERSONNEL NON AUTORISE



W/O #1234567-1234 MADE BY LINAK A/S DENMARK



LINAK offers the HB70 with protection class IPX6 as standard and a range of options such as control of up to 5 actuators, memory, and simultaneous drive. The HB70 is designed to operate with most LINAK control boxes.

Usage:

- Compatible with most LINAK control boxes.
- Approved according to: EN 60601-1, EN 60335-1 and UL 60601-1 as part of a LINAK actuator system




Recommendation

- It is not possible to combine HB7x with the binary based CB9..PM/PN.
- The IPX6 Washable version has a special adhesive for the front covers.
- The HB75xE0 used together with CB140 will give trend and anti-trend on channel 1 and 2 of the control box when using the last button row.
- All front covers use the codes W0 (not Washable) and WW (Washable) Memory:

Memory:

- The memory and parallel functions require the control box to have a microprocessor.
- When storing a memory position on the control box, the actuators must run to the desired position and the "store" button (S) must be pushed. Then the desired memory position button (1, 2 or 3) must be activated within 2 seconds.

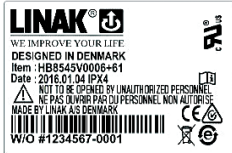

The HB80 hand control has an optimised ergonomic design shaped for the hand. The hand control is suitable for all kinds of MEDLINE and CARELINE applications such as hospital beds, patient lifts, treatment and examination couches etc.

The HB80 hand control is available in versions with up to 10 or 12 activation buttons.

- Usage:
- Usage temperature: 5 °C to 40 °C
 - Storage temperature: -10 °C to +50 °C
 - Compatibility: Compatible with many LINAK control boxes. For further questions, please ask your local LINAK. IEC60601-1:2005 3rd edition, ANSI/AAMI ES60601-1:2005 3rd edition, and CAN/CSA-22.2 No 60601-1:2008. The HB86 version has a shorter distance between the buttons and cannot be approved according to EN IEC60601-2-52 Application Environment 4 for care beds used in Domestic area (or EN1970).
 - Approvals: HB80 is designed and tested in accordance with EN60601-2-52 cl. 201.11.6.6.101 (Machine washable medical beds). The HB80 must hang vertically from its hook during the washing process. In order to maintain the flexibility of the cables, it is important that a coiled cable is placed in such a way that the cable's own weight does not strain the coil during the washing process.



Recommendations

- Clean the hand control regularly to ensure good hygiene standards.
- When a defective HB80 is replaced, check that the new HB80 has exactly the same specification and functionality.
- Do not submerge the hand control under water.
- Unless otherwise specified or agreed by LINAK - the hand control is only intended to be used on LINAK systems.
- When changing hand controls for OpenBus™ systems, the power must be switched off.
- It is recommended to check the hand control and cable for damage and holes made by violent handling before washing the application or at least once a year.
- It is recommended to have a parking place for the hand control on the application, where the customer ensures that the hand control does not fall off.

For hand controls with magnets:

- If hand controls with magnet are attached to a smooth surface, a movement or twisting of the cable, for example during transport, can cause the hand control to move and result in damage if the cable is squeezed.
- The force of the magnet depends on the thickness of the lacquering, the lacquering type, stickers, steel thickness etc. It is the responsibility of the customer to verify that the holding force on the application is acceptable.
- It is the responsibility of the user/operator to evaluate any possible risk caused by use of permanent magnets.



Warnings

- Do not sit or lie on the hand control. It can cause unintended movement of the application.
- There is a risk that items with internal magnet for mounting instead of hook can disturb function of cardiac pacemaker, implantable cardioverter defibrillators or magnetic implants!

LINAK®WE IMPROVE YOUR LIFE.
DESIGNED IN DENMARK

Type : HD84C1J0550004-200120012D1C000

Item : J90208

Date : 2015.12.14 IPX4

SW.01010189 V.1.2 C1010

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISE

MADE BY LINAK A/S DENMARK



W/O #1234567-0001



The HD80 makes it possible to have two hand controls in one unit. The hand control is equipped with a magnet locking function, making it possible to have two levels of operation – one for the patient and relatives and one for the caregiver staff. The HD80 provides a great overview using LED indication of functions being locked or unlocked. The hand control is designed to work with OpenBus™ systems.

Usage:

- Usage temperature: 5 °C to 40 °C
- Storage temperature: -10 °C to +50 °C
- Compatibility: CB6, CB6S, CB6OBMe, CB16 and CB20 (all OpenBus™ CBs)
- Relative humidity: 20 % to 90 % at 30 °C - not condensing
- Atmospheric pressure: 700 to 1060 hPa
- Approvals: IEC60601-1, ANSI/AAMI ES60601-1 and CAN/CSA-22.2 No 60601-1

Standard HD80 - HD84C1J0550004-200120012D1C000**Item number J90208**

This hand control can be used as a combination of a hand control and the ACO. It has two levels of operation, where the first is a patient mode with regular operations like hi/lo and trend/anti-trend. Use the magnet key to operate the next level, care mode, where it is possible to lock functions. The LED lights show which functions are locked and which are not.

Magnet key - article no. 0858008**Warning**

- Do not sit or lie on the hand control. It can cause unintended movement of the bed.
- Inform the customer that after loss of mains power, the lock state is reset to the default setting. Be aware of a special setup for a magnet lock of low power system in case of power down on mains. Also be aware that the lock is reset when running on battery or when powered down.
- Inform the customer that using the magnet key cannot wake up a low power system or a system running on battery. The system will wake up when activating a key and then the magnet key can unlock the system.
- Inform the customer that a powerful magnetic field may change the lock state.
- Always use O-rings on connectors and cable locks.
- There is a risk that items with internal magnet for mounting instead of hook can disturb function of cardiac pacemaker, implantable cardioverter defibrillators or magnetic implants!

**Recommendations**

- Inform the customer to use only the magnet key supplied by LINAK. We also recommended to make a functional test of the application before putting it into operation.
- Clean the hand control regularly to ensure good hygiene standards.
- When replacing a defective HD80, check that the new HD80 has exactly the same specification and functionality.
- Do not submerge the hand control under water.
- Unless otherwise specified or agreed by LINAK, the hand control is only intended to be used on LINAK systems.
- When changing hand controls for OpenBus™, the power must be switched off.
- It is recommended to check the hand control and cable for damage and holes made by violent handling before washing the bed or at least once a year.
- In order to maintain the flexibility of the cables, it is important that a coiled cable is placed in such a way that the cable's own weight does not strain the coil during the washing process.

For hand controls with magnets:

- If hand controls with magnets are hooked on a smooth surface, a movement or twisting of the cable, for example during transport, can cause the hand control to move and result in damage if the cable gets squeezed somewhere.
- The force of the magnet depends on the thickness of the lacquering, the lacquering type, stickers, steel thickness etc. It is the responsibility of the customer to verify that the holding force on the application is acceptable.
- It is the responsibility of the user/operator to evaluate any possible risk caused by use of magnets.
- It is recommended to have a parking place for the hand control on the application where the customer ensures that the hand control does not fall off.

22. HD80 JUMBO (MEDLINE® CARELINE®)

LINAK®
WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK
Type : HD82C0F011000W-200230012A0C000
Item : HD8X008-02
Date : 2013.12.19 IPX6 S.O.7654321 
 NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS A OUVRIR PAR PERSONNEL NONAUTORISE
MADE BY LINAK A/S DENMARK

P.O.1234567-0001    

The HD80 JUMBO is a hand control with an optimised ergonomic design and functions that are activated via dome buttons.

Usage:

- Usage temperature: 5° C to 40° C
- Storage temperature: -10° C to +50° C
- Compatibility: Only compatible with CBJ Care
- Relative humidity: 20% to 90% at 30° C - not condensing
- Atmospheric pressure: 700 to 1060 hPa
- Flammability rating: UL94-V2
- Approvals: IEC60601-1, ANSI/AAMI ES60601-1 and CAN/CSA-22.2 No 60601-1

Warnings

- Do not sit or lie on the hand control. It can cause unintended movement of the application.
- Always use O-ring on connectors and cable locks.
- There is a risk that items with internal magnet for mounting instead of hook can disturb cardiac pacemaker functions, implantable cardioverters, defibrillators or magnetic implants.







Recommendations

- Clean the hand control regularly to ensure good hygiene standards.
- When a defective HD80 is replaced, check that the new HD80 has exactly the same specification and functionality.
- Do not submerge the hand control under water.
- Unless otherwise specified or agreed by LINAK, the hand control is only intended to be used on LINAK systems.
- When changing hand controls for OpenBus™, the power must be switched off.
- It is recommended to check the hand control and cable for damage and holes made by violent handling before washing the bed or at least once a year.
- In order to maintain the flexibility of the cables, it is important that a coiled cable is placed in such a way that the cable's own weight does not strain the coil during the washing process.

Hand controls with magnets:

- If hand controls with magnet are hooked on a smooth surface, a movement or twisting of the cable, for instance during transport, can cause the hand control to move and result in damage, if the cable is squeezed somewhere.
- The force of the magnet depends on the lacquering thickness, the lacquering type, stickers, steel thickness etc. The customer has the responsibility to verify that the holding force on the application is acceptable.
- The user/operator is responsible for evaluating any potential risk caused by the use of magnets.
- It is recommended to have a parking spot for the hand control on the application where the customer ensures that the hand control does not fall off.

23. HL70 (MEDLINE® CARELINE®)

Item : HL7240002+20500
Date : 2016.01.07 IPX4 
 NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISE

W/O #1234567-1234 MADE BY LINAK A/S DENMARK   

The HL70 is a hand control with integrated locking function, where a selective locking of the different functions is available by use of a special key.

The HL70 is an alternative to the HB70 combined with an attendant Control Panel (ACM, ACL, etc.).

Usage:

- Exchangeable with HB70
- Compatible with many LINAK control boxes
- Approved according to: IEC60601-1:2005 3rd edition, ANSI / AAMI ES60601-1:2005, 3rd edition, and CAN / CSA-22.2 No 60601-1:2008

Recommendations

- To switch between locked and unlocked position a small knob between the two push buttons has to be turned 20° by use of a special key. The key is for the use of the nursing staff only, there are two types, one is made of plastic the other metal.
- The key has to be ordered separately. Article no. for the plastic key is: 00914516, and the metal key number is: 00914721
- For all types:
Attention should be given to ensure that the channels shown correspond to the channels available on the chosen control box.



The HL80 hand control has an optimised ergonomic design and switch activations.

The HL80 is a lockable hand control, which makes it possible to lock or unlock one or several functions.

It is available in several different standard versions with a variation of bed symbols for easy interaction with end-users.

Usage:

- Approvals: IEC60601-1, ANSI/AAMI ES60601-1 and CAN/CSA-22.2 No 60601-1

Warnings

- When using the locking function on HL80 check that the hand control switches are actually locked.
- Locking function on HL80 only locks the actual hand control.
- Do not sit or lie on the hand control. It can cause unintended movement of the application.
- Locking of a single channel at HL80 do not necessarily prevent that channel from activation, if the same channel are covered by another hand control button (e.g. at simultaneous drive) or another control unit.
- There is a risk that items with internal magnet for mounting instead of hook can disturb function of cardiac pacemaker, implantable cardioverter defibrillators or magnetic implants!.

Recommendations

- Violent use of the key on HL80 can cause either damage to the keyhole or the key itself.
- If a lock key is missing, then full control over the application could be missing.
- Clean the hand control regularly to ensure good hygiene standards.
- When a defective HL80 is replaced, check that the new HL80 has exactly the same specification and functionality.
- Do not submerge the hand control under water.
- Unless otherwise specified or agreed by LINAK, the hand control is only intended to be used on LINAK systems.
- When changing hand controls for OpenBus™ systems, the power must be switched off.
- It is recommended to check the hand control and cable for damage and holes made by violent handling before washing the application or at least once a year.
- It is recommended to have a parking place for the hand control on the application, where the customer ensures that the hand control does not fall off.

For hand controls with magnet:

- If hand controls with magnet are attached to a smooth surface, a movement or twisting of the cable, for example during transport, can cause the hand control to move and result in damage if the cable is squeezed.
- The force of the magnet depends on the thickness of the lacquering, the lacquering type, stickers, steel thickness etc. It is the responsibility of the customer to verify that the holding force on the application is acceptable.
- It is the responsibility of the user/operator to evaluate any possible risk caused by use of permanent magnets.

25. IRO (MEDLINE® CARELINE®)




The IRO (Infrared Receiver OpenBus™) has been developed as a part of the accessory portfolio to be available for the CB OpenBus™ family. The receiver is fitted to the bed so that the bed movement can be controlled with signals received from a remote control (C-type Transmitter).

Warnings

- Inform the customer that other hand controls/equipment that use a protocol similar to parts of the LINBUS protocol for communication, may have influence on movement of the application
- Inform the customer that:
 - a damaged or a dirty IR window will reduce the receiving sensitivity
 - foreign object must not block the visual line from transmitter to the IRO receiver,
 - the IRO must be mounted for optimal visual receiving ability
- Inform the customer that interference from other light sources (38 KHz +/- 5 %), e.g. neon light, sunlight or toys may cause a temporary stop in a movement
- The customer has to mount the IRO at a protected location in the application
- Inform the customer to use the torque 1.5-2.0 Nm for mounting the IRO on the application


26. LS (MEDLINE® CARELINE® TECHLINE®)

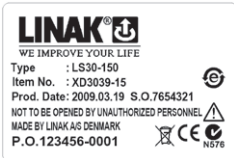

There are two types of LINAK limit switches, for actuators type LA22, LA30, LA30S, LS, and LSD.

The LS type gives a signal in two fixed end positions, but requires a control unit to stop the actuator when the microswitches are activated.

27. LSD (MEDLINE® CARELINE® TECHLINE®)

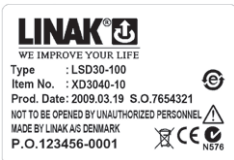

The LSD type controls the stroke length of the actuator between two fixed end positions by cutting off the current to the motor.

7. Information on specific JUMBO™

1. BAJ (MEDLINE® CARELINE®)



The battery pack BAJ has been specially developed for use with the JUMBO-system.
They are easy to exchange through an integrated snap system, and can easily be mounted on the mounting brackets.

Usage:

- Duty cycle: 10 % or 2 min. continuous use then 18 min. not in use
- Ambient temperatures: +5 °C to +40 °C
- Storage temperature: -15 °C to +40 °C
- BAJ is a part of the JUMBO system. It is compatible with CBJ1/CBJ2, CHJ2 and CBJ Care
- Flammability rating: UL94-V0
- Approvals: IEC60601-1, ANSI/AAMI ES60601, CAN/CSA-22.2 No 60601-1

Charging:

BAJ can be charged by

 
 
- Charger CHJ2
- Control box CBJ1/2, CBJ Care, COBO
- BAJ with integrated DC plug can also be charged by use of the external charger CH01



Warning

Check at regular intervals that the ventilation hole is undamaged and intact. The construction of the ventilation stub permits battery gasses to get out, but it does not permit penetration of water.

2. BAJL Li-Ion (MEDLINE® CARELINE®)



The BAJL Li-Ion battery pack has been specially developed for use with the JUMBO system for patient lifts and sit to stand lifts. It is a low-weight battery with reliable and high performance.

Usage:

- Compatibility: CBJ Care, COBO, CHJ2 and CH01
- Duty cycle: BAJL003xxxxxxx:
 - 10 % (2/18 min.) at max. current draw 10 Amp (ambient temperature \leq 30 °C)
 - 10 % (2/18 min.) at max. current draw 8 Amp or
 - 5% (1/19 min.) at max. current draw 10 Amp (ambient temperature > 30 °C)BAJL004xxxxxxx:
 - 10 % (2/18 min.) at max. current draw 10 Amp (standard ambient temperature recommendations)
- Charging: Via JUMBO wall charger CHJ2 or via JUMBO control box with integrated charger
- Charging state: Maximum 30% when shipped from LINAK
- Recharging during storage: Recharge the battery 6 months at the latest after production date stated on the label
- Operating temperature: +5 °C to +40 °C
- Charging temperature: +10 °C to +40 °C
- Charging time: Type 3: 3 to 4 hours
Type 4: 6 to 8 hours
- Storage temperature: -10 °C to +40 °C (+10 °C to +25 °C - recommended)
The batteries must be stored in an applicable storage room without direct sunlight.
- Relative humidity: 20 % to 80 %
- Atmospheric pressure: 700 to 1060 hPa
- Approvals: IEC60601-1:2005 3rd edition,
ANSI / AAMI ES60601-1:2005, 3rd edition,
CAN / CSA-22.2 No 60601-1:2008,
IEC62133 2nd edition,
UL2054, 2nd edition
PSE (pending)
UN38.8, 6th edition (needed for transport of lithium batteries)

Mounting

Do not mount the battery upside down.

Please follow the mounting instructions of the control box e.g. CBJ Care or COBO.

Standby mode

When the BAJL Li-Ion is not being used for a longer period - more than a week - or when it is on stock, it enters into a standby mode to save power and protect the battery from deep discharge.

- Please connect the charger for approx. 15 seconds to exit the standby mode before use.
- There is no audio signal to indicate the standby mode or to indicate exit of standby mode.

After exit of the standby mode

If there is still no power on, the battery needs to be charged.

After charging, the hand control and/or the control box will indicate the battery capacity level again

Deep discharge protection

The BAJL Li-Ion has a deep discharge protection to extend the battery lifetime. The deep discharge protection is activated when the battery is discharged.

- Please connect the charger for approx. 15 seconds to exit the deep discharge mode before use.

If the battery is completely discharged, the charging will be started at a very small rate to protect the battery. This small charging rate is not sufficient to turn on the light in the charger, and therefore the user may believe that the system has not yet started. Depending on the battery state, it may take several hours to get to the normal charging state. The orange light of the control box will not be turned on as the operation is analogue. It is therefore not possible to see that the charging has started, however, only at a low level.

If any of the lithium ion batteries built into LINAK products is found to be defective under warranty, LINAK will provide a new product to the OEM. LINAK explicitly disclaims all other remedies. LINAK shall not in any event be liable under any circumstances for any special indirect punitive incidental or consequential damages or losses arising from any incident related to the inherent risk of thermal runaway in the lithium ion cell and any use of LINAK products. Moreover, LINAK explicitly disclaims lost profits, failure to realise expected savings, any claim against our customer by a third party, or any other commercial or economic losses of any kind, even if LINAK has been advised of the possibility of such damages or losses.

Transportation

The lithium ion batteries must be packed and transported according to applicable regulations. Always ask your local transportation provider how to handle the transportation of lithium ion batteries.



Recommendations:

- Do not exceed the storage temperature as it will shorten the lifetime and performance.
- Allow the battery to settle to the temperature specified in the user manual before use or charging.
- Only use correct LINAK charger (CHJ2, CH01 or integrated charger in JUMBO control box).
- Do not exceed the duty cycle as it will shorten the life time and performance.
- BAJL Li-ion is not intended for use in outdoor applications and indoor pool environments.
- If the battery is completely discharged, then recharge the battery before storage.
- Unintentional use of the emergency button, e.g. short activation and deactivation of the emergency button after operating the actuators, can lead to an error indication of remaining battery capacity. The battery capacity will however be shown correctly approx. 20 seconds after activation of the emergency button.
- The BAJL goes into sleep mode approximately 20 seconds after the CBJ Care enters into sleep mode. If the CBJ Care is reactivated within this period, it can lead to a wrong remaining battery capacity indication. The remaining battery capacity will however be shown correctly approx. 20 seconds after the reactivation of the CBJ Care.

Safety feature

BAJL Li-ion contains several mechanisms to protect itself from being damaged due to excessive use.

In case of overheating, the device will activate a thermal protection. No power output will be available until the temperature has returned to normal operating range. Overheating may occur by extensive use at high temperature or by exceeding the duty cycle.

Battery safety

LINAK li-ion batteries for medical use are designed and manufactured to be safe through the product lifetime. LINAK has performed various tests of the batteries in normal use, abuse situations and failure situations to verify the design and production methods. These tests have not shown any unacceptable risks.

The batteries are also UL-tested to have an independent organisation verify the safety of the design and to obtain a safety certificate.

This means that UL regularly inspects the factory to check that standards are complied with.

UL has tested in accordance with the following standards:

UN38.3, 6th edition - Battery Transportation Safety

IEC62133 Battery Safety

UL2054, 2nd edition - Standard for Household and Commercial Batteries

Warnings

Lithium ion batteries differ from the lead acid technology as they have a built-in deep discharge protection.

- Loss of power might happen due to the battery deep discharge protection. This will only happen in case of continuous battery use despite warnings. In this event, there may be no warning and the application may not be able to move when expected.
- In his risk analysis, the customer must take into consideration how to ensure alternative means to make movement, e.g. quick release or manual lowering.
- Do not open the battery housing as damaging the cell or circuitry may develop excessive heat.
- Lithium ion batteries that are defective, have been damaged or might produce excessive heat or fire are not allowed for transportation.
- The combination of CBJ1 or CBJ2 with BAJL might not be able to complete a full cycle after the audio signal of low battery warning.
- For safety reasons, please adhere to the indicated charging and operation temperature.
- In case the battery turns hot, disconnect it and evacuate the room and wait for 2 hours before taking further steps.
- The mounting instructions must be followed in order to avoid exposing batteries to water.
- Recharge batteries every 6 months at a minimum.
- Dispose of the batteries in accordance with local regulations.

DO NOT:

- Heat or burn the batteries
- Short circuit the batteries
- Expose the batteries to high impact
- Crush or puncture the batteries
- Use batteries with signs of damage or corrosion
- Charge or store the batteries near combustible material
- Expose the batteries to water or other liquids
- Overcharge or fully discharge the batteries

Compatibility:

Please be aware that BAJL Li-ion is not compatible with:

- CBJ1, CBJ2 – incl. pool lift versions
- COB020

3. CBJ1/CBJ2 (MEDLINE® CARELINE®)

CAUTION ! NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

ATTENTION ! NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ

LINKA 

WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK

Type: CBJ1002NA111XXX

Item: CBJ1008-00

Date: 2016.01.09

W/O # 1234567-0001

MADE BY LINKA A/S DENMARK

U In : 24 V=

IPX4

Int. : 10 %, Max. 2 min. / 18 min.



120690 



The control boxes CBJ1 and CBJ2 are part of the battery driven JUMBO system. JUMBO is a modular system combining an actuator, a control box (CBJ1, CBJ2), a battery (BAJ1) and a charger (CHJ2) in a flexible solution, specially developed for patient lifts.

The complete system is medically approved and contains a series of features which meet the patients need for a safe and comfortable lift, e.g. CBJ1 and CBJ2 are equipped with a soft-start/stop function, emergency lowering function etc.

CBJ1 and CBJ2 are available in a special edition that can be used in the harsh conditions in the pool environment both outdoor and indoor.

CAUTION ! NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

ATTENTION ! NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ

LINKA 

WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK

Type: CBJ2018HD132334

Item: CBJ2018-03

Date: 2016.01.09

W/O # 1234567-0001

MADE BY LINKA A/S DENMARK

U In : 100 - 240 V~ 50-60 Hz

I In : Max. 400 mA

IPX4

Int. : 10 %, Max. 2 min. / 18 min.



120690 



Usage:

- CBJ1/CBJ2 with internal charger: Nominal current draw max. 400 mA
Power consumption (standby) max. 2.5 W
Power consumption (charging) max. 19 W
- Duty cycle: max. 10 % or 2 min. continuous use then 18 min. without use
- Ambient temperature: +5 °C to +40 °C
- Storage temperature: -10 °C to +50 °C
- Approvals: IEC60601-1, ANSI/AAMI ES60601, CAN/CSA-22.2 No 60601-1
- For one or two actuators (lift and leg spreader actuator)



Recommendations


- The mains cable must always be ordered separately when ordering a CBJ1, CBJ2 with an internal charger.
- Use only original LINAK mains cables to ensure proper connection to internal charger.
- When charging, the CBJ1, CBJ2 will not be able to operate any actuators.
- By use of charger CH01 it is possible to activate the actuators when charging. However, this is not recommended as it can damage the control box or the charger CH01.
- When the CBJ1, CBJ2 with LCD display option is combined with the battery BAJ Li-Ion, the LCD display can indicate empty battery even if the battery capacity is not low.
The acoustic alarm will always be activated at low battery capacity independent of display indication.




Warning

- In order to avoid injury, the emergency-stop should be activated in (all) transport and cleaning situations.
- BAJ Li-Ion batteries differ from BAJ1 lead acid as they have built-in discharge protection.
If the user continues to use the battery despite warning signals, loss of power might happen due to the battery deep discharge protection.
In this event, there may be no warning and the application may not be able to move when expected.
- The combination of CBJ1 or CBJ2 with BAJL might not be able to complete a full cycle after low battery warning.

Adjustment instructions for the JUMBO application.

	<p>For the adjustment you must use a trimming screwdriver, which can be purchased from LINAK A/S. It is also possible to use other types of trimming screwdrivers for the adjustment.</p> <p>Ordinary screwdrivers cannot be used, as they will damage the potentiometer slot.</p> <p>When you receive the JUMBO from LINAK A/S it is adjusted to min. current cut-off.</p>
1.	Connect the JUMBO control box to the actuator.
2.	Load the actuator with the required load.
3.	Turn the potentiometer completely clockwise.
4.	Run the actuator in the loaded direction at the same time turn the potentiometer anticlockwise until the actuator stops.
5.	Turn the potentiometer 3 times clockwise.
6.	Check JUMBO can lift the loaded actuator.
7.	Insert the plugs article no. 0009020 (Light grey (RAL7035)) or 0009019 (Dark grey (RAL7016)) to ensure IP protection

Mounting the CBJ1, CBJ2

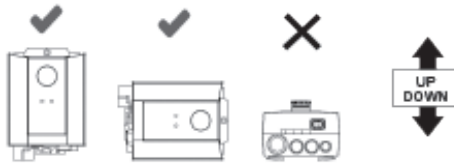

Special care should be taken when mounting the CBJ1, CBJ2.



As long as the CBJ1, CBJ2 is mounted correctly then the CBJ1, CBJ2 complies to IPX5.
If the CBJ1, CBJ2 is mounted incorrectly, then water will gather around the screw holes resulting in non-compliance with IPX5!
CBJ1, CBJ2 with variable current cut-off: the protection plugs must always be inserted to ensure IP protection after adjustment.



When using the control box with emergency stop, the stop button must be activated in cleaning situations in order to comply with IPX5.
The battery pack BAJ1 must not be removed in cleaning situations, doing so could result in non-compliance with IPX5.



If the CBJ1, CBJ2 is fitted with option B, D and F (DC power connector), the protection plug ex. 00918174 must always be inserted to ensure IP protection, if the port is not used. IP rating only applies when the battery is connected to the control box.

CAUTION ! NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL**ATTENTION ! NE PAS OUVRIIR PAR DU PERSONNEL NON AUTORISE**

LINAK®
 WE IMPROVE YOUR LIFE
 DESIGNED IN DENMARK
 Item : CBJ01550F231134
 Date : 2016.01.09
 WID # 1234567-0001
 MADE BY LINAK A/S DENMARK

U In : 24 V=
 I In : Max. 500 mA
 IPX4
 Int. : 10 %, Max. 2 min. / 18 min.



120690



The control boxes CBJ Care is a part of the JUMBO system. JUMBO is a modular system combining an actuator, a control box (CBJ Care), a battery (BAJ1 / BAJL), and a charger (CHJ2) / internal charger and a hand control in a flexible solution, specially developed for patient lifts.

The complete system contains a series of features which meet the patient's need for a safe and comfortable lift.

CBJ Care is available in 3 versions, one with diodes, one with a display and a third without display and diodes.

It is possible to have control buttons on the front cover to have an easy control option if the hand control is missing. Furthermore it is possible to have 3 channels via a T-cable in channel 1. The 3rd channel for tilt function adds value for the patient and the caregiver.

Usage:

- CBJ Care with internal charger: Nominal current draw max. 400 mA
Power consumption (standby) max. 2.5 W
Power consumption (charging) max. 19 W
- Duty cycle: Max. 10 % or 2 min. continuous use then 18 min. without use
- Ambient temperature: +5° to +40°
- Storage temperature: -10° C to +50° C
- Approvals: Approvals: IEC60601-1, ANSI / AAMI ES60601-1, CAN/CSA-22.2 No 60601-1
Australia deviation, for one, two or three actuators, (lift, leg spread and tilt actuator), Canadian deviation
- For up to three actuators (lift, leg spreader and tilt of the sling)

Instructions for uses

- Before start-up we recommend to reset the service counters – days and cycles until next service visit. To reset press the up and down button on the control box or the hand control for 5 seconds. An audio signal will confirm the resetting.
- When charging, the CBJ Care will not be able to operate any actuators.
- It is not possible to use other battery types than BAJ1 or BAJL with the CBJ Care.
- Use only original LINAK mains cables to ensure proper connection to internal charger.
- The green battery indicator (100% to 50% capacity remaining) will light up during charging even though the battery is not fully charged. It is necessary to use the "CHARGE" diode to indicate whether or not the battery is fully charged (when using internal charger). The CHARGE indicator will light up during charging and turn off when the battery is fully charged.
- When resetting the CBJ Care or updating other settings than using learn mode, the CBJ Care must not be disconnected from the battery and the emergency stop must not be activated within a time span of at least 10 seconds. This is to ensure the correct storage of the new values to the memory banks of the CBJ Care.

**Recommendations**

- When using the learn mode function, the lift will never be able to lift more than 1.5 times the max. load. The actuator will not stop exactly at the load it has been adjusted to as the actuator uses less current when its components have been run in. When the max. current value has been registered using the learn mode function, the control box will be able to use max. current +10 %. This ensures that the lift is capable of lifting the set load, however it cannot lift more than 1.5 times of the set load.
- When registering current limits, be aware to use a defined set of actuator and control box
- The ambient temperature must be approx. 20 °C +/- 5 %
- The difference between the highest and lowest load must not be more than max. 10 %
- To activate the learn mode function, use the special hand control (HB7x235-00)
- If an actuator or CBJ Care is exchanged, it is necessary to reset the max. load to ensure the correct cut-off value for the new system
- Always use fully charged batteries for learn mode procedures
- A max. cut-off value of 11 Amp can be registered (stored)
- The tolerance for preset current cut-off is: +/- 1 Amp
- The current cut-off value can be reset by means of the learn mode function, however this is not in accordance with EN10535



Recommendations

Hot Plugging:

Removing or adding any OpenBus™ cables is not allowed when the control box is on power via mains supply or battery! If necessary anyway, follow the below procedure:

1. Remove mains or battery and wait 5 sec.
2. Mount or dismount the required cables

If this procedure is NOT followed it may result in a damaged OpenBus™ driver circuit.

The risk of a damaged circuit increases if the accessory has a high start current (in rush current).

Emergency lowering/lifting:

By use of BAJ1, the lifting arm can be lowered by pressing e.g. a pen in the hole or use the control buttons, if present.

This is a permitted method of lowering/lifting.

The emergency lowering/lifting "buttons" work as normal hand control buttons (you do not get extended functionality by using these when the battery is low).

By use of BAJL, please be aware that loss of power might happen due to the battery deep discharge protection.

This will only happen by continuous use of the battery despite warning.



Warnings

In order to avoid injury, the emergency-stop should be activated in (all) transport situations.

Functionality – JUMBO Care with display

Below you find information about what to read-out on the display version of JUMBO Care. Basically the functionality for the display version is the same as the diode version, but more information can be read out on the display.

Driving information



As long as a hand control button function is activated driving information will be shown on the display. Either lifting arm up, lifting arm down, legs in or legs out or tilt of sling.

The only exception to this is when the battery is flat (stage 3 and 4 – see below). At that point the battery information will be shown instead.

Battery information

The battery discharging will be shown in four stages:



Battery state 1: The battery is ok, no need for charging (100 - 50 %)



Battery state 2: Battery needs charging. (50 - 25 %)



Battery state 3: Battery needs charging. (Less than 25 %) Buzzer sound is provided when a button is pressed in this battery stage.



Battery state 4: (BAJ1 lead acid) The battery needs charging. At this stage some of the functionality of the lift is lost. At this battery stage, it is not possible to drive the lifting arm up or down. Furthermore, an audio signal will sound when a control button is activated (17 V or lower). The symbol will switch between the two pictures for 10 seconds. The battery symbol is shown when the box is active until power down (2 minutes after use).



Battery state 4: (BAJL li-ion) When using CBJ Care with display together with a BAJL battery, the display will not show the "Battery state 4" symbol. The BAJL deep discharge protection overrules the "battery state 4". Consequently, the CBJ Care shuts down, and the empty battery symbol is not shown.

- The battery level is measured via voltage level. This means that it is possible to experience e.g. that the battery switches from state 1 to state 2 and back to state 1.

Charging of battery:



When the mains cable is plugged in and a control button is activated the symbol to the left is shown on the display until power down 2 minutes later. The purpose of the symbol is to tell the user that it is not possible to use the lift when it is plugged in to the mains.

Short circuit:



If there is a short circuit the control box will show the short circuit symbol with a recommendation to check the connections. The symbol will be shown until the short circuit has been repaired.

Service:



The control box will show the service symbol when it is time for service. The standard setting is after 12 months / 8000 cycles. After each power down, the first time that the service symbol is shown the control box will provide an audio sound (100 milli seconds) so that the user gets a reminder about checking the display.

The 'SERVICE' text will blink 3 times, then a static service symbol will be shown (10 seconds in total). Even though it is time for service the system will still be functional and work as normal.

Overload Channel 1 only:



When overload occurs (according to the pre- defined current cut off limit) the overload symbol will be shown on the display. The 'MAX' text will blink 3 times and the overload symbol will be shown for 10 seconds in total.


Service information read-out

Basic service information can be read out on the display. To get the service information on the display please press the lifting arm up button (only 1/2 second press). The information will be shown for 1/2 minute or until other buttons are activated.

	12034	----->	Total cycles done on channel 1
	1257000	----->	Total work done on channel 1
	7	----->	Total number of overloads (channel 1)
	90/360	----->	Days since last service/Days between services

If "No days" are chosen for service interval then the display will show Days since last service /-.

Mounting of CBJ Care

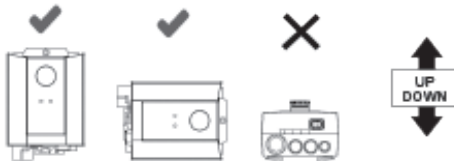

Special care should be taken when mounting the CBJ Care.

As long as the the CBJ Care is mounted correctly then the CBJ Care complies to IPX4. If the CBJ Care is mounted incorrectly then water will gather around the screw holes resulting in non-compliance with IPX4!

If the control box is equipped with emergency stop, the stop button must be activated in cleaning situations in order to comply with IPX4. The battery pack BAJ1 or BAJL must NOT be removed in cleaning situations, doing so could result in non-compliance with IPX4.

If the CBJ Care is fitted with external charger option (DC power connector), the protection plug ex. 00918174 must always be inserted to ensure IP protection, if the port is not used.

IP rating only applies when the battery is connected to the control box.

CAUTION ! NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

ATTENTION ! NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISE



LINAK®
 WE IMPROVE YOUR LIFE
 DESIGNED IN DENMARK
 Item: CBJH13030100004
 Date: 2916.03.07
 W/O # 1234567-0001
 MADE BY LINAK A/S DENMARK

U In : 100 - 240 V~. 50-60 Hz, / I In : Max. 280 mA

IPX4

Op. : 10 %, Max. 2 min. / 18 min.

S.W. P.N.: 0078078 Ver. 1.0



The CBJ-Home is a specially developed solution for patient lifts. The complete system consists of a control box and a battery enclosed in a single elegant module.

The system is approved according to medical safety standards and contains a series of features ensuring a safe comfortable lift, e.g. the CBJ-Home is equipped with a soft-start function, electrical emergency lowering, emergency stop etc.

Usage:

- CBJ Home with internal charger: Nominal current draw max. 280 mA
 Power consumption (standby) max. 1.3 W
 Power consumption (charging) max. 12 W
- Duty cycle: Max. 10 % or 2 min. continuous use then 18 min. without use.
- Ambient temperature: + 5 °C to + 40 °C
- Storage temperature: - 10 °C to + 50 °C
- Approvals: IEC60601-1, ANSI/AAMI ES60601



Recommendations

- If emergency stop is pressed whilst charging, the batteries will not be charged.
- When charging, the CBJ Home will not be able to operate any actuators.
- For recharging the batteries, use charger CH01 (charger has to be ordered separately).
- Note: Always mount the CBJ Home with the channel sockets facing downwards
- The CBJ Home is not intended for use with "buffer" type actuators such as LA28 and LA32.
- The actuator must always be fitted with an exchangeable cable (mini-fit) socket.
- Actuators on channel 1 must always be with spline.
- The mains cables must always be ordered separately when ordering a CBJ with an internal charger.
- Use only original LINAK mains cables to ensure proper connection to internal charger.
- Always use fully charged batteries for learning mode procedures.
- Only an authorised LINAK service centre should change a battery in a CBJ Home. If a CBJ Home is opened and a battery is changed by unauthorised personnel, there may be a risk of malfunction
- When using the control box with emergency stop button, the stop button must be released before charging batteries or before the application is put into operation
- It cannot be guaranteed that the actuator will stop exactly at the weight that is stored as the motors in the actuators will use less current when run in. Though it will never reach the 1.5 times max. load as the norm states.
- Tolerance for current cut off is: +/-10 %
- The maximum cut-off value that can be registered (stored) is 8 Amp.
- If an actuator or CBJ Home is exchanged it will be necessary to reset the max. load to ensure the correct cut-off value for the new system as a whole.
- The registration function can only be activated by using a specially produced hand control (HB7X161-00). A standard hand control cannot activate the function.
- To operate the "Learn mode" function in External charger versions produced before February 2010 press the "R" button when "learning" (the lifting arm actuator will operate automatically). With all other versions (and future versions with external charger) both the "R" button and the "lifting arm" button need to be pressed.
- It is possible to use the "learn mode" function for channel 2: To operate the learn mode function for channel 2, press the "R" button and the "leg spread out" button at the same time. Run actuator with load and full cycle to record maximum current during a cycle.



Warning

- In order to avoid injury, the emergency stop should be activated in (all) transport situations.
- When "learn mode" is used, and channel 2 is pressed instead of channel 1, the CBJ Home will learn a new current limit of nearly 0 Amp. This will make it impossible to run the actuator with channel 2 until a new learn mode has been programmed.

Mounting information:

The CBJ-Home is mounted by means of 2 screws:
 Type ISO4762-M6x90-8.8 (not supplied by LINAK)

Spares information:

The cable lock kit consists of the following 3 items:

- 2 x screws
- 1 x blind plug for ch. 2 if not in use
- Cable Lock

All the cable lock items are included when ordering the kit, article number: 0898001-B.

The mounting screws for the control box and the charger must be tightened with a maximum torque of 1 Nm.

6. COBO (MEDLINE® CARELINE®)

LINAK®
 WE IMPROVE YOUR LIFE
 DESIGNED IN DENMARK
 Item: COBO0000EC12011
 Date: 2015.06.16
 W/O # 1234567-0001
 MADE BY LINAK A/S DENMARK

U In : 24 V=
 I In : Max. 500 mA
 IPX5
 Int. : 10 %, Max. 2 min. / 18 min.
 S.W. P/N : 0070074 Ver. 1



The COBO is an interface box specially developed for use together with the JUMBO battery pack (BAJ1/BAJ2 and BAJL Li-Ion) and the CU20 control unit. It is also possible to connect other 24V lead acid customer batteries or fixed power supply.

Safety:

The COBO has a monitoring circuit for the FET transistor. If the FET is damaged the CU20 will go into fatal error mode. In this case the COBO is defective and must be replaced.

Usage:

- COBO with internal charger: Nominal current draw max. 400 mA
 Power consumption (standby) max. 2.5 W
 Power consumption (charging) max. 19 W
- Compatibility:
 LINAK Batteries BAJ1, BAJ2 (24 V, 2.9 AH) or other 26 - 28 V power sources via customer battery connection.
 LINAK Lithium Ion battery (BAJL Li-Ion)
- Duty cycle: 10 % 2 minutes running and 18 minutes rest
- Operating temperature: +5 °C - +40 °C
- Storage temperature: -10 °C - +50 °C
- Relative humidity: 20 % to 80 %
- Atmospheric pressure: 700 to 1060 hPa
- Approvals: The COBO is EMC designed and approved in accordance with IEC60601-1, ANSI/AAMI ES606011 and CAN/CSA-22.2 No 60601-1

Functionality:

COBO with internal charger has a green and a yellow light.

Diode colour	Functionality
Green is on	COBO is connected to mains
Yellow is on	COBO is charging. The yellow LED is constantly on until batteries are fully charged.

The CU20 will shut down after 2 minutes to save power.

Accessories depending on V-permanent when the system is inactive will not work.

The CU20 controls whether or not activation should be allowed during charging.

Please note that the CU20 SW must ensure that there is no movement during charging when using COBO with internal charger.

Guidelines regarding emergency STOP and battery state re-calibration:

- The emergency stop button is not designed to be used as an on/off button.
- When using the emergency stop button, the system may shortly not be ready for use:
 - In normal situations waiting time for restarting the system is less than 5 seconds
 - In situations of shortly activating and then deactivating the emergency stop, the waiting time for battery state re-calibration can be up to 30 seconds.
- If a handset key is pressed during the re-calibration period, the control box may indicate with an audio signal, that the SW measures the battery condition. The user must wait until the re-calibration is finalized to be able to operate the system again.

Mounting

Special care should be taken when mounting the COBO.

As long as the COBO is mounted correctly then the COBO complies to IPX5 (IPX4 with internal charger).


If the COBO is mounted incorrectly then water will gather around the screw holes resulting in non-compliance with IPX5 (IPX4 with internal charger).

When using the control box with emergency stop, the stop button must be activated in cleaning situations in order to comply with IPX5.

The battery pack BAJ1 or BAJL must not be removed in cleaning situations, doing so could result in non-compliance with IPX5.

If the COBO is fitted with option EC (DC poser connector), the protection plug ex. 00918174 must always be inserted to ensure IP protection, if the port is not used.

IP rating only applies when the battery is connected to the control box.

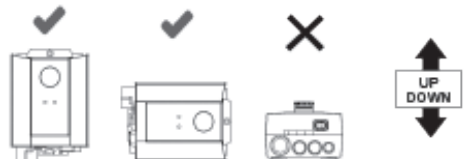

Recommendations

- Choose CU200XXXXX2XXXX if positioning/memory function is to be used.
- It is recommended that the COBO is serviced according to the relevant national norms for the applications in which it is used, however all electrical parts must be checked at least once a year.
- The COBO should be cleaned regularly, in order to maintain good hygiene. It is not allowed to use chemicals to clean the box.
- Only use COBO together with CU20.
- When specifying special CU20 software, be sure to set "Operation allowed during charging" to YES, if customer batteries or fixed power supply is used.

Warnings

- Pay attention to the polarity of the customer battery cable - red is positive voltage.
- In order to avoid injury, the emergency stop should be activated in (all) transport situations.
- If 24V lead acid customer batteries or fixed power supply is used, the supply source must comply with “Means Of Patient Protection” and “Means Of Operator Protection” in accordance with the Medical Safety Standard.
- If 24V lead acid customer batteries or fixed power supply are used, the customer must ensure that EMC values are kept in accordance with regulations.
- The CU20 power port/channel 7 cannot be used with COBO.
- Max 1 ACT can be connected to the COBO system.
- The COBO is not to be used in agricultural or maritime applications or be connected directly to a vehicle battery.

7. COBO20 (MEDLINE® CARELINE®)

LINAK®
WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK
Item: COBO2000IC11021
Date: 2016.01.09
WIO # 1234567 - 0001
MADE BY LINAK A/S DENMARK

U In : 90 - 240 V~ 50-60 Hz
I In : Max. 450 mA
IPX5

Int. :10 % Max. 2 min. / 18 min.

CAUTION: NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ



The COBO20 makes increased battery power available (compared to BA20). It is designed to be used with CU20 together with BAJ1 or BAJ2 (24 V, 2,9 AH). It is also possible to connect other 24 V lead acid or SLA (Sealed Lead Acid) battery types.

COBO20 with internal charger has a green and a yellow light. Green is ON when the COBO20 is connected to mains. Yellow is ON when charging. The yellow light shines constantly until batteries are fully charged.

Usage:

- The COBO20 is to be used with CU20 (instead of CP20) for applications that need a large battery capacity.
- Ambient temperatures: +5 °C to 40 °C
- Approvals: The COBO20 is EMC approved.
The COBO20 is designed in accordance with the following standards: 60601-1/ UL2601 and EN60601-1-4.
- When running on batteries CU20 will shut down after 2 minutes to save power.




Recommendations

- Choose CU200XXXX2XXXX if positioning/memory function is to be used.
- After activation of emergency stop it can take up to 10 seconds before the system can be used again.
- If own battery package is used, a10A fuse must be added.
- It is recommended that the COBO20 is serviced according to the relevant national norms for the applications in which it is used, however all electrical parts must be checked at least once a year.
- The COBO20 should be cleaned regularly, in order to maintain good hygiene. It is not allowed to use chemicals to clean the box.
- **Only** use COBO20 together with CU20.

Warning

In order to avoid injury, the emergency stop should be activated in (all) transport situations.

Mounting of COBO20

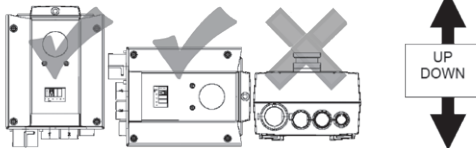

Special care should be taken when mounting the COBO20:

As long as the COBO is mounted correctly then the COBO20 complies to IPX5. If the COBO is mounted incorrectly then water will gather around the screw holes resulting in non-compliance with IPX5.

8. CH01 (MEDLINE® CARELINE®)

For charging the batteries of CB08-XA and all JUMBO control boxes, directly connected to the control box or via the hand control HB40A.

For charging of the batteries in battery box BAJ2 (JUMBO system) and CBJH.

9. CHJ2 (MEDLINE® CARELINE®)

CAUTION ! NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL

ATTENTION ! NE PAS OUVRIR PAR DU PERSONNEL NON AUTORISÉ



LINAK®
 WE IMPROVE YOUR LIFE
 DESIGNED IN DENMARK
 Item : CHJ20100130J021
 Date : 2016.01.09
 WIG # 123457-0001
 MADE BY LINAK A/S DENMARK

U In : 100 - 240 V~, 50/60Hz
 I In : Max. 400 mA Fuse: T1.25A 250V
 IPX5



120 690



The charger CHJ2 has been specially designed for use as a wall-charger for the JUMBO system.

The CHJ2 charger is a Switch Mode Power Supply (SMPS) version which makes charging of the batteries more efficient.

BAJ1 and BAJL (standard) battery pack have a reduced charging time.

Mains voltage from 100 V AC - 240 V AC (50/60 Hz) is possible on same charger.

The charger indicates whether the charger is connected to the mains (green LED) or whether the battery is being charged (yellow LED).

Medically approved.

Usage:

- Nominal current draw: Max. 400 mA
- Power consumption (standby): Max. 2.5 W
- Power consumption (charging): Max. 19 W
- Ambient temperatures: + 5 °C to + 40 °C
- Storage temperature: - 10 °C to + 50 °C
- Approvals: IEC60601-1, ANSI/AAMI ES60601 and CAN / CSA-22.2 No 60601-1

10. MBJ1/2/3 (MEDLINE® CARELINE®)

Depending on of what your JUMBO system consists you need to use one of the following three mounting brackets. IP protection is only valid when the JUMBO system is mounted vertically.

All three brackets include matching screws (IPX1, IPXX and IPX5 are delivered with stainless screws). The mounting screws for the control box, charger must be tightened with a maximum torque of 1 Nm.

		<p>MBJ1 For use together with CBJ1 or CBJ2 or CBJC, CHJ2 and BAJ1 or BAJ2. I. e. when combining control box, charger and battery pack MBJ1 has to be used.</p>
		<p>MBJ2 For use together with CBJ1 or CBJ2 or CBJC, and BAJ1 or BAJ2. I. e. when combining control box and battery pack MBJ2 has to be used.</p>
		<p>MBJ3 For use together with CHJ2 and BAJ1 or BAJ2. I. e. when combining charger and battery pack MBJ3 has to be used.</p>

8. Information on specific accessories

If the actuator is to be equipped with accessories, these must be specified when ordering the actuator from LINAK. There are the following possibilities:

1) TR6/TR7 External transformer

If the TR6 or TR7 fixed cable connection becomes damaged the transformer must be replaced.

1. BA18 (MEDLINE® CARELINE®)



The BA18 is exchangeable without opening the CB (BA18 is a separate box).

Ventilation of external batteries, BA18 - see **Figure 1**

Check at regular intervals that the ventilation stub is undamaged and intact. The construction of the ventilation stub permits battery gasses to get out, but it does not permit penetration of water.

Usage:

- Compatible with CB6, CB6S, CB7, CB9, CB12 / CB14 BT versions
- Ambient temperature: +5 °C to +40 °C

2. BA19 lead acid (MEDLINE® CARELINE®)



The BA19 lead acid backup battery has been developed specifically for use with the new control boxes CA30/CA40 and CO61. It is a compact and cost-efficient battery with built-in charger and cable management.

Usage:

- Compatibility: Battery backup for CA30/CA40 and CO61
 - Duty cycle: 10%, 2 minutes continuous use followed by 18 minutes not in use
 - Charging: Via integrated charger
 - Charging time: Approx. 6 hours
 - Recharging during storage: Battery recharging no later than 6 months after production date stated on the label
 - Operating temperature: + 5 °C to + 40 °C
 - Storage temperature: - 5 °C to + 40 °C
- The batteries must be stored in an applicable storage room to avoid direct sunlight
- Relative humidity: 20 % to 80 %, but non-condensing acc. to temp.
 - Atmospheric pressure: 700 to 1060 hPa
 - Service: Battery cells cannot be replaced as the battery cover cannot be closed properly afterwards
 - Approvals (pending): IEC60601-1:2005 3rd edition, ANSI/AAMI ES60601-1: 2005, 3rd edition CAN/CSA-22.2 No. 60601-1:2008

LED functionality:

What does the LED indicate?




LED	Indication of operation
Solid orange	Charging (battery not ready)
No LED light	Fully charged (battery ready)

Buzzer functionality:

The buzzer will make a warning when a button on the hand control is pressed and the battery capacity is low.


The buzzer can also be activated by the control box to signal other conditions. This must be specified in the control box software.

Mounting instructions:

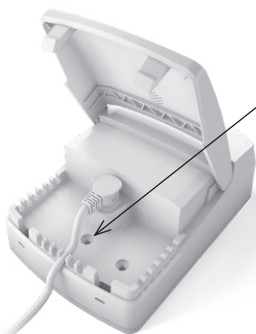

BA19 must be mounted with attachment screw and mounting bracket (see below) due to the battery weight.


Screw M4 countersunk torque 1.1 Nm +/- 0.1 Nm.

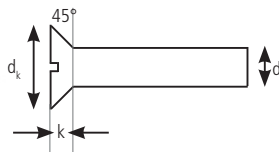

d	M4
d _k	8.4
k	2.7

According to ISO 2009

Mounting bracket (frame flat) - article no. 1015W1001:

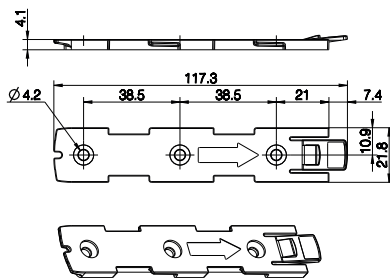

Recommendations:

- Do not exceed the storage temperature as it will shorten the product life and reduce performance.
- Allow the battery to settle to room temperature before use.
- Do not exceed the duty cycle 2/18 as it will shorten the life, reduce performance, and eventually activate overcurrent protection.
- BA19 is not intended for use in outdoor applications.
- If the battery is completely discharged, then recharge the battery before storage.

Safety feature

- BA19 contains overcurrent protection for safety and to protect itself from being damaged due to excessive use.
- When current protection is activated no power output will be available



Warnings

- Loss of power might happen due to activation of overcurrent protection. In this event, there may be no warning and the application may not be able to move when expected.
- Defective or damaged batteries may leak acid and adequate precautions must be taken during handling and transportation.
- Do not open the battery case as damage to the cell or circuitry may develop excessive heat.
- It is important for users to read the guidelines in the "User Manual Linear Actuators and Electronics".
- Do not short circuit the battery.
- Use the specified charger only.
- If disposed to fire, the battery may explode.

If product caution is not clearly visible on the final application at low light intensity, the above mentioned warnings must be integrated in the application manufacturer manual.





The application manufacturer must test the application and ensure that neither intended nor unintended use exceeds the battery specification. The application manufacturer must assure other means of movement, e.g. quick release or manual lowering in case of battery failure.



Compatibility:

The BA19 has a built-in charger and is therefore not able to operate with control boxes with charger. Be aware that the BA19 is only compatible with CA30, CA40 and C061.

3. BA21 Li-Ion (MEDLINE® CARELINE®)

LINAK Designed in Denmark DK - 6430 Nordborg Type: BA2116X11110 Item: BA21001-00 / 253908 Date: 2016.12.19 W/O # -00001 MADE BY LINAK A/S DENMARK	U In : Charge Max. 50VDC I In : Max. 500mA Li-Ion Battery S.W.: 0078086 Ver. 1.1	IPX6 Washable 25.9V 2.25Ah 58.28Wh Int.: 5 %, Max. 1 min/19 min.	    71NR19/66
	U In : Charge Max. 50VDC I In : Max. 500mA Li-Ion Battery S.W.: 0078086 Ver. 1.1	IPX6 Washable 25.9V 2.25Ah 58.28Wh Int.: 5 %, Max. 1 min/19 min.	

The BA21 Li-Ion back-up battery pack has been specially developed for use with the new control boxes COxx and CAxx, e.g. CO61 and CA40, etc. It is a low weight battery with built-in charger and high performance and safety.

Features and Options

- Weight: 0.7 kg
 Housing colour: Light grey (RAL 7035)
 Protection class: IPX6 Washable
 Packaging: Every battery is packed individually and is fitted with lithium caution (transportation requirement)
 Classification: Internally powered

Usage:

- Compatibility: Battery back-up for COxx and CAxx
- Duty cycle: 5 %, 1 minute continuous use followed by 19 minutes not in use
- Charging: With integrated charger in battery
- Charging time: Approx. 10 hours
- Recharging during storage: First recharge of the battery must be no later than 12 months after production date stated on the label. Hereafter the battery must be recharged at least every 12 months.
- Operating temperature: + 5 °C to + 30 °C
- Storage temperature: - 10 °C to + 40 °C (+ 10 °C to + 25 °C recommended)
The batteries must be stored in an applicable storage room without direct sunlight.
- Relative humidity: 20 % RH to 80 % RH, non-condensing
- Atmospheric pressure: 700 to 1060 hPa
- Approvals: IEC60601-1, ANSI/AAMI ES60601-1, CAN/CSA-22.2 No 60601-1, IEC62133, UL2054, UN38.3 (needed for transport of lithium batteries)

LED functionality:




LED	Indication of operation
Solid yellow	Charging
No LED light	Fully charged
Flashing yellow	Error during charging

Buzzer functionality:

The buzzer will make a warning when a button on the hand control is pressed and the battery capacity is low. The buzzer can also be activated by the control box to signal other conditions. This must be specified in the control box software.

Mounting instructions:

The Battery Pack BA21 can be mounted in several ways on the bed/the application, either separately or together with the control box CO61. It is however not allowed to mount the battery in vertical position with the mounting clip pointing upwards - see illustration :

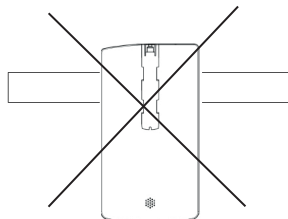





- Disconnect the mains cable to the application at the power outlet.
- Remove the power cable from the control box by inserting a screwdriver into the locking clip marked.




- Release the control box off the application by pressing the tab on the mounting clip.

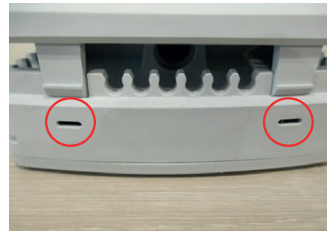


- Open the lid to the control box by releasing the locking clips.

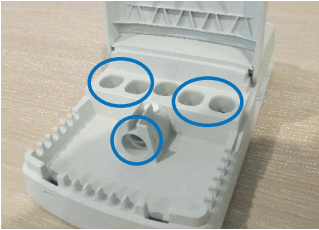


- If you disconnect any actuator cables or hand control cables, please take note of the correct ports.

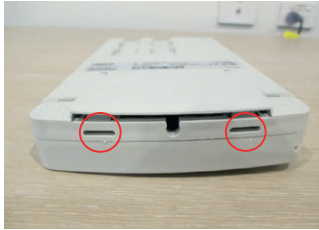


- Open the lid to the battery box by releasing the locking clips.

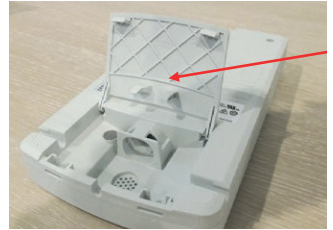

- Open the lid for access.

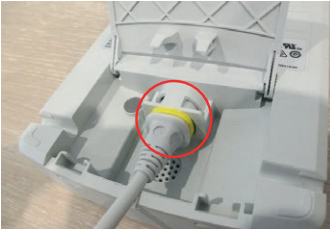

- Insert the battery connection cable supplied in the battery port.
- Ensure that it is fully connected.

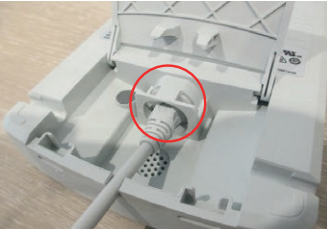


- Close the lid, ensuring that the locking clips engage fully when securing the lid.



- Connect the battery to the application, ensuring that the locking clip is fully engaged.




- Connect the battery to the application, ensuring that the locking clip is fully engaged.

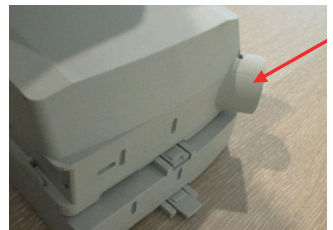



- Connect the control box to the battery, ensuring that the locking clip is fully engaged.



- If the clips are not engaged fully, the tab will be sticking out as indicated.

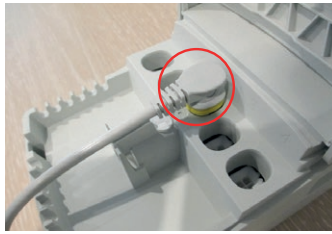

- Insert the battery connection cable into the battery port in the control box.
- Ensure that it is fully connected.

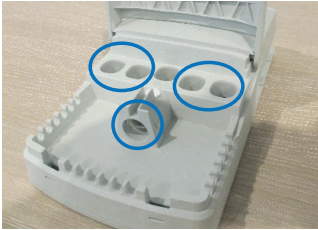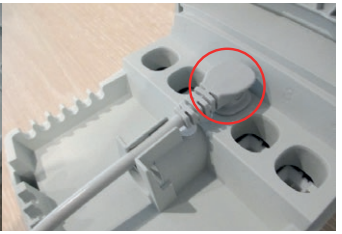

- Reconnect any actuator cables or hand control cables to the correct ports.



- Close the control box lid, ensuring that the locking clips fully engage.



- Reconnect the mains cable to the control box, ensuring that the locking clip engages.
- Turn on or reconnect the mains outlet.

Deep discharge protection

- The BA21 Li-Ion has a deep discharge protection to protect the battery life. The deep discharge protection is activated when the battery is discharged.
- Charge the battery to exit the deep discharge mode. Ensure that the battery is sufficiently charged before use.

If the battery is completely discharged, the charging will be started at a very small rate to protect the battery. In this case the yellow LED will be flashing. If the battery does not stop flashing and start charging normally within 12 hours (LED ON), the battery is defect and must be disposed according to disposal instructions.

If any and all of the lithium ion batteries built into LINAK products are found to be defective under warranty, LINAK will provide a new product to the OEM. LINAK explicitly disclaims all other remedies. LINAK shall not in any event be liable under any circumstances for any special indirect punitive incidental or consequential damages or losses arising from any incident related to the inherent risk of thermal runaway in the lithium ion cell and any use of LINAK products. Moreover, LINAK explicitly disclaims lost profits, failure to realise expected savings, any claim against our customer by a third party, or any other commercial or economic losses of any kind, even if LINAK has been advised of the possibility of such damages or losses.

Transportation

The lithium ion batteries must be packed and transported according to applicable regulations. Always ask your local transportation provider how to handle the transportation of lithium ion batteries.



Recommendations:

- Do not exceed the storage temperature as it will shorten the product lifetime and reduce performance.
- Allow the battery to settle to room temperature before use or charging.
- Do not exceed the duty cycle 1/19 as it will shorten the lifetime, reduce performance, and eventually activate over temperature protection.
- BA21 Li-Ion is neither intended for use in outdoor applications, pool environments nor other harsh environments.
- If the battery is completely discharged, then recharge the battery before storage.
- Only charge with applicable LINAK control boxes.

Safety feature

BA21 Li-Ion contains several mechanisms to protect itself from being damaged due to excessive use.

In case of overheating, the device will activate a thermal protection. No power output will be available until the temperature has returned to normal operating range. Overheating may occur by extensive use at high temperature or by exceeding the 1/19 duty cycle.

BA21 safety

LINAK Li-Ion batteries for medical use are designed and manufactured to be safe through the product life. LINAK has performed various tests of the batteries in normal use, abuse and failure situations to verify the design and production methods. These tests have not shown any unacceptable risks.

The batteries are UL-tested to have an independent organisation verify the safety of the design and to obtain a safety certificate. This means that UL regularly inspects the factory to check that standards are complied with.

UL has tested in accordance with the following standards:

UN38.3 Battery Transportation Safety

IEC62133 Battery Safety

UL2054 Standard for Household and Commercial Batteries



Compatibility:

The BA21 has a built-in charger which means that it cannot operate with control boxes with charger, e.g. CB6 and similar. The BA21 is compatible with COxx and CAxx control boxes, e.g. CO61 and CA40, etc.



Warnings:

Lithium ion batteries differ from the lead acid technology as they have a built-in deep discharge protection.

- Loss of power might happen due to the battery deep discharge protection and will only happen in case of continuous use of the battery despite warnings. In this event, there may be no warning and the application may not be able to move when expected.
- In the risk analysis for the final application, the manufacturer must take into consideration how to ensure alternative means to make movement, e.g. quick release or manual lowering.
- Do not open the battery housing as damaging the cell or circuitry may develop excessive heat.
- Lithium ion batteries that are defective, have been damaged or might produce excessive heat or fire are not allowed for transportation. (contact your local transportation provider)
- If product caution is not clearly visible at low light intensity, read the product label instructions symbol. A warning must be included in the application manufacturer's manual for the medical device.
- For safety reasons, please adhere to the indicated charging and operation temperature.
- In case the battery turns hot, disconnect it and evacuate the room and wait for 2 hours before taking further steps.
- Follow the mounting instructions in order to avoid exposing batteries to water.
- Recharge batteries every 12 months at a minimum.
- Dispose of batteries in accordance with local regulations.
- The application manufacturer must test the application and ensure that intentional and unintended operations do not exceed the battery specification limits. The application manufacturer must assure other means of movement, e.g. quick release or manual lowering..

DO NOT:

- heat or burn the battery
- short circuit the battery
- expose the battery to high impact
- crush or puncture the battery
- use batteries with signs of damage or corrosion
- charge or store the battery near combustible material
- expose the battery to water or other liquids

4. Care Communication System (CCS)

The Care Communication System (CCS) is a communication system primarily targeting nursing homes and the home care sector. CCS provides instant intelligent messages and direct voice communication from care bed to caregiver.

The system consists of three parts: a Care Communication Module (CCM) mounted on the bed, a Care Communication Web Portal (CCW) and a Care Communication App (CCA).

Intended use

The Care Communication System (CCS) is developed as a communication and information system with the purpose of increased efficiency for the health care sector, improved work conditions for caregivers and higher comfort and independency for the people in need of care.

The CCS is not a medical device, nor to be used for any medical purpose, such as diagnostic or therapeutic purposes. CCS is not an emergency call system, nor does the CCS replace the normal monitoring or care routines of patients or people in need of care.


Care Communication Module (CCM)

The CCM accommodates the transfer of intelligent sensor information from the care bed (i.e. WET detection (WET) or Out Of Bed detection (OOB)) to the caregiver by means of the CCW and CCA.

Furthermore, the CCM facilitates voice communication between a caregiver or relative and the person in care.

Usage and compatibility:

- Compatible: OpenBus™ control boxes
- Fire classification: UL-94 V2
- IP-classification: IPX4
- Temperature: Operation: + 5 °C to + 40 °C
Storage: - 10 °C to + 50 °C
- Relative humidity: 20 % to 90 % at + 30 °C
- Atmospheric pressure: 800 to 1060 hPa
- Meters above sea level: Max. 2000 meters
- Approvals: IEC 60601-1: 2005 (3rd edition)

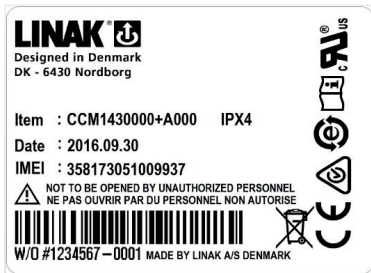

The CCM has an identity number called IMEI. The IMEI number is a 15 digit number that is unique for the CCM. The IMEI number is written on the CCM label and is used for registration of the CCM in the CCW.

Mounting instructions


The CCM is intended for fixed mounting to the bed within reach of the person in bed.

There are four cable plug position variants, A, B, C or D (see drawing below), making it possible to define if the CCM is to be mounted on the left or the right side of the bed in either vertical or horizontal position. Please see the design view and combination code for further information.

It is not possible to change the cable outlet after the CCM has been manufactured!

The bed mounting bracket is not supplied by LINAK, but must be designed and made by the bed manufacturer according to the dimensions below.

Maximum screw torque = 1.2 [Nm]

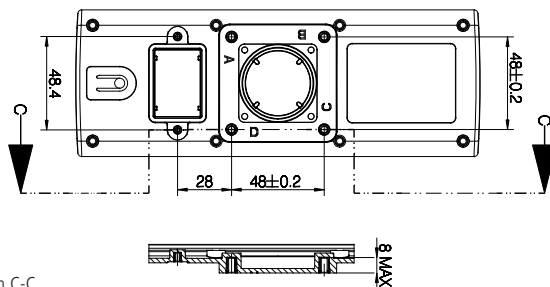

Section C-C

SIM card

Specifications and requirements:

- SIM card type to be used: Mini SIM also called 2FF (it is possible to use SIM adapter for other SIM types which are not delivered by LINAK).
- The SIM card must support voice communication and minimum 2 MB monthly data.
- The CCM needs to know the SIM card provider's Access Point Name (APN).
Most providers' APN is known; if, however, the provider is unknown, the APN will be added to the data base.
- The CCM must be unpowered when inserting/removing the SIM card!
- Before inserting the SIM card into the CCM, the PIN code must be deactivated, allowing the CCM to contact the server. Afterwards, the PIN code can be reactivated in the CCW to protect the exchangeable SIM card against misuse.

Handling:

The SIM card is to be inserted on the back of the CCM by opening the SIM card lid,
See the illustration below.

Maximum screw torque = 0.35 [Nm]

Be aware to insert the SIM card with the chip downwards.



Ensure that the SIM card lid is screwed on carefully,
maintaining the spacing washers on each screw.



Recommendations:

- The CCM is only intended for indoor use.
- The CCM is only working when connected to mains. There is no battery back-up.
See the usage section for mains indicator.
- To ensure the IP degree, always use locking rings and cables with O-rings.
- The CCM must be cleaned at regular intervals to remove dust and dirt and to ensure that neither loudspeaker nor microphone is blocked.
- During cleaning, cables must remain plugged in, correctly fitted with O-rings, and the SIM card lid must be closed to prevent water ingress.
- The CCM is resistant to the majority of cleaners and disinfectants used in the care sector. However, the detergents must comply with the following basic requirements:
 - no high alkaline or acid content (pH value 6-8)
 - no caustic content
- Do not spray disinfectants directly on to the microphone or speaker, but use a cloth for disinfection.
- The CCM is a handsfree communication device for fixed mounting and not intended for portable operation.
- We recommend to test the system before use to be sure that the selected SIM card works as expected..



Warnings

Be aware that the CCS is not intended as a life-supporting or emergency equipment. It is only intended as a communication and comfort system for people in need of care.

Care Communication Web (CCW)

The Care Communication Web (CCW) is the web user interface to the Care Communication System.



Recommendations:

- If the CCM is offline the data visible on the web portal will not be updated before the CCM is online.
- If service is needed from LINAK in relation to a specific person in care, the IMEI number found on the web portal is required. LINAK does not have access to personal data.
- Your CCW registration implies registration of your contact data, which will be stored as your personal profile.
- The password you have received authorises you, and only you, to use the CCW. You must not make your password available to others. All users must request their own password and username.
- You will not disclose confidential information that you may obtain through your use of the CCW to any third party without the prior consent of the person in care.
- Interruptions in the communication service may be caused by events of force majeure, by technical and other measures carried out in the CCS, the suppliers or network operator, or caused by events to improve the services, e.g. maintenance, repairs, system-related updates and expansions.



Warnings

- Be aware that the CCS is not intended as a life-supporting or emergency equipment. It is only intended as a communication and comfort system for people in need of care.

Care Communication App (CCA)

The Care Communication App (CCA) provides instant intelligent messages and direct voice communication from the care bed to the caregivers.



Recommendations:

- Remember that the smart phone data must be enabled in order to use the app.
- The password you have received, authorises you, and only you, to use the CCA. You must not make your password available to others. All users must request their own password and username.
- You will not disclose confidential information that you may obtain through your use of the CCA to any third party without the prior consent of the person in care.
- The ability to communicate to the CCS will require the CCA to have internet connection.
- You are required to keep your app updated to the latest version, if you want to keep using the CCA.

5. CS16 (TECHLINE®)



The CS16 electronic limit switch is connected between the LINAK® actuator and a non-LINAK power supply, where it cuts out the current to the actuator in end position of if an obstacle is encountered. The PCB contains a variable current limit setting and is available in different versions, depending on the actuator with which it is to be used.

The CS16 should be connected between the linear actuator and the power supply, where it will switch off the power when the actuator reaches end position or if the actuator is overloaded.

As the CS16 are open PCB's, they have to be installed in an encapsulation to prevent damage. (LINAK® offers one type of encapsulation for CS16).

Adjustment of CS16

The CS16 has a rotary potentiometer for adjusting the value of the cut-off current. To obtain the correct cut-off current, connect the CS16 and turn the potentiometer as far as it will go/anticlock wise to set the maximum cut-off current.

Then subject the actuator to the maximum load it will be exposed to in the application. At the same time turn the potentiometer clockwise, reducing the cut-off current, until the actuator stops (not in end position).

Then turn the potentiometer approx. quarter of a turn anti-clockwise and the system is ready for use.

As the CS16 is a open PCB's, it have to be installed in an encapsulation to prevent damage. (LINAK® offers one type of encapsulation).

6. DJB (MEDLINE® CARELINE®)



The DIN Junction Box is designed for use where there is a need for more than 1 or 2 controls to be connected to a control box.


The DIN Junction Box is constructed for connection of up to 4 controls with 8-pin DIN plugs. Furthermore, the box is constructed so that all channels for connection are placed on the same side of the box.

This gives the box a clean design and makes it easy to mount e.g. in a bed frame.

Usage:

- Possible for connection of LINAK control boxes: CB8, CB9/CB9P, CB12, CB14, CBJ and OpenBus™ control boxes e.g. CB20, CB6S, CB16.

7. EBC - Electronic Brake Control System (MEDLINE® CARELINE®)

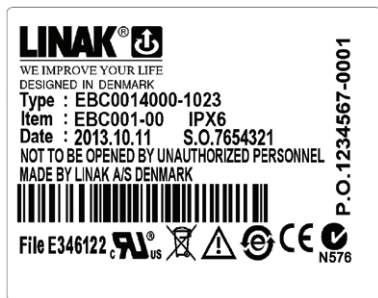

The EBC - Electronic Brake Control - is designed for use together with 3rd party castors and the control systems CB OpenBus™, including JUMBO Care. The EBC can replace traditional (mechanical) central locking systems for castors on healthcare beds or medical applications. This new system offers an increased freedom of application design as there is no need for a mechanical connection between the castors.

Usage:

- Operating temperature: 5 °C to 40 °C
- Storage temperature: - 10 °C to 50 °C
- Compatibility: CBJC, CB6 OBF, CB6 OBME, CB16 or CB20
- Fallshaw EBC system approved according to IEC60601-1:2005 3rd edition approved, ANSI / AAMI E560601-1:2005, 3rd edition, and CAN / CSA-22.2 No 60601-1:2008 Manner / TENTE approvals are pending



Recommendations

- The customer shall ensure proper connection between the EBC and the castors. Missing or interrupting some of the individual wires between the EBC and the castor may under some circumstances cause damage to the internal circuitry of the EBC.
- Always use locking mechanism and O-ring on cables.
- If any open sockets, they must be fitted with blind plugs to ensure IP degree.
- Removing or adding any OpenBus™ cables is not allowed when the control box is powered (hot plugging).

Before installation/service

- Stop the application.
- Remove battery power cable and OpenBus™ connection then possible castor connection.
- Service system.





After installation/service

- Reconnect castor connection, then OpenBus™ connection, battery power cable, then control box mains.



LINAK A/S only delivers the OpenBus™ system and is not responsible for any products other than LINAK products (i.e. products from 3rd party suppliers or the compliance of such products with the LINAK OpenBus™ system).

8. Massage Motor Medical (MEDLINE® CARELINE®)

	Item No. 00MD1000D3-A	  
	Prod. Date : W31 - 2013	
	Power Rate : Max. 24 W / Max. 0.5 A	
	Duty Cycle : 10%, Max. 30 min.	
	NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL	
P.O. 582720-2	MADE IN CHINA	

The massage motor can be added to all kinds of couches and tables, chairs or beds for treatment and examination. It enables comfort, relaxation and tension release for patients and clients. The massage motors are directly connected to the actuator port at the control box – no extra wiring at the application, simple and easy mounting.



Usage:

- Compatibility: CB6S OBMe, CB16 OBF, (CB20 pending) MJB006-0x to be used for OpenBus™ impulse drive
- Duty cycle: 10 %, 30 min. max.
- Operating temperature: + 5 °C to + 40 °C
- Storage temperature: - 10 °C to + 50 °C
- Relative humidity: 20 % to 80 % at +30°C
- Atmospheric pressure: 700 to 1060 hPa
- Approvals: Medical approvals to be determined

Mounting:

Massage motor on a plate

Mounting of massage motor by using brackets:

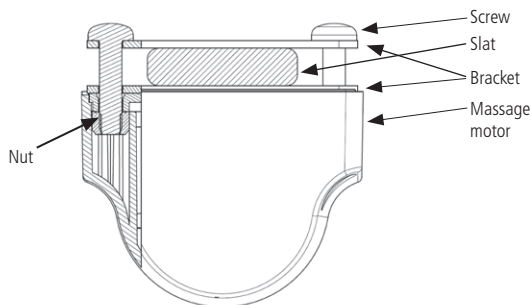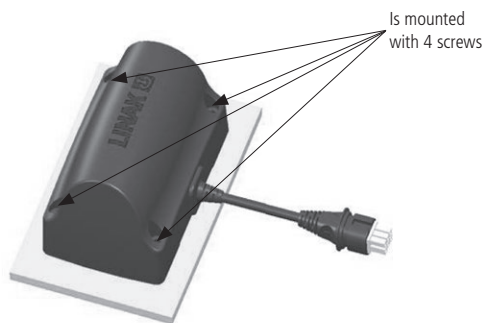

Mounting of the screw with max. torque 2 Nm

The massage unit is mounted with 4 x M6 roundheaded machine screws with flat underside. 15 to 20 mm long + the thickness of the bracket. Torque max. 2-3 Nm.

2 brackets must be used - one on each side of the slat.

9. MJB (MEDLINE® CARELINE®)

		
		WE IMPROVE YOUR LIFE DESIGNED IN DENMARK
		Item : MJB0005000-1023
		Date : 2016.01.11 IP16
		NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL NE PAS OUVRIER PAR DU PERSONNEL NON AUTORISE MADE BY LINAK A/S DENMARK
 	 W/O #1234567-0001	

The MJB (Modular Junction Box) is designed for use together with OpenBus™ control boxes.

The MJB makes it possible to connect multiple hand controls, attendant controls or it is also possible to use the MJB as a control unit for 3rd party products such as Out of Bed Detection, USB charger, Under Bed Light etc.



The MJB8 modular junction box is a central unit in the "Intelligent Care Bed", connecting various intelligent accessories, such as the Out Of Bed and WET detection, and sending notifications via a range of optional gateways to the user (i.e. caregiver)



Recommendations

- Always use locking mechanism and O-ring.
- Sockets that are not used must be fitted with blind plugs (Item P/N.: 0821008) to ensure IP-degree.
- When using the modular plug cable with an open end, the customer is responsible for maintaining the IP degree.
- When mounting, ensure that a screw torque limit of 1 Nm is not exceeded.
- 3rd party products must correspond to all requirements stated in the MJB8 Interface description for 3rd party products in order to avoid damage/malfunction.
- The Under Bed Light (Item P/N.: 0964135) must be mounted on the bed with metal screws in order to maintain ESD protection.

HOT PLUGGING

Removing or adding any OpenBus™ cables are not allowed when the control box is powered by mains supply!

Follow the below procedure:

1. Remove mains and wait 5 seconds
2. Mount or dismount the required cables

If this procedure is NOT followed it may result in a damaged OpenBus™ driver circuit.

The risk of a damaged circuit increases if the accessory has a high start current.

- Before the final functional production test, it is important that the system is repowered. This is to ensure, that all items have been detected on the OpenBus™.
- It is important to test the specified notifications in order to ensure that they work correctly before sending the system to the end user.
- The MJB8 is intended for mains operation only. The user must be informed that all MJB8 sensor notifications are disabled when the system is in battery mode.



Warnings

- LINAK only takes responsibility for LINAK products, not 3rd party products. Please pay attention to the "Patient Environment" Clause 3.79 – EN60601-1 3rd edition. It must be subject to the Risk Analysis. It is important to inform the customer about this.
- The MJB8 is not able to detect defective 3rd party products. We recommend the end user to make a regular test procedure in order to prevent hazardous situations for the user and failures to the system.
- The MJB8 and the attached accessories (i.e. Out Of Bed or WET detection) are not intended as life-supporting or emergency equipment. They are only intended to support notifications for communication and comfort purposes of people in need of care.

11. Simulator tool (MEDLINE® CARELINE®)



The Simulator Tool is a software that can be used to simulate hand control functions on OpenBus™ and analogue actuator systems. With the Simulator Tool, sequences of actuator movements can be programmed and repeated in order to test actuator systems.

USB to OpenBus™ gateway:

The gateway acts as an interface between the Simulator Tool Software and the OpenBus™ control box.

Together with the Simulator Tool Software, it can be used for test and demo purposes only.

It is not allowed to use the product as a control in any commercial application.


It has a USB B-input connection from the computer/laptop.

As output connection it has an RJ45 jack plug for connection to the control box.

For indication of power supply, the housing has one yellow LED indicator.

Normally, the gateway is powered through the OpenBus™ connection to the control box. External power supply is only necessary for the control boxes listed below.

For usage with OpenBus™ systems which have no permanent voltage (40 V) in the OpenBus™ connection, it is possible to connect the gateway to an external power supply. Therefore, the casing is equipped with a 2.5 x 6.6 mm power jack connector.

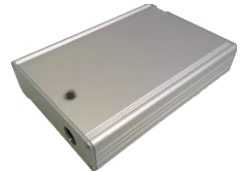

Power input: 20 to 40 V DC, minimum requirements 10 mA

Polarity:



Use LINAK battery charger CH01

Products that require external power:

- Jumbo Care
- COBO

Limitations:

Note that an OpenBus™ system that has powered down (8 V missing) cannot be woken up by the USB to OpenBus™ gateway!

Although the USB to OpenBus™ gateway sets a keep power bit, it might be neglected by some control boxes that will power down after a period of time. (Typically 2 minutes).

For cycle testing of such systems (typically battery equipped), that powers down during the cycle, a special control box software that has been stripped for the power down feature is needed.



Warnings:

- The LINAK Simulator Tool is to be used as a test tool or demo tool only. It is not allowed to use the software and accessories as a control in any commercial application.
- Potentially dangerous situations resulting from automated movement generated by the Simulator Tool Software must be considered and assessed before starting any action.
- Please note that over time the actual movement of an actuator within a fixed activation time may vary due to changed friction inside the actuator or especially when a battery-driven system loses power.
Close inspection and required adjustment is necessary to obtain the wanted movement over time and to avoid potentially dangerous situations.
- The generated test report itself is not a legal proof that a system has physically moved the actuators the number of times stated and cannot be used as such.
The time of activation listed in the report generated is not necessarily the same as the time of actuator movement. It just shows how long the function has been activated (equal to the time you have pressed the button on the hand control).
The actuator can be in end-of-stroke position or the function can be locked and therefore the actuator itself doesn't move.
It is recommended to use a physical counter or similar to verify the actual actuator movement.



Recommendations

- See to it that sufficient pauses are kept between activations, so that the duty cycle of each actuator type is respected.

12. SLS (MEDLINE® CARELINE® TECHLINE®)



LINAK has designed a switch that can be mounted in connection with the 24V DC actuators: LA12, LA22, LA28, LA28S, LA31, LA32, or LA34 and a control box on e.g. a bed frame.

The Safety Limit Switch (SLS). The SLS Switch is primarily used as a Limit Switch in systems consisting of a control box, LA28/28S and/or LA32.

As an example the SLS can be installed on the actuator cable where it disconnects the actuator in either inward or outward direction when activated. The SLS can also be used as a signal control directly connected to a control box.

13. SMPS30 (MEDLINE® CARELINE®)



Item: SMPS30-6U00009
 Date: 2016.01.09
 W/O # 1234567 - 0001
 ASSEMBLED IN CHINA

U In : 100-240 V~ 50/60Hz
 I In : Max. 5.1 A

Int. : 10%, Max. 2 min./18 min. IPX6

NE PAS OUVRIER PAR DU PERSONNEL NON AUTORISÉ
 NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL



4008838

The SMPS30 is a very powerful Switch Mode Power Supply typically used for Treatment or Examination Couches. The SMPS30 is an eco-friendly solution due to a low standby power consumption compared to traditional transformer solutions. The universal input voltage makes the SMPS30 adaptable to the worldwide market irrespective of the input voltage.

Usage:

 
- Compatibility: LA43 IC, LA44 IC
- Duty Cycle*: 10%, 2 minutes continuous use followed by 18 minutes not in use.
- Operating temperature: 5 °C to 40 °C
- Storage temperature: -10 °C to 50 °C
- Relative humidity: 20 % to 90 % @ 30 °C – not condensing
- Atmospheric pressure: 700 to 1060 hPa
- Altitude: max. 2000 metres above sea level
- Approvals: IEC60601-1:2005 3rd ed., ANSI / AAMI ES60601-1:2005, 3rd edition, CAN / CSA-22.2 No 60601-1:2008

* AT 10% DUTY CYCLE, MAX. OUTPUT POWER IS POSSIBLE AT AN AMBIENT TEMPERATURE OF 25°C


Safety concept:

DC power is only on the application when needed – when the hand control is activated.


The user is part of a safety concept with light indications showing:



 Connected to the mains
Green light when connected to the mains



 Power request
Yellow light at power request when the hand control is activated



Check of functionality
Yellow light is turned off when releasing a hand control button – **otherwise** the hand control or other components in the application are defective. If so, the user must call for service.



The SMPS30 is designed for placing on the floor, but it can also be mounted on the wall / application via the bottom base plate and 4 screws.

If the SMPS30 is mounted on the wall/application, please dismount the SMPS30 to get access to the cable locking mechanism on the mains cable.



Recommendations

Please note

The SMPS30 is only compatible with LA43 IC and the LA44 IC.
The SMPS30 is not suitable for outdoor applications

Before installation, re-installation or troubleshooting

- Stop the application
- Switch off the power supply and pull out the mains plug
- Relieve the application of any loads, which may be released during the work

Before start-up

- Make sure that the system has been installed as instructed in the User Manual
- System connection. The individual parts must be connected before the SMPS30 is connected to the mains.

During operation

- Ensure that the cables are not damaged
- Unplug the SMPS30 before moving the equipment

Device protection:

The SMPS30 contains several mechanisms to protect itself from being damaged due to excessive use.

- In case of overheating, the device will activate a thermal protection. No power output will be available until the temperature is back again within normal operating range.
- In case of exceeding the current limit / failure in the actuator, the device will activate an overload protection. Immediately after the situation has been remediated the power output will be available again.

Hot plugging

- It is not allowed to remove or to add the output cable as long as the SMPS is powered by mains.

Maintenance/cleaning

- The SMPS30 must be cleaned at regular intervals to remove dust and dirt and it must be inspected for mechanical damage, wear and breaks
 - It is not allowed to spray directly with a high-pressure cleaner on the device
 - Interconnecting cables must remain plugged in, correctly fitted with O-rings, during cleaning to prevent ingress of water
 - The SMPS30 is resistant to the majority of cleaners and disinfectants used in the hospital and nursing home sector.
- However, the detergents must comply with the following basic requirements
- They must not be highly alkaline or acidic (pH value 6-8)
 - They must not contain caustic agents

14. Under Bed Light (MEDLINE® CARELINE®)

LINAK

Designed in Denmark
DK - 6430 Nordborg

Type : UBL

Item : 0964135-C

Date : 2018.06.21 IPX6

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
NE PAS OUVRIER PAR DU PERSONNEL NON AUTORISE

MADE IN CHINA

W/O #1234567-0001

The Under Bed Light (UBL) can be mounted under the bed to provide a discrete guiding light when the patient leaves the bed during night. With an Under Bed Light it is easy to switch the light on and off by means of a handset or controlling it automatically with the Out of Bed functionality of the MJB8.

Usage:

- Operating temperature: + 5 °C to + 40 °C
- Storage temperature: - 10 °C to + 50 °C
- Atmospheric pressure: 700 to 1060hPa
- Approvals: IEC 60601-1, ANSI/AAMI ES60601-1, CAN/CSA-22.2 No 60601-1
- Connectivity: To be connected to MJB5 and MJB8



Recommendations

- The Under Bed Light (Item P/N.: 0964135) must be mounted on the bed with metal screws in order to maintain ESD protection.

15. Under Bed Light 2 (MEDLINE® CARELINE®)



The Under Bed Light (UBL2) provides a powerful light with a good distribution. The UBL2 is to be used for beds within hospitals, nursing homes and in homecare.

The Under Bed Light makes it easier for patients and other people in need of care to find their way at night in the dark to prevent falling accidents and to make them feel safe.

Usage:

- Operating temperature: + 5 °C to + 40 °C
- Storage temperature: - 10 °C to + 50 °C
- Relative humidity: 10 % to 80 % at + 30 °C not condensing
- Atmospheric pressure: 700 to 1060 hPa
- Approvals: EN62471, IEC60601-1



Recommendations and Precautions

- If 2 or more UBL2 products with dimming function are connected to the same application, it is recommended to have a factory reset key to be able to synchronize the dimming direction and light intensity if one of the UBL2s is replaced.
- Screw holes in application are needed for mounting. Inform the customer to use M4 Ø12 screws with Ø12 washer, when mounting the UBL2. Max. torque 2.5 Nm.
- Hot-plugging:
Removing or adding any OpenBus™ cables is not allowed when the CB is powered by mains supply!
If needed anyway, follow the below procedure:
 1. Remove mains and wait 5 sec.
 2. Mount or dismount the required cablesIf this procedure is NOT followed, it may result in a damaged OpenBus™ driver circuit. The risk of a damaged circuit increases if the accessory has a high start current (in rush current).
- There can be a risk of conflict with other OpenBus™ accessories, like HB, ACP, etc. when using the OpenBus™ UBL2, it is therefore recommended to make a system/bit overview.
- Always use locking mechanism and O-ring
- Sockets not used must be fitted with blind plugs to ensure IP degree
- The UBL2 must be mounted on a plane surface and casing must not be subject to impact or any kind of stress.

16. WET Sheet (MEDLINE® CARELINE®)




The WET Sheet is an OpenBus™ product and is a part of the WET Detection solution. The WET Detection solution consists of the WET Sheet, the MJB8 and a WET Sheet cable.



Recommendations

- The WET Sheet is a wearing part which is not covered by the standard LINAK warranty
The WET Sheet warranty is valid until the product has been put into use
- The WET Sheet is not a stand-alone article and must be included as part of an application e.g. the MJB8
- The WET Detection will not detect liquid without conductivity e.g. demineralised water
- The WET Sheet is not intended for outdoor use
- The WET Sheet is not a life-supporting unit
- Mechanical pressure on the WET Sheet can destroy the thread and connectors
- It is recommended to change the WET Sheet cable after 500 connections
- The sheet and connector must be placed properly to minimise the risk of bedsores
- The WET Sheet connector is not to be exposed to direct moisture etc. urine or sweat.
Place the connector away from the user, for instance on the side of the bed and downwards
- To ensure the right WET Detection functionality do not use layers on top of the WET Sheet, e.g. a turning sheet
- The recommended temperature for washing is 60 °C. Washing at 85 °C is acceptable, however, this will reduce the lifetime
- Tumble drying at medium heat, however, line drying is recommended
- The typical number of washing cycles is up to 50, but will depend on the washing conditions
- The WET Sheet should be washed before use and must be completely dry before it is connected

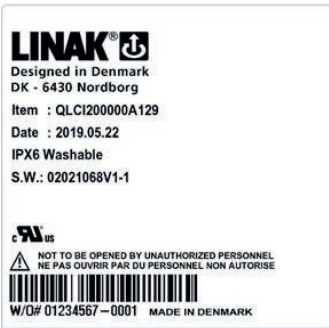

The Quad Load Cell Interface 2 (QLCI2) for the hospital and care segment is a scale system accessory with weighing capabilities and Out of Bed functionality.

The housing, makes the QLCI2 easy to mount by unique slide-on brackets and has an IPX6 Washable DURA™ ingress protection. The QLCI2 supports the LINAK OpenBus™ system offering a high level of customisation.



LINAK A/S delivers the OpenBus™ system only and is not responsible for any products (i.e. products from 3rd party suppliers) other than LINAK products or the compatibility of such products with the LINAK OpenBus™ system.

Usage

- Operation temperature: + 5 °C to + 40 °C
- Storage temperature: - 10 °C to + 50 °C
- Relative humidity: 20% to 80% - non-condensing
- Atmospheric pressure: 700 to 1060 hPa
- Approvals
 - IEC60601-1
 - ANSI/AAMI ES60601-1
 - CAN/CSA-22.2 No 60601-1
 - EN 45501 / OIML R76
 - EU type examination according to 2014/31/U
- Compatibility: All OpenBus control boxes
- Flammability rating: UL V0
- Latex free: Yes

Approvals

An OEM application approval according to EN45501

Typically the LINAK Weighing Solution will be classified as a “non-automatic weight” system.

If a LINAK LINAK Weighing Solution system is applied to a bed AND classified as such, the system MUST be “first-time” verified and sealed. The verification and sealing is typically carried out in one of two ways:

1. Verification by the Bed manufacturer himself.

It prescribes that the manufacturer is certified to carry out the verification.

The certification can be obtained through a Notified Body that performs auditing and approval of the procedures and the quality system in the manufacturing company.

An example from Denmark:

‘DS Certificering’ is the only Notified Body in Denmark, certified to carry out approvals of quality systems for manufacturing and calibration of ‘non-automatic weight’ systems. Within Europe it is however possible to use any other Notified Body from one of the EU member states.

When certified the Bed manufacturer obtains a type approval certificate to prove they are certified to manufacture and calibrate their own “non-automatic weight” system.

2. Verification by “first-time” verification Bodies.

In Denmark there are three Notified Bodies available for the verification and sealing of the application:

Force Technology, Dansk Kalibreringsteknik and Trescal.


Again any other Notified Body from an EU member state can be used.

“First-time” verification can take place at either the manufacturer or at the destination of use.

Requirements in both situations:

- The Type Approval Certificate number MUST be marked at the label on the weight unit.
- The Type Approval Certificate must be issued according to and including reference to the Directive for “non-automatic weights” 2009/23/EC (new non-modified version of 90/384/EEC).


Mounted on frame:

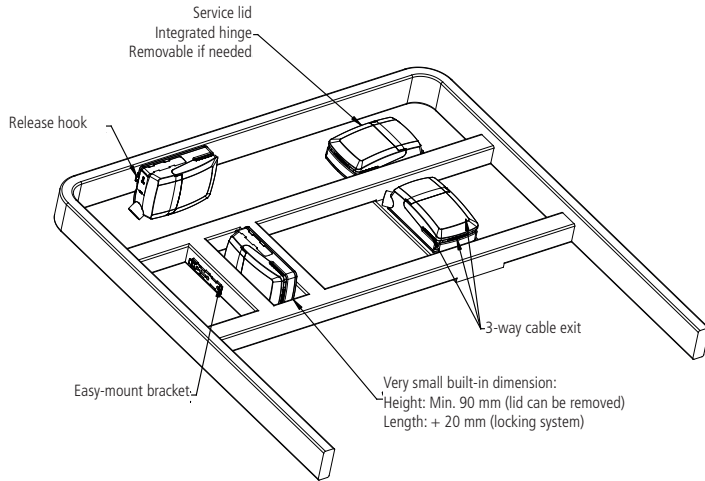

Drawing No.: 1013W4008

Mounting bracket (frame flat) -


Article No. 1015W1001:

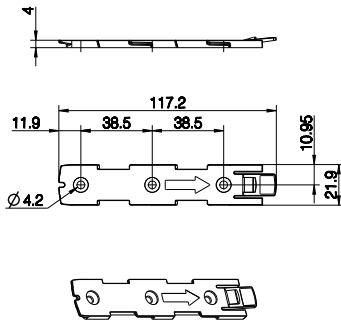

Drawing No.: 1015W4001

Mounting bracket (frame flat) w/M4 nuts -

Article No. 1015W9009:

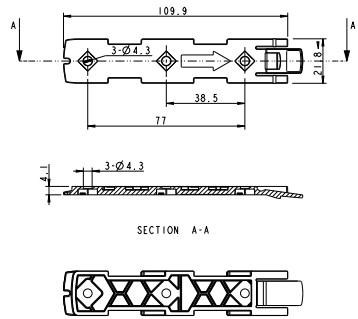

Drawing No.: 1015W1009

It is recommended to mount the QLC12 in a position that allows water to escape.

Recommended torque: 0.6 Nm +/-0.1

The bracket can be mounted to the bed frame or any other application by means of one of the following mounting procedures:

- 1) M6 nut to be placed in bracket and fixed with M6 bolt from the rear side.
- 2) M5 machine screw with flat washer to be fixed through bracket with nut on the rear side.
- 3) Self-tapping screw to be placed through bracket and onto the frame.

Mounting of cables and cable lock:

The QLC12 have a uniquely designed cable lid. The lid also works as an integrated cable lock when closed.

1. Mount load cell cable plugs in QLC12
2. Calibrate the system
3. Mount blind plug in calibration port
4. Close lid until lock snaps into place
5. Place calibration void label

To allow free access to the cables, the lid has a rest position when completely opened.

It is possible to remove the lid by lifting it a few degrees and pulling it away from the housing under tight mounting conditions.

1


Mount load cell cables

2

Calibrate the system

3

Mount blind plug

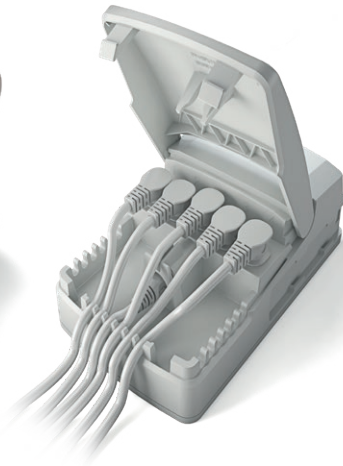

4

Close lid until it snaps

5

Place void label



Only 1 label is required. The label can be placed anywhere along the opening of the lid on the QLC12 box.



Warnings:

- In general the load cells are not living up to 2 MOPP, which is okay as long as all other parts comply with 2 MOPP and the load cells are electrically connected to the bed frame. This is to make the bed one electrical unit.



Recommendations

- Shielded load cell cables will be damaged if exposed to sharp bends. Therefore, if bended, cables should have a minimum bending radius of 60 mm.
- It is not allowed to bend load cell cables repeatedly, so mount cables on non-moving parts, like the bed frame.
- Load cell cables should not exceed a length of 2700 mm.
- In Europe weight systems are subject to important legal restrictions. The LINAK Weighing System system will be approved in accordance with EN45501.
The used load cells must be OIML approved as well (this is not included in the LINAK approval).
- Do not mount the QLCI2 directly on actuators.
- Load cell cables are not to be mated more than 40 times.

Calibration

- When calibrating, the application and components should be allowed to acclimate to ensure that they have the same temperature as the surrounding environment.
- For optimal performance the QLCI2 should be calibrated with a load similar to the in-use weight. For instance an application for lighter loads would benefit from having the bed calibrated with a lighter calibration load than an application for heavy use.
- The application will be most precise when calibrated with a load slightly above the in-use weight.
- Calibrate the application on a stable base.

9. Repair and disposal

Repair

Only an authorised LINAK® service centre should repair the LINAK actuator systems. Systems to be repaired under warranty must be sent to an authorised LINAK service centre.

In order to avoid the risk of malfunction, all actuator repairs must only be carried out by an authorised LINAK Service shop or repairers, as special tools and parts must be used.

If a system is opened by unauthorised personnel there is a risk that it may malfunction at a later date.

Disposal of LINAK systems or components

LINAK systems or components may be disposed of, possibly by dividing them into different waste groups for recycling or combustion.

We recommend that our product is disassembled as much as possible at the disposal and that you try to recycle it. LINAK systems or components should be disposed of in accordance with the environmental regulations applicable in the respective country.

FACTORIES

China

LINAK (Shenzhen) Actuator Systems, Ltd.
Phone: +86 755 8610 6656
Phone: +86 755 8610 6990
E-mail: sales@linak.cn
www.linak.cn

Denmark - Headquarters LINAK A/S - Group Headquarters

Phone: +45 73 15 15 15
Fax: +45 74 45 80 48
Fax (Sales): +45 73 15 16 13
E-mail: info@linak.com
www.linak.com

USA

LINAK U.S. Inc.

North and South American Headquarters
Phone: +1 502 253 5595
Fax: +1 502 253 5596
E-mail: info@linak-us.com
www.linak-us.com

SUBSIDIARIES

Australia

LINAK Australia Pty. Ltd
Phone: +61 3 8796 9777
Fax: +61 3 8796 9778
E-mail: sales@linak.com.au
www.linak.com.au

Austria

LINAK Repräsentanz - Österreich (Wien)
Phone: +43 (1) 890 7446
Fax: +43 (1) 890 744615
E-mail: info@linak.de
www.linak.at

Belgium

LINAK Actuator-Systems NV/SA
(Belgium & Luxembourg)
Phone: +32 (0)9 230 01 09
E-mail: beinfo@linak.be
www.linak.be - www.fr.linak.be

Brazil

LINAK DO BRASIL COMÉRCIO DE
ATUADORES LTDA.
Phone: +55 (11) 2832 - 7070
Fax: +55 (11) 2832 - 7060
E-mail: info@linak.com.br
www.linak.com.br

Canada

LINAK Canada Inc.
Phone: +1 502 253 5595
Fax: +1 416-255-7720
E-mail: info@linak.ca
www.linak-us.com

Czech Republic

LINAK C&S S.R.O.
Phone: +420581741814
Fax: +420581702452
E-mail: info@linak.cz
www.linak.cz

Denmark - International

LINAK International
Phone: +45 73 15 15 15
E-mail: info@linak.com
www.linak.com

Denmark - Sales

LINAK DANMARK A/S
Phone: +45 86 80 36 11
Fax: +45 86 82 90 51
E-mail: linak@linak-silkeborg.dk
www.linak.dk

Finland

LINAK OY
Phone: +358 10 841 8700
E-mail: linak@linak.fi
www.linak.fi

France

LINAK FRANCE E.U.R.L.
Phone: +33 (0) 2 41 36 34 34
Fax: +33 (0) 2 41 36 35 00
E-mail: linak@linak.fr
www.linak.fr

Germany

LINAK GmbH
Phone: +49 6043 9655 0
Fax: +49 6043 9655 60
E-mail: info@linak.de
www.linak.de

India

LINAK A/S India Liaison Office
Phone: +91 120 4531797
Fax: +91 120 4786428
E-mail: info@linak.in
www.linak.in

Ireland

LINAK UK Limited (Ireland)
Phone: +44 (0)121 544 2211
Fax: +44 (0)121 544 2552
+44 (0)796 855 1606 (UK Mobile)
+35 387 634 6554 (Republic Of
Ireland Mobile)

E-mail: sales@linak.co.uk
www.linak.ie

Italy

LINAK ITALIA S.r.l.
Phone: +39 02 48 46 33 66
Fax: +39 02 48 46 82 52
E-mail: info@linak.it
www.linak.it

Japan

LINAK K.K.
Phone: 81-45-533-0802
Fax: 81-45-533-0803
E-mail: linak@linak.jp
www.linak.jp

Malaysia

LINAK Actuators Sdn. Bhd.
Phone: +60 4 210 6500
Fax: +60 4 226 8901
E-mail: info@linak-asia.com
www.linak.my - www.linak.co.id
www.linak.pk - www.linak.ph

Netherlands

LINAK Actuator-Systems B.V.
Phone: +31 76 5 42 44 40 /
+31 76 2 00 11 10
E-mail: info@linak.nl
www.linak.nl

New Zealand

LINAK New Zealand Ltd
Phone: +64 9580 2071
Fax: +64 9580 2072
E-mail: nzsales@linak.com.au
www.linak.com.au

Norway

LINAK Norge AS
Phone: +47 32 82 90 90
E-mail: info@linak.no
www.linak.no

Poland

LINAK Polska
LINAK Danmark A/S (Spółka Akcyjna)
Phone: +48 22 295 09 70 /
+48 22 295 09 71
E-mail: info@linak.pl
www.linak.pl

Republic of Korea

LINAK Korea Ltd.
Phone: +82 2 6231 1515
Fax: +82 2 6231 1516
E-mail: info@linak.kr
www.linak.kr

Russia

LINAK LLC
Phone: +7 495 780 31 61
Fax: +7 495 687 14 26
E-mail: info@linak.ru
www.linak.ru

Spain

LINAK Actuadores, S.L.u
Phone: +34 93 588 27 77
Fax: +34 93 588 27 85
E-mail: esma@linak.es
www.linak.es

Sweden

LINAK Scandinavia AB
Phone: +46 8 732 20 00
Fax: +46 8 732 20 50
E-mail: info@linak.se
www.linak.se

Switzerland

LINAK AG
Phone: +41 43 388 31 88
Fax: +41 43 388 31 87
E-mail: info@linak.ch
www.linak.ch - www.fr.linak.ch
www.it.linak.ch

Taiwan

LINAK (Shenzhen) Actuator systems Ltd.
Taiwan Representative office
Phone: +886 2 27290068
Fax: +886 2 27290096
E-mail: sales@linak.com.tw
www.linak.tw

Turkey

LINAK İth. İhr. San. ve Tic. A.Ş.
Phone: +90 312 4726338
Fax: +90 312 4726635
E-mail: info@linak.com.tr
www.linak.com.tr

United Kingdom

LINAK UK Limited
Phone: +44 (0)121 544 2211
E-mail: sales@linak.co.uk
www.linak.co.uk

DISTRIBUTORS

Argentina

NOVOTEC ARGENTINA SRL
Phone: 011-4303-8989 / 8900
Fax: 011-4032-0184
E-mail: info@novotecargentina.com
www.novotecargentina.com

Colombia

MEM Ltda
Phone: +[57] (1) 334-7666
Fax: +[57] (1) 282-1684
E-mail: servicioalcliente@memltda.com.co
www.mem.net.co

India

Mechatronics Control Equipments India Pvt Ltd
Phone: +91-44-28558484, 85
E-mail: bala@mechatronicscontrol.com
www.mechatronicscontrol.com

Indonesia

PT. HIMALAYA EVEREST JAYA
Phone: +6 221 544 8956, +6 221 544 8965
Fax: +6 221 619 1925
Fax (Sales): +6 221 619 4658
E-mail: hejplastic-div@centrin.net.id
www.hej.co.id

Israel

NetivTech LTD
Phone: +972 55-2266-535
Fax: +972 2-9900-560
Email: info@NetivTech.com
www.netivtech.com

Russia

OOD FAM
Phone: +7 812 3319333
Fax: +7 812 3271454
E-mail: purchase@fam-drive.ru
www.fam-drive.ru

Singapore

Servo Dynamics Pte Ltd
Phone: +65 6844 0288
Fax: +65 6844 0070
E-mail: servodynamics@servo.com.sg

South Africa

Industrial Specialised Applications CC
Phone: +27 011 466 0346
E-mail: garth@isagroup.co.za
www.isaza.co.za

United Arab Emirates

Mechatronics
Phone: +971 4 267 4311
Fax: +971 4 267 4312
E-mail: mechtron@emirates.net.ae

Terms of use

The user is responsible for determining the suitability of LINAK products for specific application. LINAK takes great care in providing accurate and up-to-date information on its products.

However, due to continuous development in order to improve its products, LINAK products are subject to frequent modifications and changes without prior notice. Therefore, LINAK cannot guarantee the correct and actual status of said information on its products.

While LINAK uses its best efforts to fulfil orders, LINAK cannot, for the same reasons as mentioned above, guarantee the availability of any particular product. Therefore, LINAK reserves the right to discontinue the sale of any product displayed on its website or listed in its catalogues or other written material drawn up by LINAK.

All sales are subject to the Standard Terms of Sale and Delivery for LINAK. For a copy hereof, please contact LINAK.



WE IMPROVE YOUR LIFE